

**User's Manual and
Operating Instructions**

Electric Fan Heater

STANLEY®

Model: ST-02-240-E





DO NOT RETURN THIS UNIT TO THE STORE!

**If you are having problems with your new Stanley Heater,
Please call our Technical Support at:
0845 076 6158**

**Technicians are standing by to help you
Monday – Friday from 8am – 5:30pm.**

 
 
 
 
To expedite your call, please have your Model Number and Serial Number available.

NEVER LEAVE HEATER
UNATTENDED WHILE BURN-
ING, OR WHILE CONNECTED
TO A POWER SOURCE.

STANLEY[®]

Electric Fan Heater

ASSEMBLY

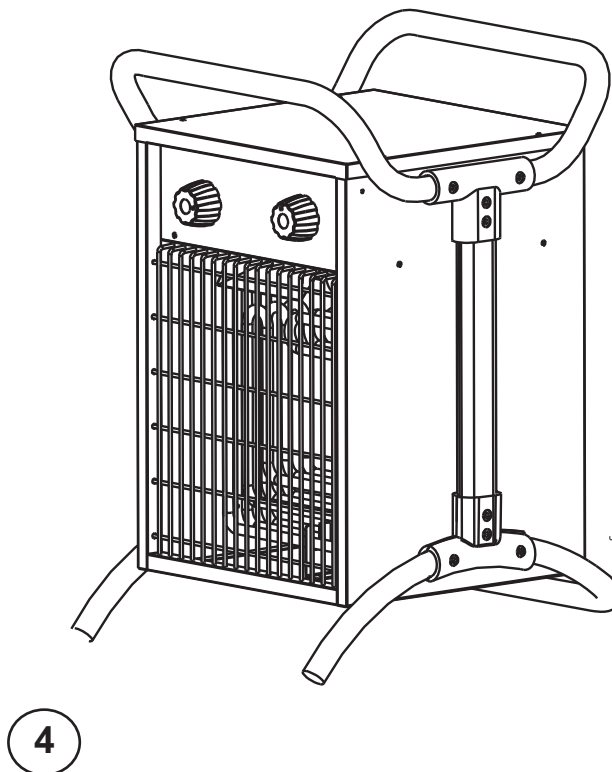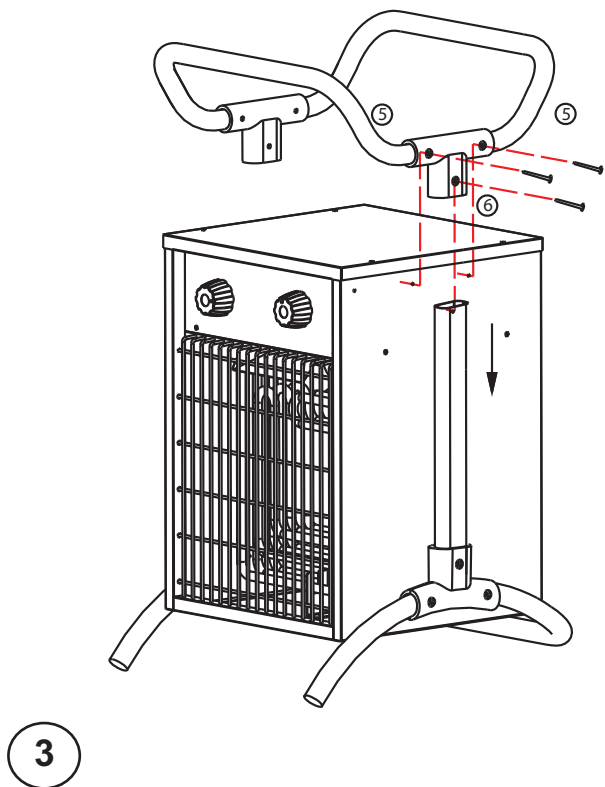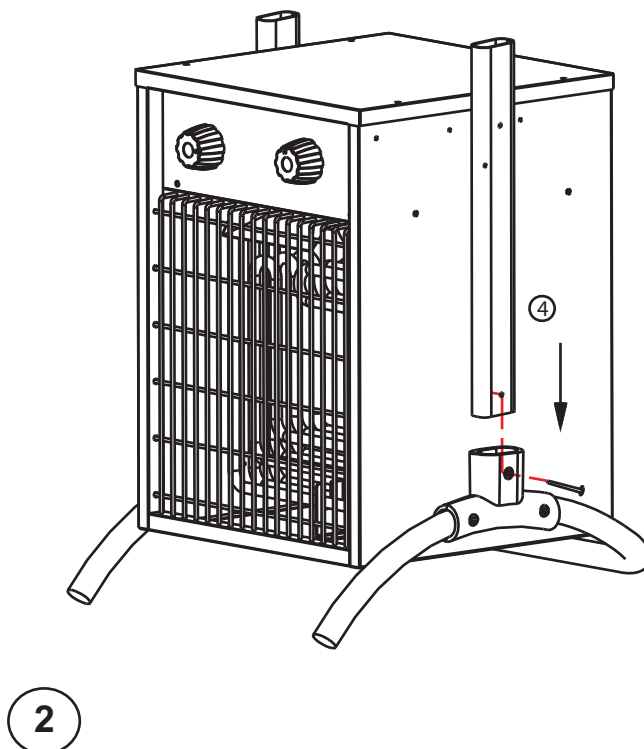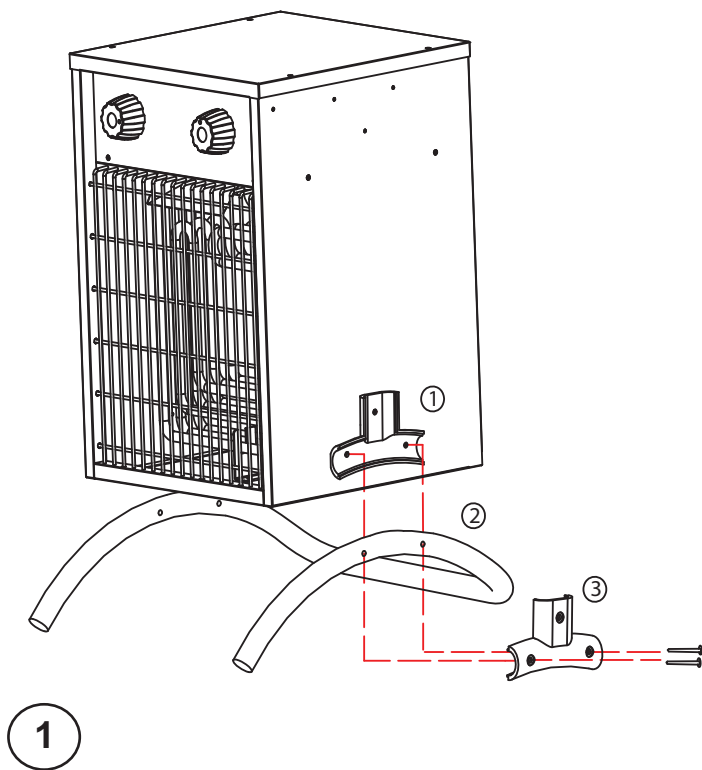

**NEVER LEAVE HEATER
UNATTENDED WHILE BURN-
ING, OR WHILE CONNECTED
TO A POWER SOURCE.**

STANLEY®

Electric Fan Heater

Introduction

To get the most out of your new fan heater, please read through these instructions and the attached safety regulations before use. Please also save the instructions in case you need to remind yourself of the fan heater's functions at a later date.

- Housing of steel plate and heat-resistant lacquer
- Supplied complete with cable and plug

Thermostat Instructions

- At first turn the thermostat to "Max" and let the heater operate with full power input. When the room temperature reaches the required value, turn the thermostat to the left until it switches off.
- The thermostat will then switch on and off automatically to control the room temperature according to the preset value and to keep the room temperature constant.
- When using the heater for the first time, you may notice a slight emission of smoke. This is quite normal and it stops after a short time. The heating element is made of steel and was coated with a layer of protective oil during production. The smoke is caused by the leftover oil as it is heated.

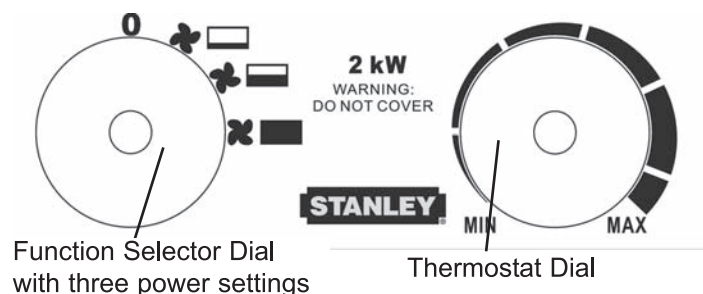 


Figure 1. Fan Heater Dials

Special Safety Regulations

**PLEASE READ THE FOLLOWING INSTRUCTIONS
CAREFULLY BEFORE USING THIS HEATING
APPLIANCE.**

▲ CAUTION Fire, electric shock, physical injury
and material damage hazards:

**To use the appliance, always follow the instructions
for assembly, use, and maintenance as well as usage
cautions:**

1. Carefully read and retain these instructions.
2. Before connecting the appliance, be sure that the available voltage matches that specified on the rating plate. you must not connect other appliances to the same electrical outlet as the fan heater. Keep the power cord away from exposure to the hot air outlet.
3. Do not use the appliance for other than its intended use. For domestic use only.
4. Place the appliance on a flat, stable, heat-resistant surface. Operating the product in any other position could cause a hazard.
5. There may be a trace of odor during the first few minutes of initial use. This is normal and will quickly disappear.
6. The heater is hot when in use. To avoid burns, do not let bare skin touch any hot surface. Use the carrying handle when moving the product.
7. Keep combustible material such as furniture, cushions, bedding, paper, clothes, curtains, etc. at least 1m away from the heater.
8. If an extension cable is used, it must be as short as possible and must always be fully extended. Please ensure you do not exceed the maximum rated operating wattage/load of the extension lead.
9. Do not cover or obstruct any of the heat outlet grilles or the air intake openings of the heater.
10. Do not use the heater in rooms where flammable liquids, solvents, varnishes, glues or flammable gases are stored or used.
11. Keep the heater clean. Do not allow any objects to enter any ventilation or exhaust opening as this may cause electric shock, fire, or damage to the heater.
12. Always unplug or disconnect the appliance from the mains power supply when not in use or cleaning it. Do not pull the cord to unplug the heater.
13. Do not immerse the cord, plug or any part of the appliance in water or any other liquid.
14. Do not attempt to repair, disassemble or modify the appliance. There are no user-serviceable parts inside.
15. The heater must not be located immediately below a socket-outlet.
16. The fan heater is not suitable for use outdoors in damp weather, in bathrooms or in other wet or damp environments.
17. Do not use this heater with a programmer, on/off timer, separate remote-control system or any other device that switches the heater on automatically, since a fire risk exists if the heater is covered or positioned incorrectly.

▲ WARNING

18.  To avoid overheating, do not cover the heater.

**NEVER LEAVE HEATER
UNATTENDED WHILE BURN-
ING, OR WHILE CONNECTED
TO A POWER SOURCE.**

STANLEY®

Electric Fan Heater

Special Safety Regulations (cont.)

▲WARNING

19. **DO NOT COVER THIS APPLIANCE WITH ITEMS SUCH AS CLOTHING, BLANKETS, OR PLACE NEXT TO CURTAINS OR NET/BLINDS.**
20. If the supply cable is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons in order to avoid a hazard.
21. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
22. Children should be supervised to ensure that they do not play with the appliance.

▲CAUTION

23. Use the appliance in places with good air circulation, do not position it near a wall or corner.
24. Do not dispose of electrical appliances as unsorted municipal waste; use separate collection facilities. Contact your local government for information regarding the collection systems available.

Assembly

1. Slide upper handle brackets onto front handle and align holes.
2. Slide rear handle into upper handle brackets and align holes.
3. Slide side support into upper bracket and align holes.
4. Attach upper brackets to heater using 3 screws per side.
5. Place heater on one side.
6. Align lower inner bracket with holes in heater and side support.
7. Attach align holes in Heater leg frame with lower inner bracket.
8. Align lower outer bracket holes with lower inner bracket, and attach using screws.
9. Place heater on opposite side, and repeat steps 6-8.

Operation

- Position the fan heater so that it stands upright on a firm surface and at a safe distance from wet environments and flammable objects.
- Connect the fan heater to the electrical power.
- Set the thermostat dial to the maximum temperature.
- The fan heater will switch on when the function selector dial is set to one of the three power settings.
- Once the room reaches the desired temperature, turn the thermostat dial back until heating element turns off. The fan will still continue to run. The thermostat is now set at your desired temperature, and the heater will continue to maintain a constant temperature.

Cleaning and Maintenance

- Before cleaning the appliance, disconnect it from the outlet and let it cool down.
- The enclosure is easy to get dirty. Wipe it often with a soft sponge. For very dirty parts, wipe with a sponge dipped in < 50°C water and mild detergent, then dry the heater enclosure with a clean cloth. Be careful not to let the water enter the inside of the appliance
- In order to protect the enclosure, don't splash water onto the heater, and never use a solvent like gasoline, isoamyl acetate, toluene, etc. to clean the heater.
- Clean the coupler, dry and pack it in a plastic bag.
- When you store the heater, let it cool down first and, keep it dry. Then cover it with a plastic bag, put it in the packing box and store it in a dry, ventilated place.

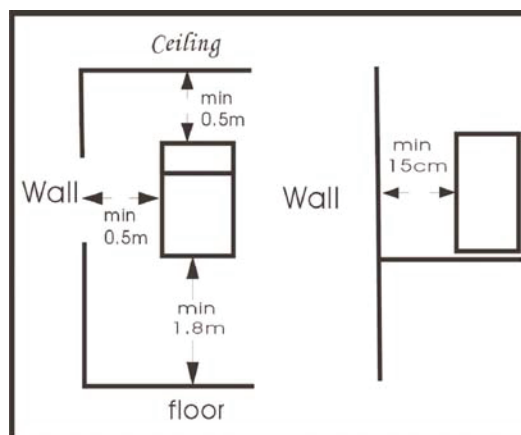 


Figure 2. Installing your Heater

Technical Specifications

Model	Voltage / Hz	Power Rating/W	Settings	Temp	Fuse requirement	Dims	Weight
ST-02-240-E	220-240V~50Hz	2,000	4 (OFF, 650, 1300W, 2000W)	continuously adjustable 0-85°C	13A	34x24.5x34 cm	4.8 kg

Specifications subject to change without notice

STANLEY and **STANLEY** are trademarks of Stanley Black & Decker, Inc or its affiliates and are used under license by Pinnacle Products International, Inc - www.pinnacleint.com

Plug Replacement

This appliance is supplied with a BS1363 3 pin plug fitted with a 13 Amp fuse. Should the fuse require replacement, it must be replaced with a fuse rated at 13 Amp and approved to BS1362. In the event the mains plug has to be removed/replaced for any reason, please note:

IMPORTANT: The wires in the mains lead are coloured in accordance with the following code:

Blue – Neutral

Brown – Live

Green/Yellow – Earth

As the colours of the wires in the mains lead of this appliance may not correspond with

the coloured markings identifying the terminals in your plug, proceed as follows.

 
The blue wire must be connected to the terminal marked with an N or coloured black.

The brown wire must be connected to the terminal marked with an L or coloured red.

The green/yellow wire must be connected to the earthing terminal which is marked with an E or with the earth symbol .

WARNING: Never connect live or neutral wires to the earth terminal of the plug.

NOTE: If a moulded plug is fitted and has to be removed take great care in disposing of the plug and severed cable, it must be destroyed to prevent engaging into a socket.

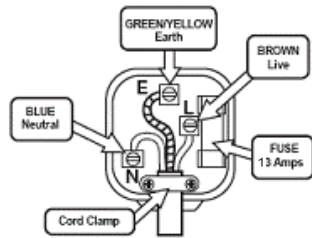

Recycling



This symbol is known as the 'Crossed-out Wheelie Bin Symbol'. When this symbol is marked on a product or battery, it means that it should not be disposed of with your general household waste.

Some chemicals contained within electrical/electronic products or batteries can be harmful to health and the environment. Only dispose of electrical/electronic/battery items in separate collection schemes, which cater for the recovery and recycling of materials contained within. Your co-operation is vital to ensure the success of these schemes and for the protection of the environment.