 




### Footpump operating instructions

1. Unclip footplate from base of unit
2. Unwind air hose
3. Place pump on a stable flat surface and connect the air hose to the tyre valve or adaptor ensuring the thumb lock is firmly attached.

Place your foot on footplate and compress the pedal to inflate tyre or inflatable



4. After use to store pump depress the footplate and clip into the base.

Ring Automotive Limited,  
Gelderd Road, Leeds, England LS12 6NA  
Tel +44 (0)113 213 2000  
Fax +(0)113 231 0266  
E-mail: [autosales@ringautomotive.co.uk](mailto:autosales@ringautomotive.co.uk)  
Web: [www.ringautomotive.co.uk](http://www.ringautomotive.co.uk)