

Pack Contents

Ref	Desc.	Illustration	Qty
A	Radiator Horizontal Use		1
B	Air Vent		1
C	Blanking Plug		1

Ref	Desc.	Illustration	Qty
D	Galvanized Brackets.		4
E	Anti Vibration clips		8

Notes:

- Please read the installation instructions thoroughly before mounting the radiator
- Please choose appropriate wall fixings for the wall surface you are mounting the radiator on
- All dimensions are in millimetres

Recommendations

- For larger radiators it is recommended that for the safe movement and mounting of your radiator, two people are used to lift and support
- Ensure the installation and commissioning of the radiator is carried out in accordance with BS EN 7593:2006
- Your radiator carries a 10 year guarantee, failure to use a corrosion inhibitor in your heating system will invalidate the manufacturers warranty

Helpline : 01633 657222

Fax : 01633 657224

Open 8:00 to 17:00 Monday to Friday

Assembly Instructions

Horizontal Panel Radiator

1 Measuring up. Each horizontal radiator has mounting points as detailed below.

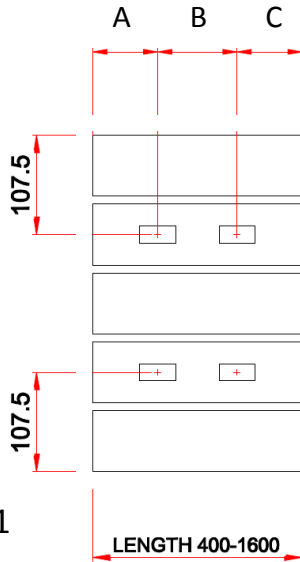



FIG 1

2 Using the table, identify your radiators bracket horizontal centres

Length	A	B	C
600	150	300	150
800	140	520	140
1000	140	720	140
1200	150	900	150
1400	150	1100	150

FIG 2


3 Using the bracket centre points in Fig 1 & Fig 2 and bracket placement in Fig 3, draw pencil marks at 1,2,3&4. Then align brackets and draw mounting points

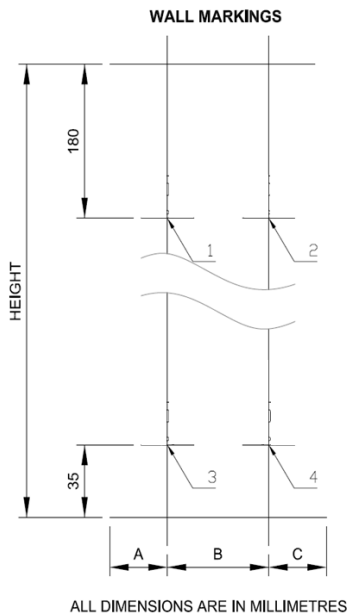

ALL DIMENSIONS ARE IN MILLIMETRES


4 Then align brackets and draw position for wall plugs and screws (both bracket types demonstrated)

Step 1

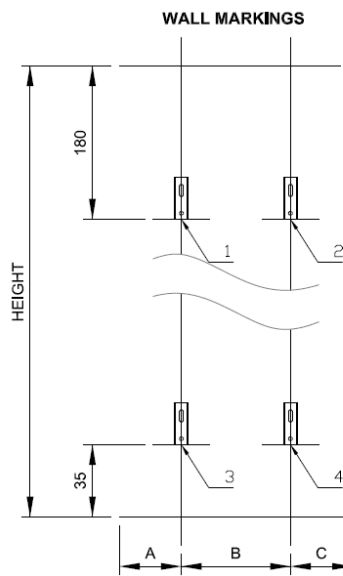

ALL DIMENSIONS ARE IN MILLIMETRES

Step 2

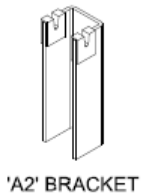

5 Drill the necessary holes in the wall and secure brackets.

6 Fit air vent and blanking plug

7 Fit radiator to wall. Plumb in the radiator and purge the air from the radiator using the air vent supplied