




Safety & Operating Instructions

CONVECTOR HEATER

CH-2001B STAND

These instructions are for your safety. Please read through them thoroughly before use and retain for future reference.

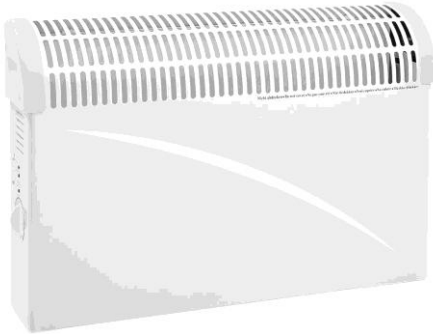Parts Supplied

Ref	Description	Illustration	Qty
A	Main body		1
B	Feet		2
C	Screw for feet		4

Tools Required (not supplied)

 
Cross Head Screwdriver

Before You Start


- Check the pack and make sure you have all of the parts listed above.
- This appliance is designed for use as a supplementary heat source, it is not intended to be the main source of heat.

Assembly Instruction

Before using the heater, the feet (supplied separately in the carton), must be fitted to the base of the heater. These are to be attached to the base of the heater using the 4 small self-tapping screws provided, taking care to ensure that they are located correctly in the bottom ends of the heater side mouldings.

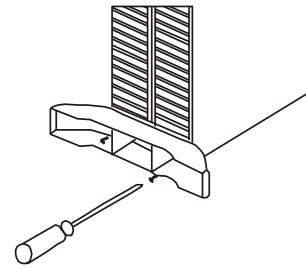

Operating Instructions

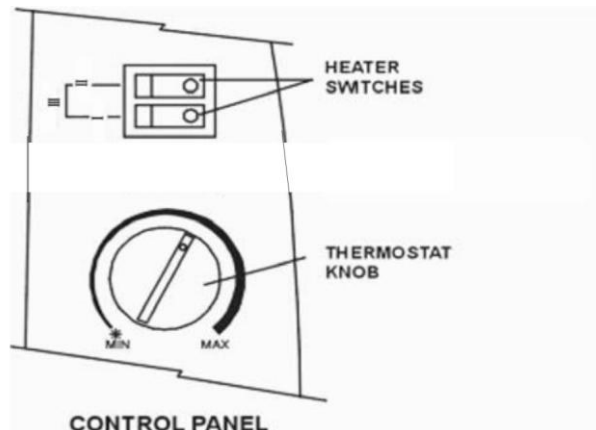 

1. Place the product in an upright position on a flat, steady, stable, heat-resistant surface. Make sure there is nothing flammable or heat sensitive within 1 metre (40 inches). Operating the product in any other position could cause a hazard.
 2. Insert the plug into a suitable wall outlet after turning the thermostat switch counter-clockwise to the minimum position and setting the Heater Switches and Fan Switch to "OFF". The heater is suitable for operation on an electricity supply having the same voltage as that show on it's rating label.
 3. Turn on the Heater Switch to "I" (750W) for low heating. Turn on the Heater Switch "II" (1250W) for medium heating. Turn on both switches for high heating (2000W).
 4. Turn the thermostat knob clockwise to maximum position. When the room temperature has risen to a comfortable level, slowly turn thermostat counter-clockwise until you hear a click. The thermostat will now attempt to maintain the room at this temperature by automatically cycling on-and-off.
 5. To adjust the room temperature, turn the thermostat clockwise to raise the temperature, or counter-clockwise to lower it.
 6. To turn the heater off, switch off both "750W" and "1250W" switches.
- (Note: There may be trace of odour during the first few minutes of initial use. This is normal and will quickly disappear.)

Safety Control

CAUTION: This product has two levels of overheat protection. Initial protection is afforded by a re-settable overheat switch which, once the cause of the overheating has been removed AND the heater has cooled down, will allow continued use. The secondary protection is a thermal fuse which CANNOT be reset by the user.

In the event that the heater suffers an overheat – and shuts down – immediately disconnect the power by switching the electricity OFF at the plug and remove the plug from its socket. Remove any objects that may be causing the overheating, set the power switch to “0” and turn the thermostat dial fully anticlockwise and leave the heater to cool down fully.

Once completely cool switch the heater back on as above. If it fails to work it could be that the secondary overheat protection device has operated – this overheat protection system cannot be reset by the consumer. Do not open this product. There are no user-serviceable parts inside.

Safety Warnings

1. Do not use the heater unless the feet are correctly attached.
2. **WARNING** : In order to avoid overheating, do not cover the heater.
3. Only connect the heater to a suitable wall socket outlet with a mains voltage as specified on the rating plate.
4. Keep combustible material such as furniture, cushions, bedding, paper, clothes, curtains etc. at least 1m away from the heater.
5. Do not use the heater in areas where flammable liquids are stored or where flammable fumes may be present.
6. Always unplug the heater when not in use or when moving or cleaning it. Do not pull the cord to unplug the heater.
7. Do not locate the heater below a socket-outlet.
8. Do not use this heater in the immediate surroundings of a bath, a shower or a swimming pool.
9. Do not cover or obstruct any of the heat outlet grilles or the air intake openings of the heater.
10. Do not use the heater in the rooms with explosive gas or while using inflammable solvents, varnish or glue.
11. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
12. Keep the heater clean. Do not allow any objects to enter any ventilation or exhaust opening as this may cause electric shock, or fire or damage to the heater.
13. Do not use heater outdoors.
14. This product is not a toy. It should not be used by children or infirm persons without supervision.
15. Do not immerse cord, plug or any part of the appliance in water or any other liquid.
16. Do not use the appliance for other than its intended use. This appliance is intended for household use only.
17. Do not attempt to repair, disassemble or modify the appliance. There are no user-serviceable parts inside.
18. Do not place the heater on carpets having a very deep pile.
19. Do not use the heater with a timer or programmer or any other device which facilitates unattended switch-on.
20. The heater is hot when in use. To avoid burns and personal injury, do not let bare skin touch hot surfaces. Use the carrying handles when moving the product.
21. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

22. Children should be supervised to ensure that they do not play with the appliance.

Plug Replacement

- This appliance is supplied with a BS1363 3 pin plug fitted with a 13 Amp fuse. Should the fuse require replacement, it must be replaced with a fuse rated at 13 Amp and approved to BS1362.
- In the event the mains plug has to be removed/replaced for any reason, please note:

The wires in the mains lead on this appliance are coloured in accordance with the following code:

Green and Yellow – Earth

 
Blue – Neutral

Brown – Live

THIS APPLIANCE MUST BE EARTHED

As the colours may not correspond with the markings identifying the terminals in your plug proceed as follows.

- The green and yellow wire must be connected to the terminal in the plug, which is marked with the letter E or with the earth symbol or coloured green and yellow.
- The blue wire must be connected to the terminal marked N or coloured black.
- The brown wire must be connected to the terminal marked L or coloured red.

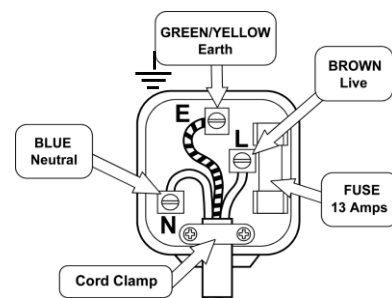

Important - any cut off plug should be disposed of safely to prevent hazard. There is a danger of electric shock if a cut off plug is inserted into a socket outlet.

Care and Cleaning

1. Always ensure the product's housing is intact and completely assembled before each use.
2. Clean the exterior surface of the product by wiping it with a soft, damp cloth.
CAUTION: Allow the product to completely cool before handling or cleaning it. Ensure the product is in the "0" (OFF) position and the power cord is unplugged from the electrical outlet before cleaning the product.
3. Do not allow water or other liquids to run into the interior of the product, as this could create a fire and/or electrical hazard.
4. Do not use any abrasive cleaners or solvents, as product damage will occur.
5. Store the product in a clean, dry place when it is not in use.

Conformity with Directives

- Conforms with relevant European Directives.



Environmental Protection

- Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.



SFD Ltd BA22 8RT