

AQUALISA

Visage™

Digital

Remote control

Installation guide





Visage Digital remote control
VSD.B3.DS.14

Components



Literature not shown

Important information

The Visage Digital remote control is a remote button which provides a secondary method of 'Start/stop' for Visage Digital shower systems. When used with the Visage Digital diverter system, the remote can operate each outlet by pushing and holding the 'Start/stop' button for a few seconds as required. The remote control may be sited inside the showering area, as long as it is not subjected to continuous spray, or it can be sited outside the showering area – up to 10 metres from the Digital processor.

The Visage Digital remote control is not suitable for use with any other Aqualisa Digital product range.

THIS PRODUCT MUST BE INSTALLED BY A COMPETENT PERSON IN ACCORDANCE WITH ALL RELEVANT CURRENT WATER AND ELECTRICAL SUPPLY REGULATIONS.

ALL SHOWERS REQUIRING AN ELECTRICAL CONNECTION MUST BE INSTALLED BY A QUALIFIED PERSON FOLLOWING THE LATEST REVISION OF BS7671 (WIRING REGULATIONS) AND CERTIFIED TO CURRENT BUILDING REGULATIONS.

This product is suitable for domestic use only.

This product is supplied complete with a 2 year guarantee.

Installation instructions

Visage Digital remote control




In addition to the guide below it is essential that the written instructions below are read and understood and that you have all the necessary components (shown overleaf) before commencing installation. Failure to install the product in accordance with these instructions may adversely affect the warranty terms and conditions. Do not undertake any part of this installation unless you are competent to do so. Prior to starting, ensure that you are familiar with the necessary plumbing regulations required to install the product correctly and safely.

THE DIGITAL PROCESSOR MUST BE ISOLATED FROM THE MAINS POWER SUPPLY PRIOR TO INSTALLING THE VISAGE DIGITAL REMOTE CONTROL.

Single outlet



IF FITTING THIS PRODUCT WITH A VISAGE DIGITAL SINGLE OUTLET SHOWER SYSTEM, PLEASE FOLLOW THE FITTING INSTRUCTIONS BELOW.

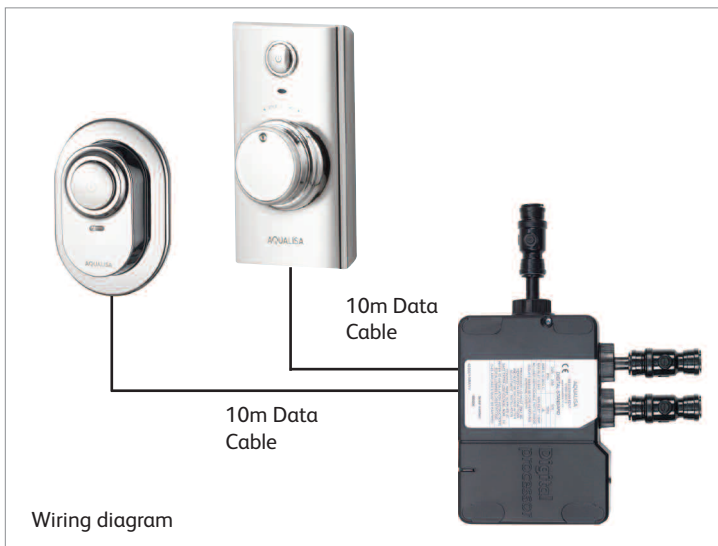

1

Using the back plate as a template, mark the position of the fixing screws and a $\text{\O}16\text{mm}$ hole for the data cable entry point. The cable entry point should be made in the top right hand corner of the back plate recess, to ensure the two holes are kept separate.



2

Prepare suitable wall fixings to accommodate no. 8 non-rusting countersunk head screws of a suitable length (not included).

3

Prepare a suitable route and install the 10m low voltage data cable leaving a working end of at least 70mm including the connector plug. The end of the data cable closest to the processor should terminate at a maximum of 500mm from the processor to allow for connection to the data cable connection block.



!

DATA CABLES MUST BE PROTECTED BY SUITABLE SHEATHING OR CONDUIT IN THE EVENT OF SERVICING AND MAINTENANCE.

4

Pull the data cable through before securing the back plate to the wall using suitable no. 8 non-rusting countersunk screws.



5

Push the data cable plug into the back of the button fully home to ensure a water tight seal making sure the seal is no longer visible.



6

Locate the slot at the bottom of the button assembly, onto the locating peg at the bottom of the back plate assembly, and offer the button into position.



7

Secure the button to the back plate by carefully but firmly pushing the button assembly onto the locking clip at the top of the back plate.



!

To release the button, insert a small flat bladed screw driver into the small slot at the top of the button assembly, to release the locking clip, taking care to avoid damaging the plated surface. Carefully lift the button out and up off of the back plate bottom locating peg.



8

Apply a thin bead of mastic to the groove at the rear of the wall plate.



9

Place the wall plate into position and push flush to the finished wall surface, taking care to avoid any transfer of mastic from the wall plate onto the button assembly.




!

BEFORE ANY ELECTRICAL ADJUSTMENT IS ATTEMPTED, THE ELECTRICITY SUPPLY MUST BE TURNED OFF AT THE MAINS SWITCH.

ELECTRICAL INSTALLATION MAY ONLY BE CARRIED OUT BY A QUALIFIED PERSON.

10

The Digital processor features a secondary data cable socket next to the main data cable connection for use with the Digital remote control secondary 'Start/stop' button. Carefully snap and remove the entry pillar and connect the cable to the socket as shown.

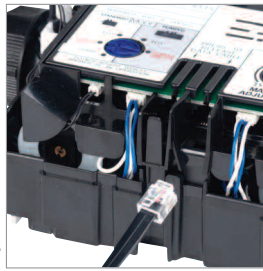

!

If using a Digital Divert system, the cable plugs into the diverter using the splitter box provided.

If using with a Divert product, refer to the Digital Divert instructions opposite.


11

Prior to commissioning the Visage Digital remote control following the procedure overleaf, please refer to the installation instructions provided with the main Visage Digital product to complete the installation of the Digital processor.

Dual outlet

!

IF FITTING THIS PRODUCT WITH A VISAGE DIGITAL DIVERT SHOWER SYSTEM, PLEASE FOLLOW THE FITTING INSTRUCTIONS BELOW.

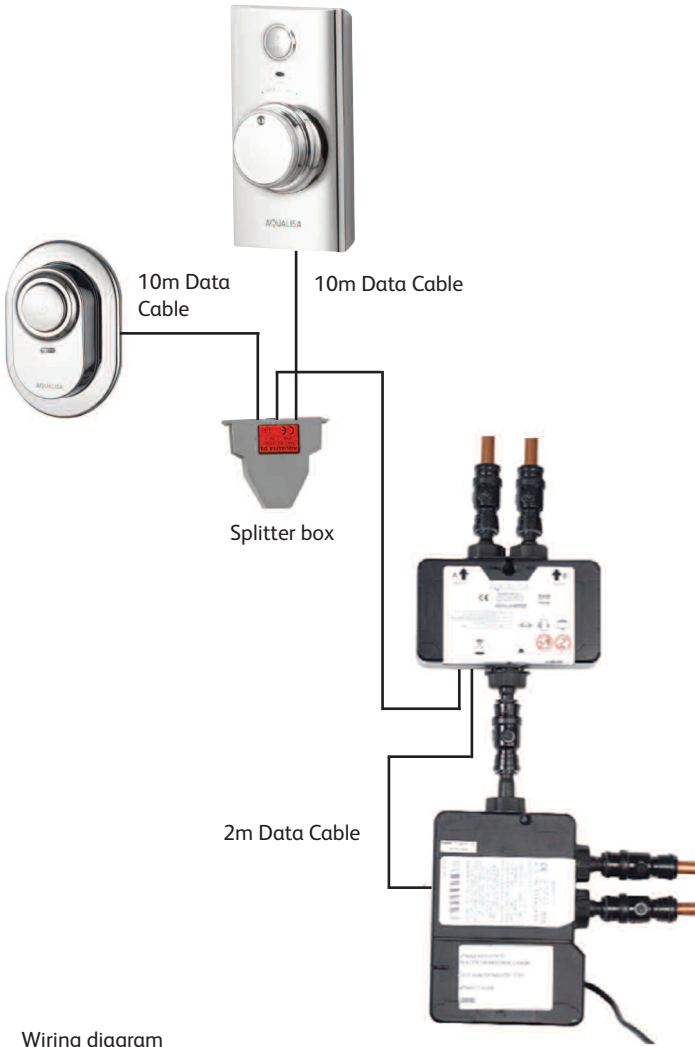

1

Using the back plate as a template, mark the position of the fixing screws and a Ø16mm hole for the data cable entry point. The cable entry point should be made in the top right hand corner of the back plate recess, to ensure the two holes are kept separate.



2

Prepare suitable wall fixings to accommodate no. 8 non-rusting countersunk head screws of a suitable length (not included).

3

Prepare a suitable route and install the 10m low voltage data cable leaving a working end of at least 70mm including the connector plug. The end of the data cable closest to the processor should terminate at a maximum of 500mm from the processor to allow for connection to the data cable connection block.



!

DATA CABLES MUST BE PROTECTED BY SUITABLE SHEATHING OR CONDUIT IN THE EVENT OF SERVICING AND MAINTENANCE.

4

Pull the data cable through before securing the back plate to the wall using suitable no. 8 non rusting countersunk screws.



5

Push the data cable plug into the back of the button fully home to ensure a water tight seal making sure the seal is no longer visible.



6

Locate the slot at the bottom of the button assembly, onto the locating peg at the bottom of the back plate assembly, and offer the button into position.



7

Secure the button to the back plate by carefully but firmly pushing the button assembly onto the locking clip at the top of the back plate.



!

To release the button, insert a small flat bladed screw driver into the small slot at the top of the button assembly, to release the locking clip, taking care to avoid damaging the plated surface. Carefully lift the button out and up off of the back plate bottom locating peg.



8

Apply a thin bead of mastic to the groove at the rear of the wall plate.



9

Place the wall plate into position and push flush to the finished wall surface, taking care to avoid any transfer of mastic from the wall plate onto the button assembly.




BEFORE ANY ELECTRICAL ADJUSTMENT IS ATTEMPTED, THE ELECTRICITY SUPPLY MUST BE TURNED OFF AT THE MAINS SWITCH.

ELECTRICAL INSTALLATION MAY ONLY BE CARRIED OUT BY A QUALIFIED PERSON.

10

Plug one end of the 2m data cable (supplied with the Digital Diverter) into the open entry port of the main processor box.

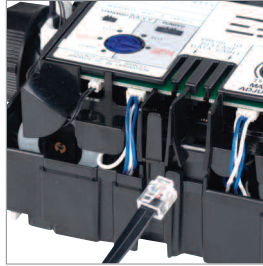


11

Plug the other end of the 2m data cable (supplied with the Digital Diverter) into **port 2** on the Digital Diverter.




12

Plug the end of the attached data cable feeding from the splitter box into **port 1** of the Digital Diverter.

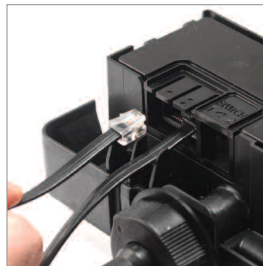

13

Plug the end of the 10m low voltage data cable feeding from the main controller, as well as the end of the 10m low voltage data cable feeding from the remote button, into the two side by side entry ports on the splitter junction box as shown.

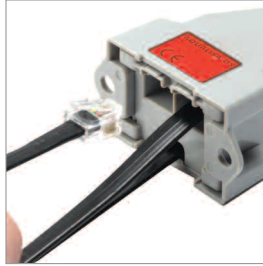

!

PLEASE NOTE, THE 10M LOW VOLTAGE DATA CABLES CAN BE PLUGGED INTO EITHER OF THE SIDE BY SIDE ENTRY PORTS OF THE SPLITTER JUNCTION BOX, THIS WILL NOT AFFECT THE OPERATION OF THIS PRODUCT.

14

Prior to commissioning the Visage Digital remote control following the procedure overleaf, please refer to the installation instructions provided with the main Visage Digital product to complete the installation of the Digital processor.



AQUALISA

Aqualisa Products Limited
The Flyer's Way
Westerham Kent TN16 1DE

Customer helpline: 01959 560010
Brochure Hotline: 0800 652 3669
Website: www.aqualisa.co.uk
Email: enquiries@aqualisa.co.uk

Republic of Ireland
Sales enquiries: 01-864-3363
Service enquiries: 01-844-3212



Part No:700986 Issue 01 Jan 14

Please note that calls may be recorded for training and quality purposes

The company reserves the right to alter, change or modify the product specifications without prior warning

© Registered Trademark Aqualisa Products Limited