



Quick step installation

Your quick and simple step-by-step guide.



Introduction

The **terrier i-temp** Programmable Radiator Control (PRC) revolutionises the way you heat individual rooms!

By simply replacing your current thermostatic head which controls only temperature, the **terrier i-temp** turns the control into a "clever" device. This allows you to change temperatures at the times that suit your living habits.

Most valves will fit directly to the **terrier i-temp** and we have a number of adaptors to suit your valve should it not fit directly (see Handbook pages 36-37).

Before terrier i-temp



After terrier i-temp




Setting-up terrier i-temp

Insert batteries

Remove the battery compartment cover.

Insert 2 new AA/LR6/Mignon batteries into the rear battery compartments, ensuring they are the right way round.

Re-attach the battery compartment cover.

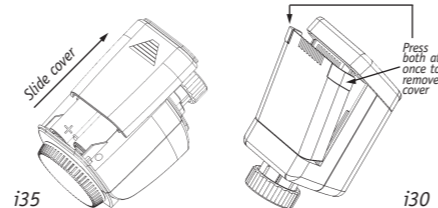


Simple programming

The **terrier i-temp** PRC offers simple walk through programming, whether you are selecting a pre-determined programme or if you're customising times for a more specific need, either way it is set up in seconds.

Step 1 Setting date and time


The thumb wheel is used to scroll between options.

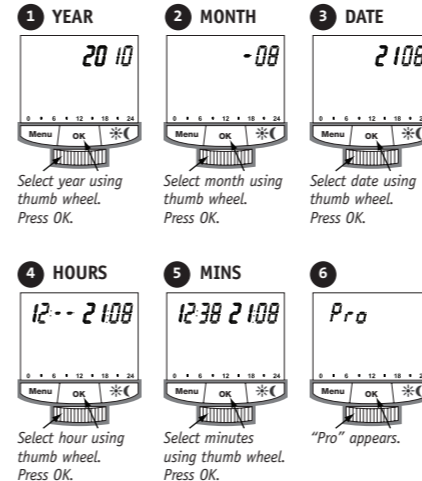

You are now ready for Step 2...

Step 2 Selecting your programme

You may find it easiest to programme the unit before installing it. To do so, follow these instructions.

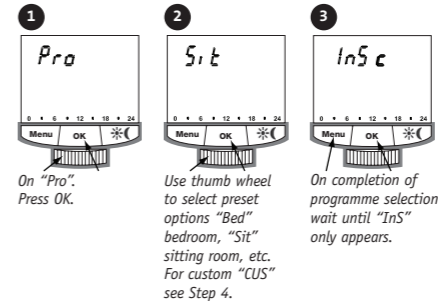

Turn over for Step 3...

Step 2 Selecting your programme


Oops! I've made a mistake!

A mistake on step 1?

If a mistake is made within time and date – complete Step 1 until "Pro" appears. Then use thumb wheel to select "Dat" and press "OK".

A mistake on steps 2-4?


You can reset the **terrier i-temp** to its original factory settings (except date and time). This will clear all additional programme settings that you have made (see below).

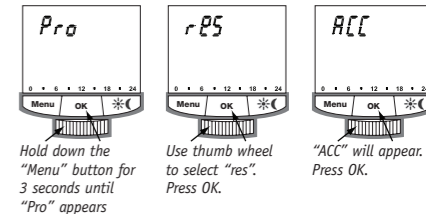

If a mistake is made whilst programming select "Menu" as a back button.

For error codes see handbook.


Step 3 Installing to the valve

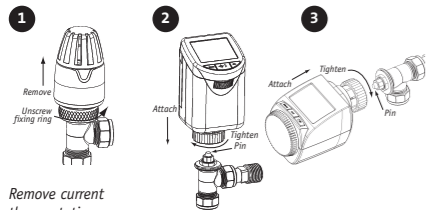

Remove current thermostatic head by turning the fixing ring anti-clockwise using grips if required.

It is recommended to depress valve pin to check for freedom of movement.

Connect terrier i-temp ring onto valve top. Then use finger grips if required.

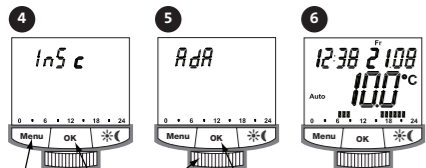

Press "OK" when "InS" only appears.

Select "OK" and "Ada" will appear. Wait for a short period.


Full screen detail will appear. Installation is complete.

Step 4 Customising programmes

To set your own times and temperatures, simply use the customisation process.



Use thumb wheel to select "CUS" from options. Press OK.

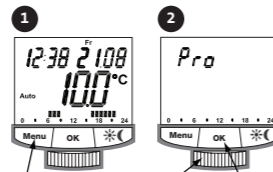

Press "MENU" button for 3 seconds.

"Pro" appears. Press OK.




Use thumb wheel to select from: 1 day, 5 days, 7 days or weekends. On selection, press OK.

terrier i-temp needs set times and temperature for the complete 24 hour period. It is advisable that when heating is not required, the frost setting (5°C) is used.


Step 4 Customising programmes

Starting at 0.00 select when your heating starts eg. 6.00.


Remember to select frost setting (5°C) when heating is not required.

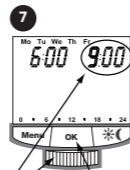


Use thumb wheel to select time. Press OK.

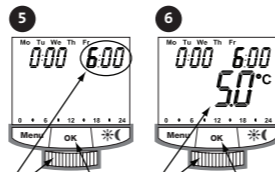


Use thumb wheel to select time. Press OK.

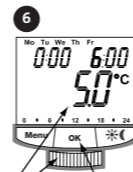


Use thumb wheel to select temperature. Press OK.

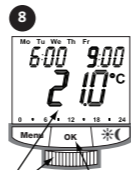

End of second phase. Use thumb wheel to select time. Press OK.

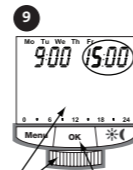


Use thumb wheel to select temperature. Press OK.

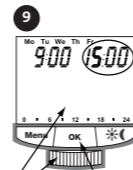

End of third phase. Use thumb wheel to select time. Press OK.


Step 4 Customising programmes

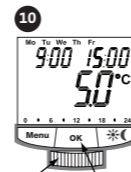

Use thumb wheel to set temperature. Press OK.




End of fourth phase. Use thumb wheel to select time. Press OK.

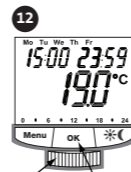

Use thumb wheel to set temperature. Press OK.

When the programme is complete press "OK". When "Ins 0" is complete, then adapt onto valve - see Steps 3-4.


Set point examples (up to 7 in any 24 hours)

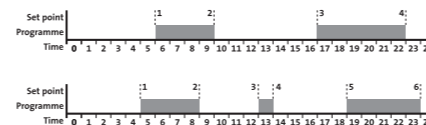

Recommendations

- When customising 5 or 7 day programmes, ensure you re-visit and programme "Sat and Sun" as you may need a different pattern to weekdays.
- It is recommended that if you have a room thermostat, its temperature is set at the same level of the terrier i-temp's highest temperature.
- When programming, think about when your boiler turns on for heating, this may be also controlled by a time clock, then use terrier i-temp PRC to fine tune rooms to the times when heat is required.
- The terrier i-temp pre-set programmes are simple guides for heat requirement within sitting rooms or bedrooms, (see example below).

 Bedroom programme - pre-set example

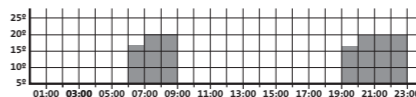

All pre-set programmes are contained in the handbook.

Your notes

Use these charts to set up your own programmes

