

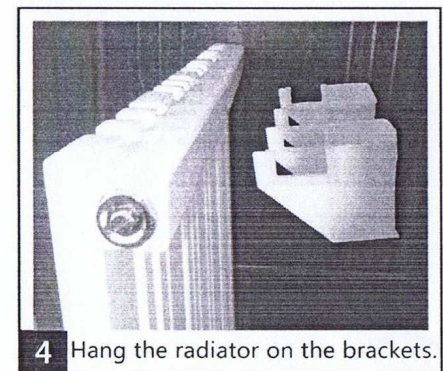
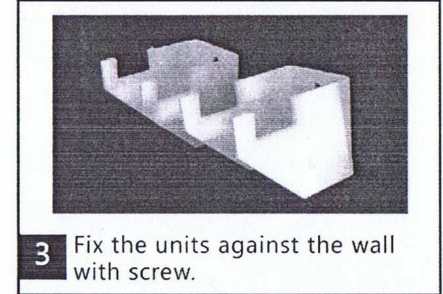


Radiator Name: Bonera

This product must be fitted only by a fully qualified installer

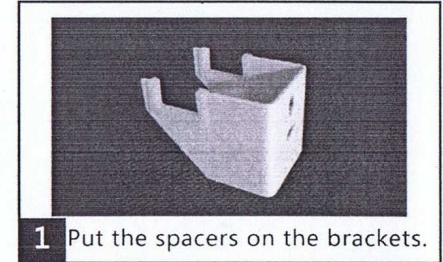

Description	Illustration	Qty	Description	Illustration
Radiator		1	Fixings choose the appropriate fixing for the wall material if required	
Bracket		4	PTFE tape	
Fixing Screw		4	Electric drill	
Spacer		8	Masonry drill bit appropriate to the fixings	
Air Vent		1	Adjustable spanner	
End Plug		1	Radiator valve Hex Key	
			Flat head and Philips head screw drivers	
			1 Lock shield valve and 1 Gate or Thermostatic valve	
			Spirit level	
			Measuring tape	

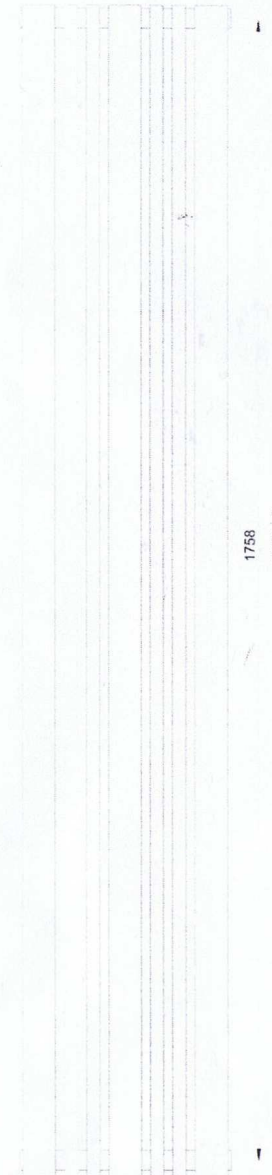

GENERAL RECOMMENDATION

Before fitting the radiator it is necessary to wash out the heating system to remove any existing mud, scale, work residues, traces of flux, oil etc... When the system water pH is outside the 5.5 - 8.5 range and/or when the dissolved is above 0.1mg/litre, it is always needed to protect the heating system components (the radiator is one of these) with a proper chemical treatment compatible with all parts in contact with water (Silicon rubber too). In order to fit the radiator to the wall, it is necessary to choose the proper fixings for the wall material. If the system water exceeds 50 centigrad degree, please install a warning mark near the radiator to avoid any accidental scalding. Clean the radiator surface only with a soft cloth to avoid scratching the finish and do not use chemical agents during cleaning operations. It is prohibited to climb on the radiator. Maximum working temperature: 95 centigrad degree. maximum working pressure 4 bar.