
IN8009 ULTI Rack




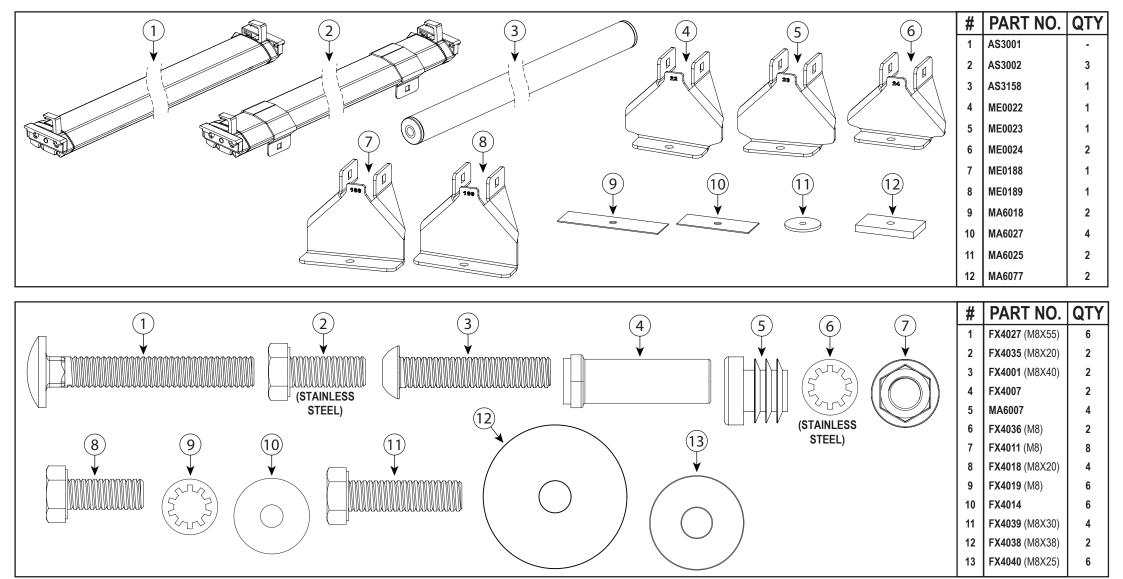


This FITTING INSTRUCTION is the property of VAN GUARD ACCESSORIES LTD. and must not be used for manufacturing purposes, copied nor communicated in any way to third parties without written permission from VAN GUARD ACCESSORIES LTD. IN8009 D - IW - 20/07/2016


Van Guard Accessories Ltd Fair Oak Close, Exeter Airport Business Park, Exeter, Devon, EX5 2UL www.van-guard.co.uk

IN8009 - PAGE 1 OF 8

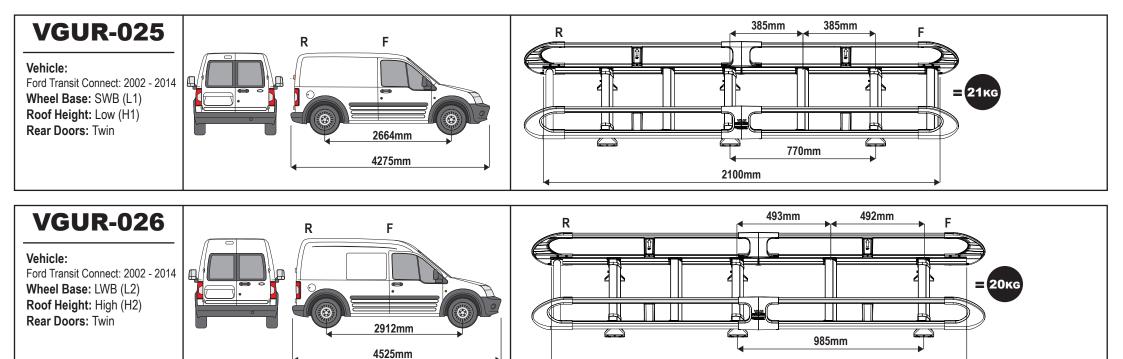


2200mm

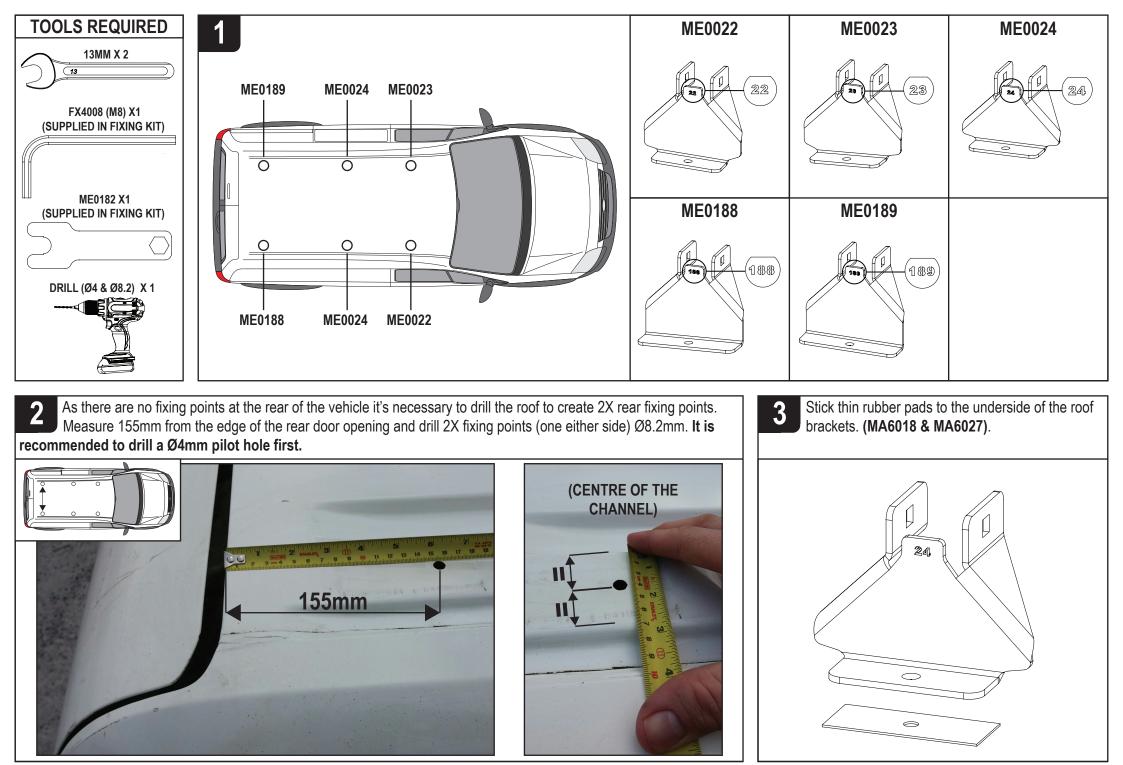


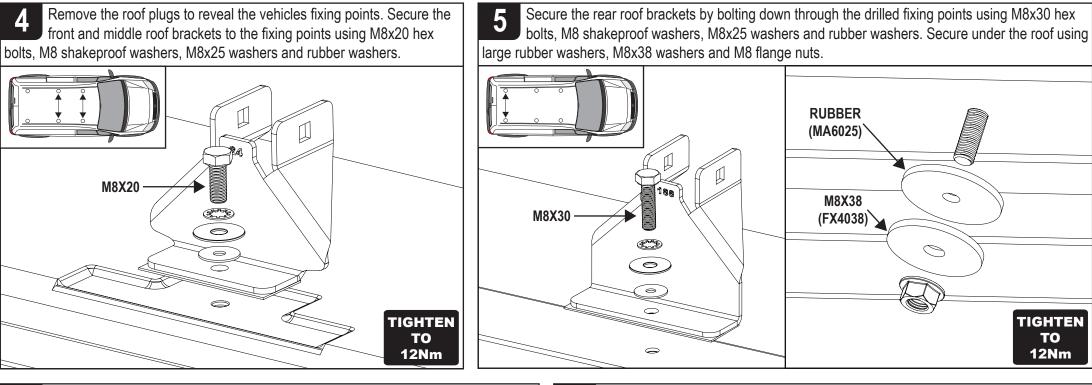


6 Loosely secure roof bars to the roof brackets using M8x55 coach bolts and M8 flange nuts.

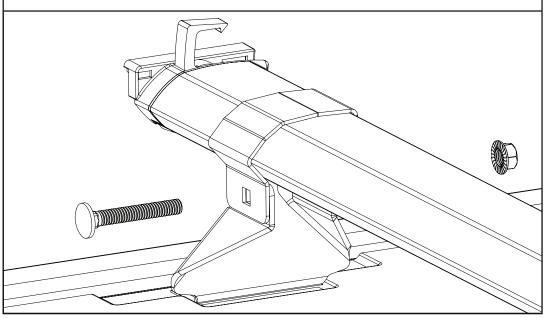


Place a flat object across the roof bars to ensure that they're level. **If the roof bars sit level please skip to step 8**. Due to the variance in some vehicles a spacer is supplied for the middle roof brackets. If the middle brackets are sitting too low please remove the middle brackets and re-secure using M8x30 hex bolts, spacer pads, M8 shakeproof washers, M8x25 washers and rubber washers.

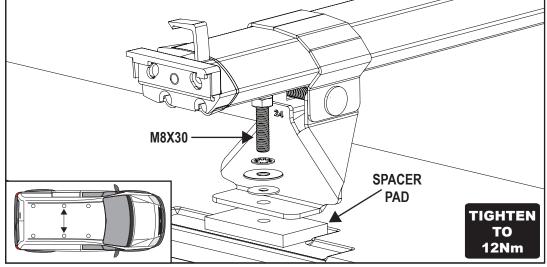


IN8009 - PAGE 4 OF 8

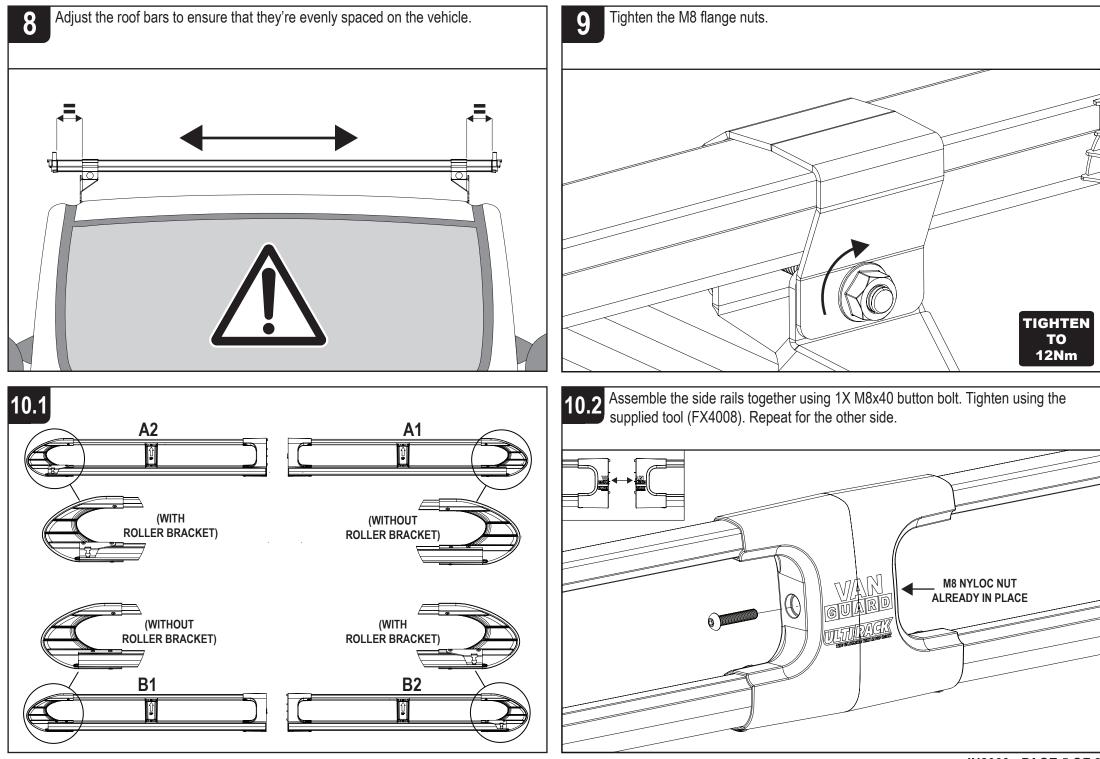


IN8009 - PAGE 5 OF 8

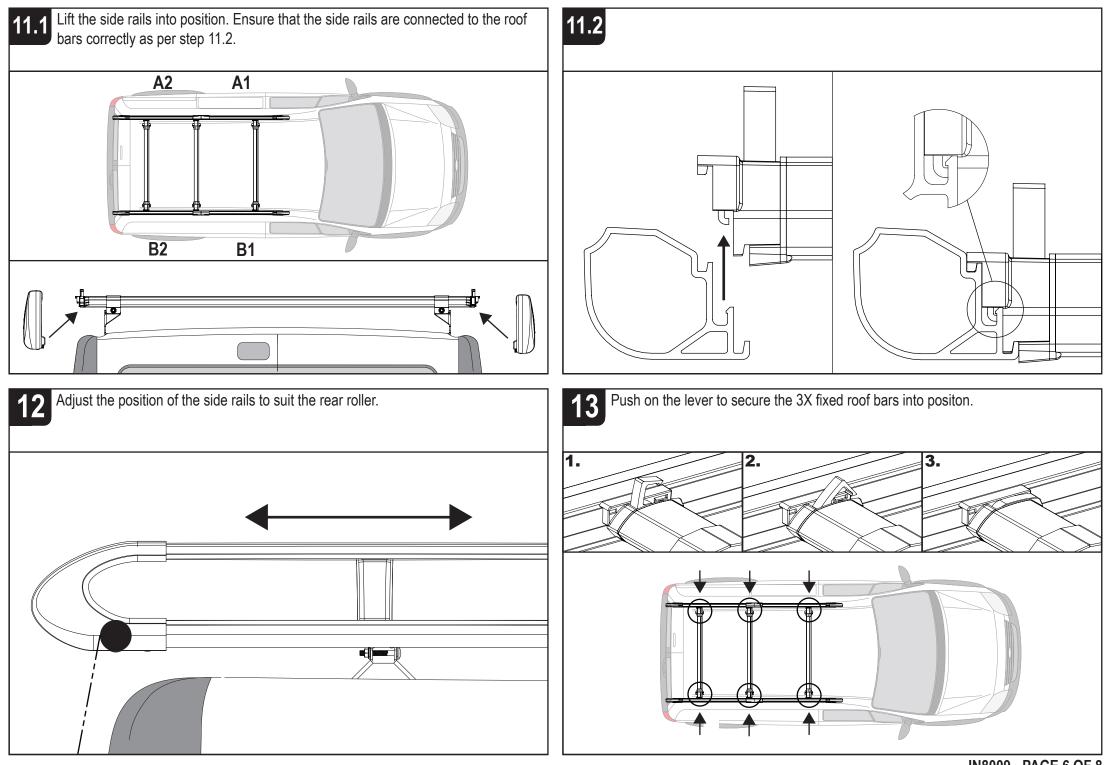


14 Place the remaining roof bars into position. See page 2 for the recommended distances between the roof bars. Once in position push on the lever to secure in place.

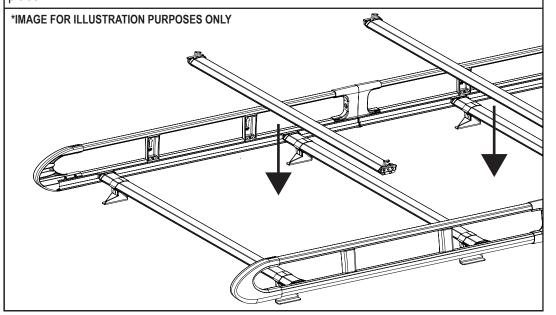


Assemble the roller spigot, M8x20 hex bolt and M8 shakeproof washer together. Place the assembly into the roller. Slide the roller onto the spigot fitted in step 15 and drop the other end into position. Tighten using the supplied tool (ME0182).

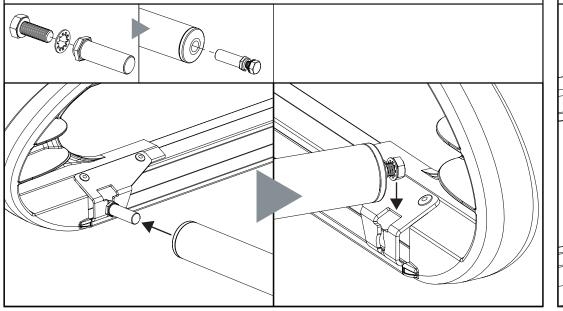


15 Secure the roller spigot to the **left hand roller bracket only** using a M8x20 hex bolt and a M8 shakeproof washer. Ensure that the shakeproof is on the inside of the roller bracket and that the spigot sits flush / straight. Tighten using the supplied tool.

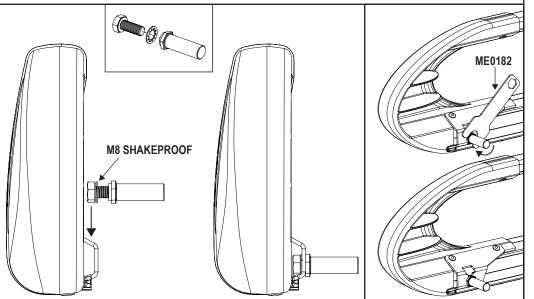

17 Push the plastic bungs into position (X4).

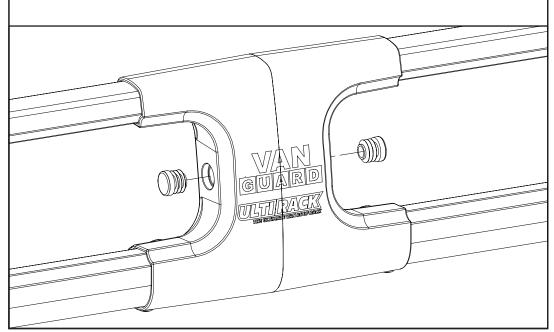

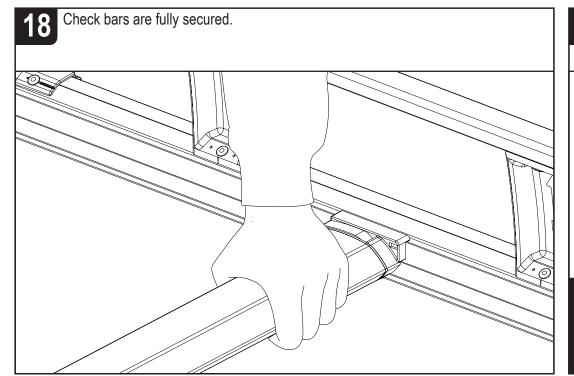



Once fitted check fixings and parts to ensure they have been fully secured and tightened. Regularly check all fixings.



NOTES:

Maximum load capacity: 100KG (Including rack weight - please refer to page 2.) (Maximum load must be in accordance with the vehicle manufacturer's load bearing capacity. Please refer to the vehicles handbook.). Regularly check all fixings.

Retain these instructions for future reference.