




43cm Rear Roller
LI-ION Battery Powered Lawnmower
WERR17LIP

Operator's Manual & Parts List

Please read & understand this manual, paying particular attention to the safety instructions, before use.
The manufacturer reserves the right to change the product specification and livery according to continues product improvements.

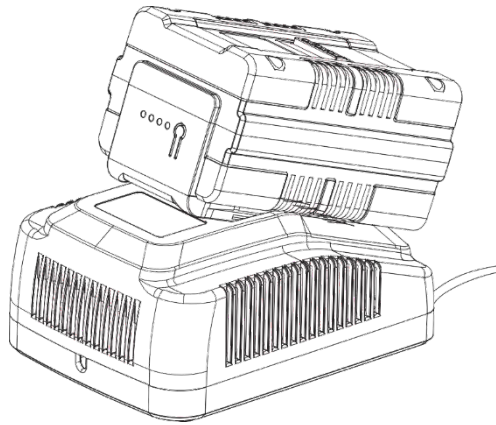

WES40VB 40V BATTERY 4.0AH

PRODUCT NO - 1938145001

WES40VC CHARGER

PRODUCT NO. 1938146001

CONTENTS

SPECIFICATION
 IMPORTANT INFORMATION
 GENERAL SAFETY INSTRUCTIONS
 BATTERY STATUS
 CHARGING
 CLEANING
 TRANSPORT & STORAGE
 DISPOSAL
 EC DECLARATION OF CONFORMITY

If you require any assistance with regards to the contents or operation of your machine, please contact us:

Tel: 01793 333212

Email: customerservice@handydistribution.co.uk

Monday to Friday 8.00am to 5.30pm (excl. Bank Holidays)

SPECIFICATION

The manufacturer reserves the right to change the product specification and livery according to continued product improvements.

Model	WES40VC
Product No.	1938146001
Rated Voltage	220-240V ~50HZ

Model	WES40VB
Product No.	1938145001
Battery Voltage	40v
Capacity	4.0Ah
Charging Time (From Empty)	2.5 hours
Run Time (No Load)	35 mins

IMPORTANT INFORMATION



WARNING

Read this instruction manual carefully before using the battery, charger or machine. Make sure that you are familiar with the controls. Following these instructions can reduce the risk of fire, electric shock and personal injury.



WARNING

Under no circumstances may the design of the machine be modified without permission of the manufacturer. Always use original accessories. Non-authorized modifications and/or accessories can result in serious personal injury or the death of the operator or others.



WARNING

A battery & charger can be dangerous if used incorrectly or carelessly, and can cause serious or fatal injury to the operator or others. It is extremely important that you read and understand the contents of this operator's manual.

IF NOT USED PROPERLY THIS MACHINE CAN BE DANGEROUS!

This machine can cause serious injury to the operator and others, the warning and safety instructions must be followed to ensure reasonable safety and efficiency in using this product. The operator is responsible for following the warning and safety instructions in this manual and on the machine. Never use the product unless the blades or guards are correctly positioned.

DESIGNED FOR DOMESTIC USE ONLY.

The Sanli 40v battery & charger is designed for use with machines that will be used in private gardens, whose annual use does not generally exceed 50 hours, but not in public facilities, parks or sports grounds and not for agricultural or forestry use.

Compliance with the manual supplied by the manufacturer is a prerequisite for the proper usage of the machine. The operating manual contains servicing & maintenance instructions as well as directions for use.

TRAINING

Read the instructions carefully: Be familiar with the controls and the proper use of the equipment. Never allow children or people unfamiliar with these instructions to use the product. Local regulations can restrict the age of the operator.

Never operate while people, especially children, or pets are nearby.

Keep in mind that the operator or user is responsible for accidents or hazards involving the machine that occur to other people or their property.



WARNING















Risk of electric shock and short circuiting. Use only approved & undamaged wall sockets. Make sure the electric power cable is not damaged. If damaged in anyway, contact an approved service dealer for assistance.

- Charge the Sanli 40v battery using only the Sanli 40v charger supplied.
- The charger must be connected to a grounded outlet socket.
- Never charge the battery for longer than 24 hours.
- Do not charge the battery in direct sunlight.
- Do not charge at temperatures below 5°C or above 40°C.
- The battery must be charged in a dry, well ventilated area, protected from water, damp, oil & grease.
- Never charge the battery near flammable substances or gases.

GENERAL SAFETY INSTRUCTIONS

It is important that you read and understand the owner's manual and labels affixed to the machine. Learn its application and limitations as well as the specific potential hazards. Retain these instructions for future reference. The operator is responsible for following the warnings & instructions in this manual and on the product.

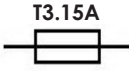SYMBOLS

	<p>WARNING! Incorrect or careless use of a battery & charger can turn it into a dangerous tool that can cause serious or even fatal injury. It is extremely important that you read & understand the contents of this operator's manual.</p>		<p>Read & understand operator's manual before using the machine. Failure to follow instructions could result in death or serious injury.</p>
 	<p>Do not expose to rain or damp conditions. Only use indoors.</p>		<p>Before working or undertaking any servicing or cleaning of the machine, ensure the electrical cable is removed from the power source.</p>
	<p>Safety alert symbol. Used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury.</p>		<p>If cable is damaged, remove plug from mains supply before inspecting</p>
 WARNING	<p>Indicates a potentially hazardous situation which, if not avoided, could result in serious injury.</p>	 DANGER	<p>Indicates an imminently hazardous situation which, if not avoided, will result in serious injury.</p>
CAUTION	<p>Used without the safety alert symbol, indicates a potentially hazardous situation which, if not avoided, may result in property damage.</p>	 CAUTION	<p>Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury.</p>
	<p>Fuse</p>		<p>Class II</p>
	<p>This product must not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical & electronic equipment. For more detailed information about recycling of this product, please contact your local council office, your household waste disposal service or shop where you purchased the product.</p>		<p>Conforms to all relevant EU Directives</p>

BATTERY & CHARGER SAFETY INFORMATION

For the proper use, maintenance and storage of this battery, it is crucially important that you read and understand the instructions given in this manual.

To avoid serious injury, risk of fire, explosion and danger of electric shock or electrocution:

- Do not probe the charger with conductive materials.
- Do not use a battery pack that is damaged or modified. They may exhibit unpredictable behavior which could result in fire, explosion or risk of injury. **DO NOT** insert in the charger. **REPLACE THE BATTERY.**
- Do not charge the Sanli WES40VB battery with any other charger than a Sanli WES40VC.
- Do not allow liquid inside the charger.
- Do not try and use the battery & charger for any other purpose than advised in this manual.
- When charging, make sure the temperature is between 5°C & 40°C.
- Risk of Fire or Burns. Do not open, crush, heat above 100°C or incinerate.
- Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help. Liquid ejected from the battery may cause irritation or burns.
- Ensure the ventilation slots on the charger are not covered or blocked. Always place on a hard surface when in use.
- Do not allow any other metal material or other foreign particles into the charger cavity.
- Unplug the charger when cleaning. The battery should also be removed from the charger.
- Do not try and connect two chargers together.
- If the outer seal of the battery is broken and leakage gets on your skin:
 - Use soap & water to wash immediately.
 - Neutralize with lemon juice, vinegar or other mild acid.
- Dispose of used batteries promptly. Do not disassemble and do not dispose of in fire.
- Do not mix old and new batteries.
- For indoor use only.
- The cover on the charger should never be opened. If the cover is damaged, then the charger should be disposed of correctly and replaced.



WARNING

If the battery fluid gets in your eyes, flush immediately with clean water for at least 15 minutes. Get immediate medical attention. Do not charge the battery pack in rain or in wet conditions. Do not immerse the tool, battery pack, or charger in water or other liquid.

- Do not use a damp cloth or detergent on the battery or charger.
- Always remove the battery pack before cleaning, inspecting, or performing any maintenance on the tool.
- Do not allow the battery or charger to overheat. If they are warm, allow them to cool. Recharge only at room temperature.



BATTERY STATUS

The display on the battery indicates the remaining capacity, or if there are problems. There are 4 LED lights on the battery.

CHARGING THE BATTERY

The battery must be charged prior to its first use.

- **Observe the mains voltage!** The voltage of the power supply must correspond with the data given on the nameplate of the battery charger. Battery chargers marked with 230v can also be operated with 220v.
- Put the battery into the Sanli charger. **(DO NOT USE ANY OTHER CHARGER!)**
- Ensure the battery is correctly seated in the charger.
- The GREEN charging light on the charger when the battery is connected to the charger.
- When all four LED lights on the battery are lit, the battery is fully charged.
- Remove the battery.
- Never charge the battery for more than 24 hours.
- Never disconnect the 3-pin plug from the power supply by pulling on the cable.


WHEN TO CHARGE THE BATTERY

During use, the battery LED lights will go out, one by one. When the machine will not start, the battery requires charging.

Never leave the battery in the charger when the battery is not charging.

To check the battery capacity, press the Battery Capacity Button next to the LED Lights. The LED Lights will illuminate according to the batteries current power level. See chart opposite:


LED		BATTERY CAPACITY
ALL LED'S ARE LIT		75 - 100% CHARGED
LED 1, 2 & 3 ARE LIT		50 - 75% CHARGED
LED 1 & 2 ARE LIT		25 - 50% CHARGED
LED 1 IS LIT		0 - 25% CHARGED

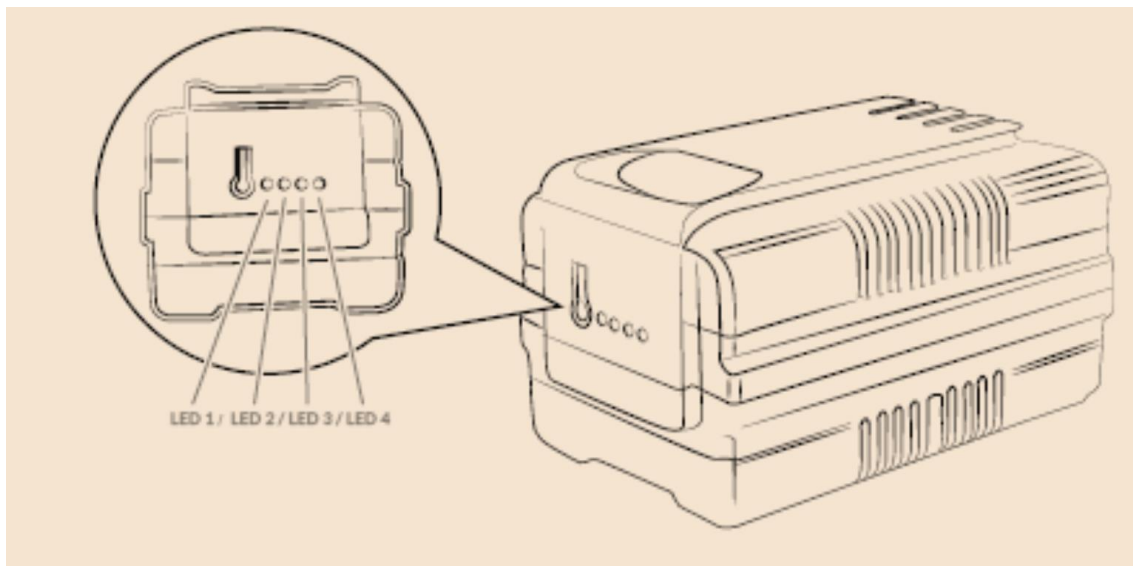







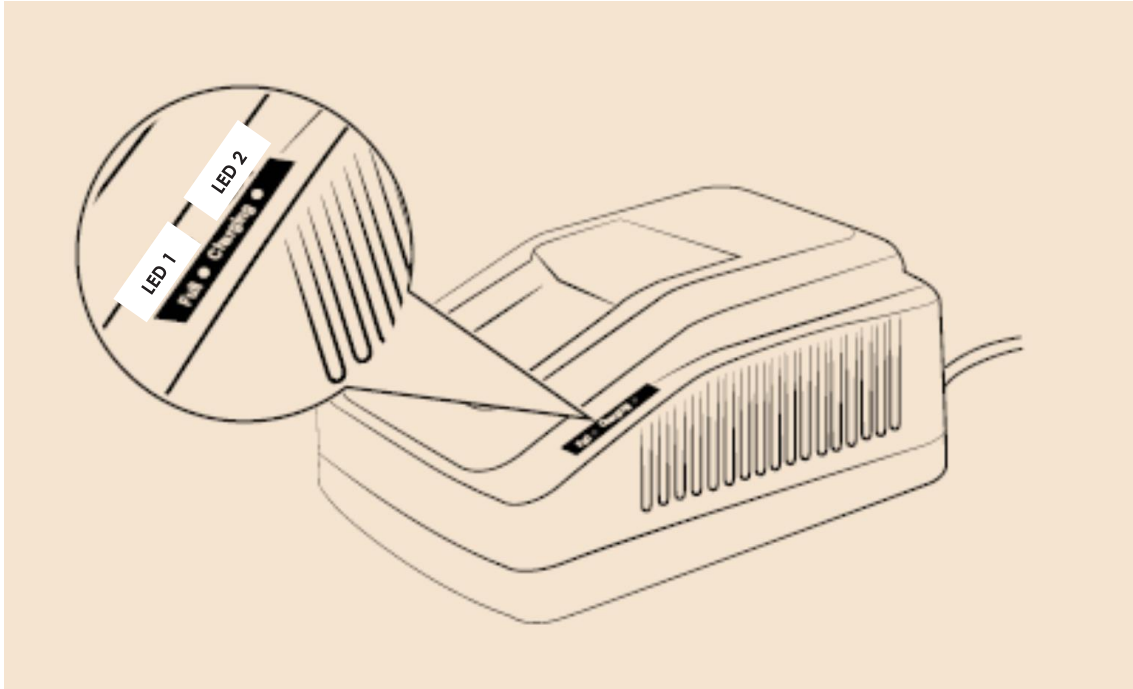





CHARGING

When the battery has run out of charge, it will require charging. Follow the below charging status table for the charger LED status. **The battery must be charged prior to its first use.**



CHARGING STATUS	LED 1		LED 2	
POWER ON	GREEN		OFF	
BATTERY CHARGING	GREEN		RED	
BATTERY IS FULLY CHARGED	GREEN		GREEN	
ABNORMAL TEMPERATURE	GREEN		FLASHES GREEN & RED	
ABNORMAL BATTERY STATUS	GREEN		FLASHES RED	

CLEANING

Wipe the outside of the charge and battery with a dry, soft cloth. Do not hose down or wash with water.



CAUTION

Do not use strong solvents or detergents on the plastic housing or plastic components. Certain household cleaners may cause damage & may also cause a shock hazard.



TRANSPORT & STORAGE

- The contained Lithium-ion batteries are subject to the Dangerous Goods Legislation requirements.
- For commercial transport e.g. by third parties, forwarding agents, special requirement on packaging and labelling must be observed.
- For preparation of the item being shipped, consulting an expert for hazardous material is required. Please also observe possibly more detailed national regulations.
- Tape or mask off open contacts and pack up the battery in such a manner that it cannot move around in the packaging.
- Secure the machine during transport.
- Always remove the battery for storage or transport from the machine and charger.
- Store the battery & charger in a dry, moisture free & frost free space.
- To prevent accidents, ensure the battery is not connected to the machine or charger when stored.
- Do not store the battery in places where static electricity can occur. Never store the battery in a metal box.
- Store the battery & charger at normal room temperature in an enclosed, dry space. Do not use or store the battery & charger in direct sunlight.
- Store the equipment in a lockable area so that it is out of reach of children & unauthorised persons.
- Ensure the machine is cleaned & that a complete service is carried out before long-term storage.
- **Fully charge the battery before storage of over 2 months.** A discharged battery that is stored without charging can be damaged.
- If the battery is not charged for a long time, charge the battery for 2 hours every 2 months.

DISPOSAL

Symbols on the product or its packaging indicate that this product cannot be handled as domestic waste. It must be submitted to an appropriate recycling station for the recovery of electrical and electronic equipment.

By ensuring that this product is taken care of correctly, you can help to counteract the potential negative impact on the environment and people that can otherwise result in the incorrect waste management of this product.

For more detailed information about recycling this product, contact your municipality, your domestic waste service or the retailer where you purchased the product.



SANLI

EC DECLARATION OF CONFORMITY

We Handy Distribution Ltd - SN3 5HY (Importer) declare that the product:

Designation: Sanli 40V Battery Charger

Model(s): WES40VC

Product Number: 1938146001

Type/Serial No: As per rating label on machine

Complies with the following directives:

EMC Directive – 2014/30/EU

Low Voltage Directive – 2014/35/EU

The conformity assessment procedure followed was in accordance with:

EN 55014-1:2006/A2:2011, EN 55014-2:2015, EN 61000-3-2:2014, EN 61000-3-3:2013

EN 60335-2-29:2004/A2:2010, EN60335-1:2012/A11:2014, EN 62233:2008

Notified Bodies: TÜV SÜD Product Service GmbH

Address(es): Zertifizierstelle, Ridlerstraße 65, 80339 München, Germany

Authorised signatory & technical file holder

Date: 30 May 2017

Signature:

Name:

Mr Simon Belcher

Position:

Managing Director

Company:

Handy Distribution Ltd

Address:

Murdock Rd, Dorcan, Swindon, Wiltshire, SN3 5HY.





WERR17LIP 43cm Rotary Rear Roller Lawnmower

PRODUCT NO - 1938144001

CONTENTS

- SPECIFICATION
- SAFETY INSTRUCTIONS
- COMPONENTS
- KNOW YOUR MACHINE
- ASSEMBLY
- BATTERY & SAFETY KEY INSTALLATION/REMOVAL
- OPERATION
- USING THE MACHINE
- MAINTENANCE & STORAGE
- TROUBLE SHOOTING
- PARTS LIST & DIAGRAM
- EC DECLARATION OF CONFORMITY

If you require any assistance with regards to the contents or operation of your machine, please contact us:

Tel: 01793 333212

Email: customerservice@handydistribution.co.uk

Monday to Friday 8.00am to 5.30pm (excl. Bank Holidays)

SPECIFICATION

Model	WERR17LIP	Product No.	1938144001
Power	500w	Height Settings	6
Capacity	4000mAh	Grass Collector	60L
Charger Output	1700mA	Guaranteed Sound Power Level	96 dB(A)
No Load Speed	3200rpm	Weight	N.W 26kg – G.W 30.2kg
Cutting Width	43cm (17")		

SAFETY INSTRUCTIONS

SAVE THESE INSTRUCTIONS FOR FUTURE USE



WARNING

Read this instruction manual carefully before operating this lawn mower. Make sure that you are familiar with the controls and properly operate the machine. Following these instructions can reduce the risk of fire, electric shock and personal injury.

IF NOT USED PROPERLY THIS LAWN MOWER CAN BE DANGEROUS!

This lawn mower can cause serious injury to the operator and others, the warning and safety instructions must be followed to ensure reasonable safety and efficiency in using this lawn mower. The operator is responsible for following the warning and safety instructions in this manual and on the lawn mower. Never use the lawn mower unless the grass box or guards are correctly positioned.



THE LAWN MOWER IS DESIGNED FOR DOMESTIC USE ONLY.

Lawn mowers for use in private gardens are mowers whose annual use does not generally exceed 50 hours and that are primarily used for tending GRASS OR LAWN AREAS, but not in public facilities, parks or sports grounds and not for agricultural or forestry use.

Compliance with the operating manual supplied by the manufacturer is a prerequisite for the proper usage of the lawn mower. The operating manual contains servicing and maintenance instructions as well as directions for use.

IMPORTANT

The lawn mower must not be used to trim bushes, hedges and shrubs, to cut or shred climbing plants or lawns on roof gardens or in balcony boxes or to clean footpaths, nor must it be used as a chopper for shredding tree or hedge cuttings.

Furthermore, the lawn mower must not be used as a cultivator or to level off uneven areas of ground, e.g. molehills.

TRAINING

Read the instructions carefully: Be familiar with the controls and the proper use of the equipment.

Never allow children or people unfamiliar with these instructions to use the lawnmower. Local regulations can restrict the age of the operator.

Never operate the mower while people, especially children, or pets are nearby.

Keep in mind that the operator or user is responsible for accidents or hazards involving the lawnmower that occur to other people or their property.


SYMBOLS

	Read the instruction handbook before operating this machine.		The cutting blade will continue to rotate after the motor is switched off
	Keep hands and feet clear of the cutting deck when the machine is running.		Remove all objects that could be thrown by the blade in the working area.
	Do not expose to rain or damp condition		Beware of flying objects. Keep all bystanders, especially children & pets, at least 15m away from the operating area
	Wear Ear & Eye Protection		Before working or undertaking any servicing or cleaning of the machine, ensure the battery and safety key are removed from the machine.
	Be careful when using on slopes. Do not operate on inclines greater than 15°. It is advised to cut across the incline.		Safety alert symbol. Used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury.
	Indicates an imminently hazardous situation which, if not avoided, will result in serious injury.		Indicates a potentially hazardous situation which, if not avoided, could result in serious injury.
	Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury.		Used without the safety alert symbol, indicates a potentially hazardous situation which, if not avoided, may result in property damage.

	This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.
--	--

PREPARATION

- Always wear appropriate footwear, such as work boots, and trousers when operating the mower. Do not operate the equipment when barefoot or wearing open sandals. Always wear safety goggles or safety glasses with side shields when operating the mower.

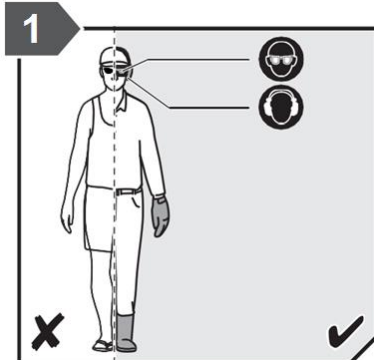


- Thoroughly inspect the area where the equipment is to be used and remove all objects which can be thrown by the machine.
- Before using, always visually inspect to see that the blades, blade bolts & cutter assembly are not worn or damaged. Replace blades & bolts in sets to preserve balance.
- Only use accessories approved by the manufacturer.
- Do not operate the machine while under the influence of alcohol or drugs.

MACHINE SAFETY

- Avoid unintentional starting. Always check that the Brake (OPC) Lever is in Off position before inserting the battery & safety key. Do not carry a product with your finger on the switch, battery & safety key inserted.
- Do not expose the product to rain or wet conditions. Water entering an appliance will increase the risk of electric shock.
- Always ensure the cord from the handlebar to the mower body is never trapped, pinched or otherwise damaged during assembly or handle folding. Never apply power to the mower if this cable is damaged. Return to authorised service centre for professional repair.

OPERATION

- Only operate the mower in daylight or in good artificial light.
- Never operate the machine in wet grass. This could cause you to slip while mowing.
- Always be sure of your footing on slopes. Exercise extreme caution when changing direction on slopes. Do not mow excessively steep slopes, which exceed 20°. Mow across the face of slopes, never up and down.
- Never run while using the mower, always walk.
- Do not pull the mower backwards unless necessary. Use extreme caution when reversing or pulling the lawnmower towards you.
- Stop the blade if the lawnmower must be tilted for transportation when crossing surfaces other than grass (such as gravel drives, walks, or roads) & when transporting the lawnmower to & from the area to be mowed. Never pick up or carry a lawnmower while the motor is running.

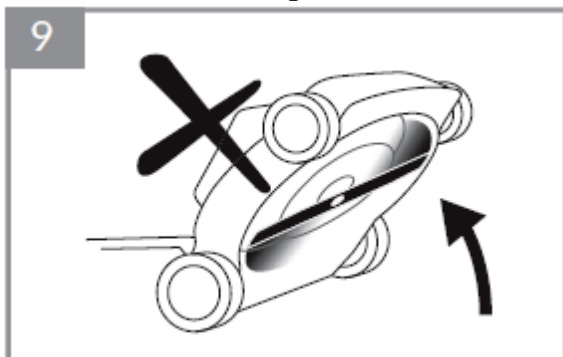



- Never operate the lawnmower with defective guards, or without safety devices, for example deflectors and/or grass catchers, in place.
- Do not put hands or feet near or under rotating parts. Keep clear of the discharge opening at all times.

Stop the motor, disconnect the battery & safety key:

- ✓ before clearing blockages or unclogging the chute;
- ✓ before checking, cleaning or working on the lawnmower;
- ✓ after striking a foreign object inspect the lawnmower for damage and make repairs before restarting and operating the lawnmower,
- ✓ if lawnmower starts to vibrate abnormally (check immediately).
- Shut the motor off and wait until the motor and the blade come to a complete stop before removing the grass catcher.
- Watch for holes, ruts, or bumps. Tall grass can hide obstacles.
- Do not mow near drop-offs, ditches or embankments. The operator could lose footing or balance.
- Be alert and turn the machine off if children enter the area.
- Never tamper with safety devices. Check their proper operation regularly.
- Never attempt to make wheel height adjustments while the motor is running.

GENERAL MOWING TIPS

- When cutting long grass, reduce walking speed to allow for more effective cutting and a proper discharge of the clippings. It is recommended that you cut longer grass in stages. Start at a higher cutting height and go over the same area a second time with a lower cutting height.
- Do not cut wet grass; it will stick to the underside of the deck and prevent proper collection or discharge of grass clippings.
- New or thick grass may require a higher cutting height.
- Empty the grass box regularly, the discharge chute will become blocked with grass cuttings.
- The mower is designed to operate and cut most effectively when moving forwards.

MAINTENANCE AND STORAGE

- Keep all nuts, bolts and screws tight to be sure the equipment is in safe working condition.
- Replace worn or damaged parts for safety.
- Keep the machine free of grass, leaves, or other debris build-up.
- Allow the machine to cool before storing.
- Grass Collector components are subject to wear, damage, & deterioration, which could expose moving parts or allow objects to be thrown. Frequently check & replace them with the manufacturer's recommended parts, when necessary.
- Mower blades are sharp and can be dangerous. Wrap the blade(s) or wear gloves, and use extra caution when servicing them.



COMPONENTS

Carefully remove the machine from its packaging and check that you have all the components. If parts are missing or damaged, please contact us:

Telephone: 01793 333212

Email: customerservice@webbgardenpower.co.uk

(Mon to Fri 8.00am to 5.30pm excl. Bank Holidays)

	X1	WERR17LIHP Lawnmower		X1	Spanner
	X1	Rear Grass Collector		X1	WES40VB 40v 4Ah Battery
	X1	Cable Clip		X1	WES40VC 40v Battery Charger
	X1	Mulch Plug (For transport purposes, this may be fitted in the grass exit chute of the machine)		X4	Lower Handle Fixing Nuts
	X2	Quick Release Handles & Fixings		X1	Safety Key

All images used are for information purposes only. Therefore, they may differ from those packaged, however the functionality is still the same.



GET TO KNOW YOUR MACHINE.



1. Comfort Grip Handle
2. Motor Brake (OPC) Lever
3. Safety Start Button
4. Rear Grass Flap
5. Rear Roller
6. Rear Grass Collector
7. Battery & Safety Key Cover
8. Height Adjustment Lever



ASSEMBLY

HANDLE ASSEMBLY



Select the left hand lower handle & fix to the two studs on the right-hand side of the mower. Ensure that the U-shape of the handle goes towards the chassis.



Fix with two cap head nuts.



Select the right hand lower handle & fix to the two studs on the right-hand side of the mower. Ensure that the U-shape of the handle goes towards the chassis.
Fix with two cap head nuts



Assemble the upper handle to the lower handle, using the two clamp bolts and flash nuts, ensuring that the large washer goes against the clamp handle on the outside of the handle, as per the photo.



Secure with the wing nut.



Ensure the handle is completely secure



GRASS COLLECTOR ASSEMBLY



Grass Collector & Frame



Attach the side sections.



Place the Frame into the Grass Collector



Ensure the Grass Collector sides sit inside the Frame when attaching the lower section of the Collector.



Ensure the Frame carry handle remains outside of the Grass Collector.



The finished Collector.



Start attaching the Grass Collector to the Frame.



BATTERY & SAFETY KEY INSTALLATION



WARNING


CHARGE THE BATTERY FULLY BEFORE FIRST USE OF THE BATTERY

If any parts are broken or missing, do not attempt to install the battery pack to the mower or operate the mower until the broken or missing parts are replaced.

Always remove the battery & safety key from your machine when you are assembling parts, make adjustments, cleaning or when not in use. Removing the battery will prevent accidental starting that could cause personal injury.


INSTALL THE BATTERY

- Open the battery cover.
- Align the battery with the mower's battery port and slightly push the battery until you hear a click and it is locked.
- Close the battery cover.

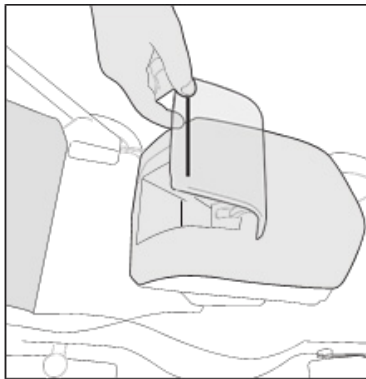

REMOVE THE BATTERY

- Release the Brake (OPC) Lever, to stop the mower.
- Open the battery cover.
- Press the battery release button.
- Pull the battery away from the battery port.
- Close the battery cover.

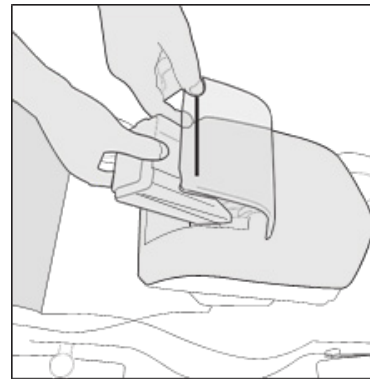

INSTALL THE SAFETY KEY

- Open the battery cover.
- Align the safety key with the mower's key port & slightly push the key until it is secure.
- Close the battery cover.



REMOVE THE SAFETY KEY

- Release the Brake (OPC) Lever, to stop the mower.
- Open the battery cover.
- Slightly pull the safety key away from the battery port.





OPERATION




WARNING

Always remove the battery and safety key from your machine, when you are assembling parts, making adjustments, cleaning or when not in use.


STARTING

With the battery and safety key inserted. Press the Safety Start Button with your right hand.

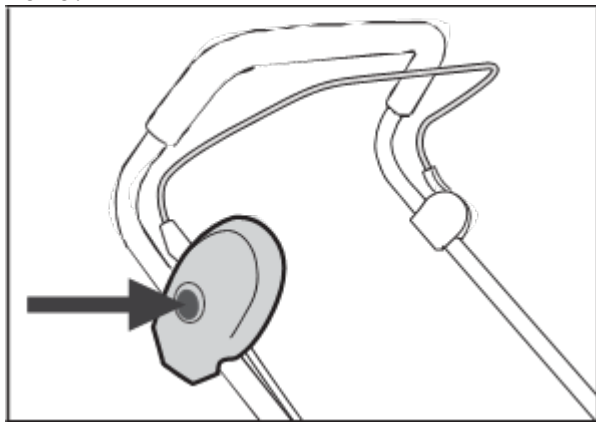

Pull the Brake (OPC) Lever upwards towards the main handle and the mower will start.

Release the Safety Start Button.

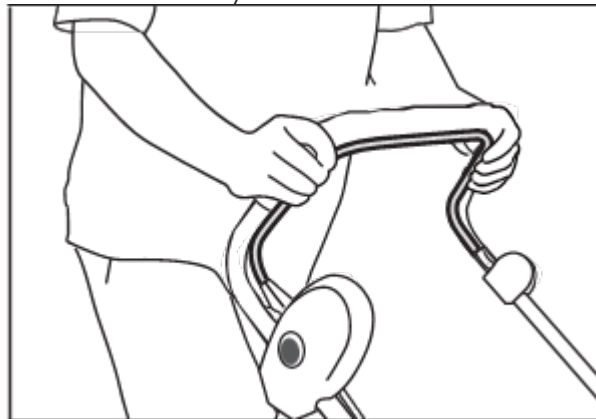


STOPPING

To stop the mower, release the Brake (OPC) Lever. **WARNING** – The blade will still rotate for a small time, after the trigger has been released).

USING THE MACHINE

ATTACH THE GRASS COLLECTOR

The Grass Collector attaches easily. Lift the Rear Grass Flap

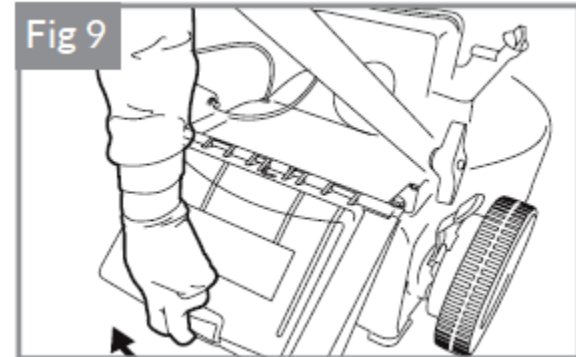


Slide the Grass Collector into position, ensuring the two slugs on the Grass Collector Frame, sit within the Deck Housing.



MULCH PLUG

Your machine is supplied with a mulch plug. To cut efficiently, only cut one third of the length of grass. Mulching stops the grass entering the grass collector, recycling fine grass clippings into your lawn and feeding the soil.

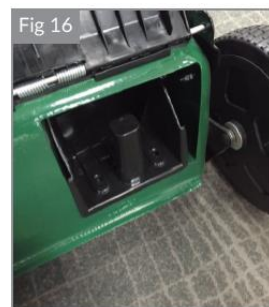



CUTTING HEIGHT ADJUSTMENT



WARNING

Turn off the Lawnmower before adjusting the cutting height.

Under certain conditions, such as tall grass, it may be necessary to raise the height of cut to reduce pushing effort, prevent overloading of the motor & leaving clumps of grass clippings. It may also be necessary to reduce ground speed and/or push the lawnmower over the area a second time. For extremely heavy cutting, reduce the width of cut by overlapping the previously cut path & mow slowly. For best results, adjust the cutting height to suit the mowing conditions. Do not try to remove too much grass in one pass.


Adjustment of the cutting height is made centrally. Move the lever outwards to release it from the locating notch. Move the lever towards the top to lower the cutting height & downwards to the higher cutting heights. Always return the lever to the locating notch to set the desired cutting height.

Make sure the handle fits snugly and securely.




MOWING YOUR LAWN

For best results, cut your lawn in alternative directions, switching direction each time you cut. Ensure you cut your lawn at the same height. Slightly overlap your cutting lines.

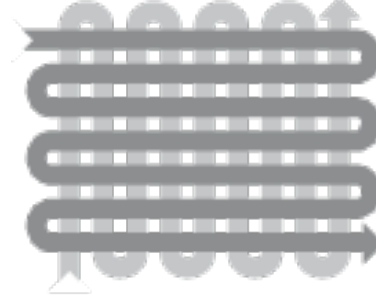

CUTTING ON SLOPES

When cutting on slopes, ensure your footing is secure, the grass is not wet and the machine is used across the slope and not up and down the slope. The slope gradient should not exceed 20°.

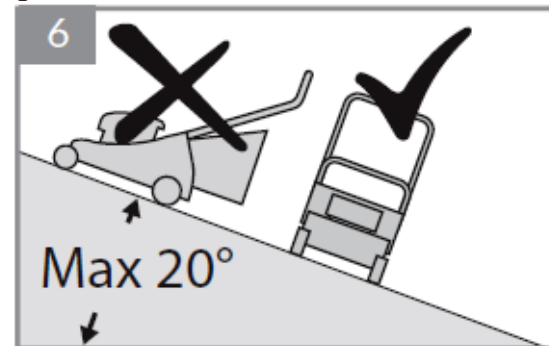

KEEP BYSTANDERS CLEAR

Clear the area to be mowed of any stones, sticks, wire & debris before beginning. Always ensure that you mow a safe distance away (15 metres) from adults, children & animals.





MAINTENANCE & STORAGE

IMPORTANT - Regular, careful maintenance is essential for keeping the safety level & original performance of the machine unchanged over time.

1. Keep all nuts, bolts & screws tight to be sure the equipment is in safe working condition. Regular maintenance is essential for safety and performance.
2. Do not use the equipment with worn or damaged parts, this can be dangerous. Parts are to be replaced and not repaired. Use genuine spare parts. Parts that are not of the same quality can damage the equipment and create safety hazards.
3. Wear strong work gloves when removing and reassembling the blade.
4. Check the blade's balance after sharpening.
5. Check the grass flap and grass collector frequently for wear and deterioration.
6. Whenever the machine is to be handled, transported or tilted you must:
 - ✓ Wear strong working gloves;
 - ✓ Grasp the machine at the points that offer a safe grip, taking account of the blades, the mower's weight and its distribution

SERVICE INTERVALS



Before and after each mowing session, check that the blade, its attachment bolts and driveshaft are not damaged or excessively worn.

After every 25 hours or once a year minimum before winter lay-up, visit your local approved service dealer to sharpen & balance the blade. Replace worn or damaged blades.

CLEANING

Always Remove the battery & safety key from the machine when cleaning.

Carefully clean the underside of the deck with a stiff brush after each cut; remove the grass debris & mud accumulated inside the deck to prevent it drying. **Do not use water on any part of the main machine!**

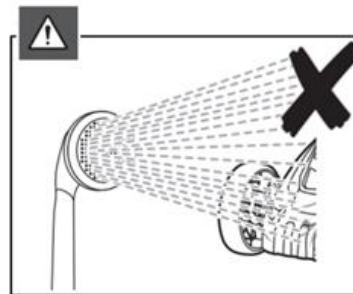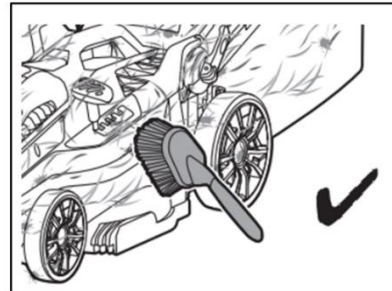

GRASS COLLECTOR CLEANING

Pores in the grassbox can become filled with dirt & dust during use & will collect less grass. To prevent this, regularly brush or hose the catcher off with water & let dry before using.

MOTOR HOUSING CLEANING

Keep the top of the motor housing vents clear and clean of grass clippings & dust. This will assist motor air flow and extend the machine life.

STORAGE

Always Remove the battery & safety key from the machine when storing.

For trouble free service, make sure the machine is clean & dry before storing. Please ensure the machine is stored away from direct sunlight.

Store indoors or in a safe, locked protected area during severe weather and winter months.

If storing for an extended period, inspect, clean and repair the machine if necessary.

Store in a clean, dry, dust free area.

Avoid storing beneath a tarpaulin or similar cover as it may cause condensation resulting in corrosion or seizure.

Ensure the machine is stored in a position, where any persons cannot step on to attempt to reach items up high, due to risk of movement.



BLADE MAINTENANCE



The cutting blade will continue to rotate after the motor is switched off. Slicing is possible if care is not taken. Wear appropriate hand coverage.

Remove the battery & safety key from the machine. Clean the top & underside of the deck with a stiff brush, before any maintenance is undertaken to the blade.

REMOVE THE BLADE

Block the rotation of the blade, using a good-sized piece of wood, which the blade cannot cut.

Hold the blade using gardening gloves (not provided) & spanner wrench (not provided) rotating anti-clockwise.

Remove the bolt, washer & blade. Dispose of the old blade responsibly.

Never try to straighten a bent blade.

Replace a damaged worn or bent blade as soon as possible. Use only genuine parts or those approved by Webb.

Excessive vibration when mowing is a good indication of a problem with the cutting system.



WARNING

Vibration from a bent or damaged blade can cause costly damage to the mower. Working with an excessively worn blade wastes fuel and can lead to injury if the blade becomes detached from the machine.

BLADE SHARPENING

For best mowing results, sharpen the edges & balance the blade at least once a year by an approved service dealer.

MOUNTING THE BLADE

Check all components are present, clean and in good condition.

Check the correct alignment with the blade boss. The blade must be positioned precisely.


Attach a new blade, fastening with the washer & blade bolt. Ensure that the blade is correctly positioned on the blade boss and then firmly tighten the bolt, clockwise.

TROUBLE SHOOTING

ISSUE	CORRECTION
Motor does not run	<ol style="list-style-type: none"> 1. Check the battery & safety key are inserted correctly. 2. Start on short grass or on an area which has already been mown. 3. Clean the discharge chute/housing, the blade must rotate freely. 4. Correct the cutting height.
Reduced motor power	<ol style="list-style-type: none"> 1. Correct the cutting height. 2. Clean the discharge chute/housing, the blade must rotate freely. 3. Blade is blunt. Have re-sharpened or replaced by an approved service dealer.
The grass collector does not fill completely.	<ol style="list-style-type: none"> 1. The mulch plug is in position, remove for collection. 2. Correct the cutting height. 3. Allow the lawn to dry. 4. Blade is blunt. Have re-sharpened or replaced by an approved service dealer. 5. Clean the air vents on the motor housing. 6. Clean the discharge chute/housing, the blade must rotate freely.



PARTS DIAGRAM - MACHINE

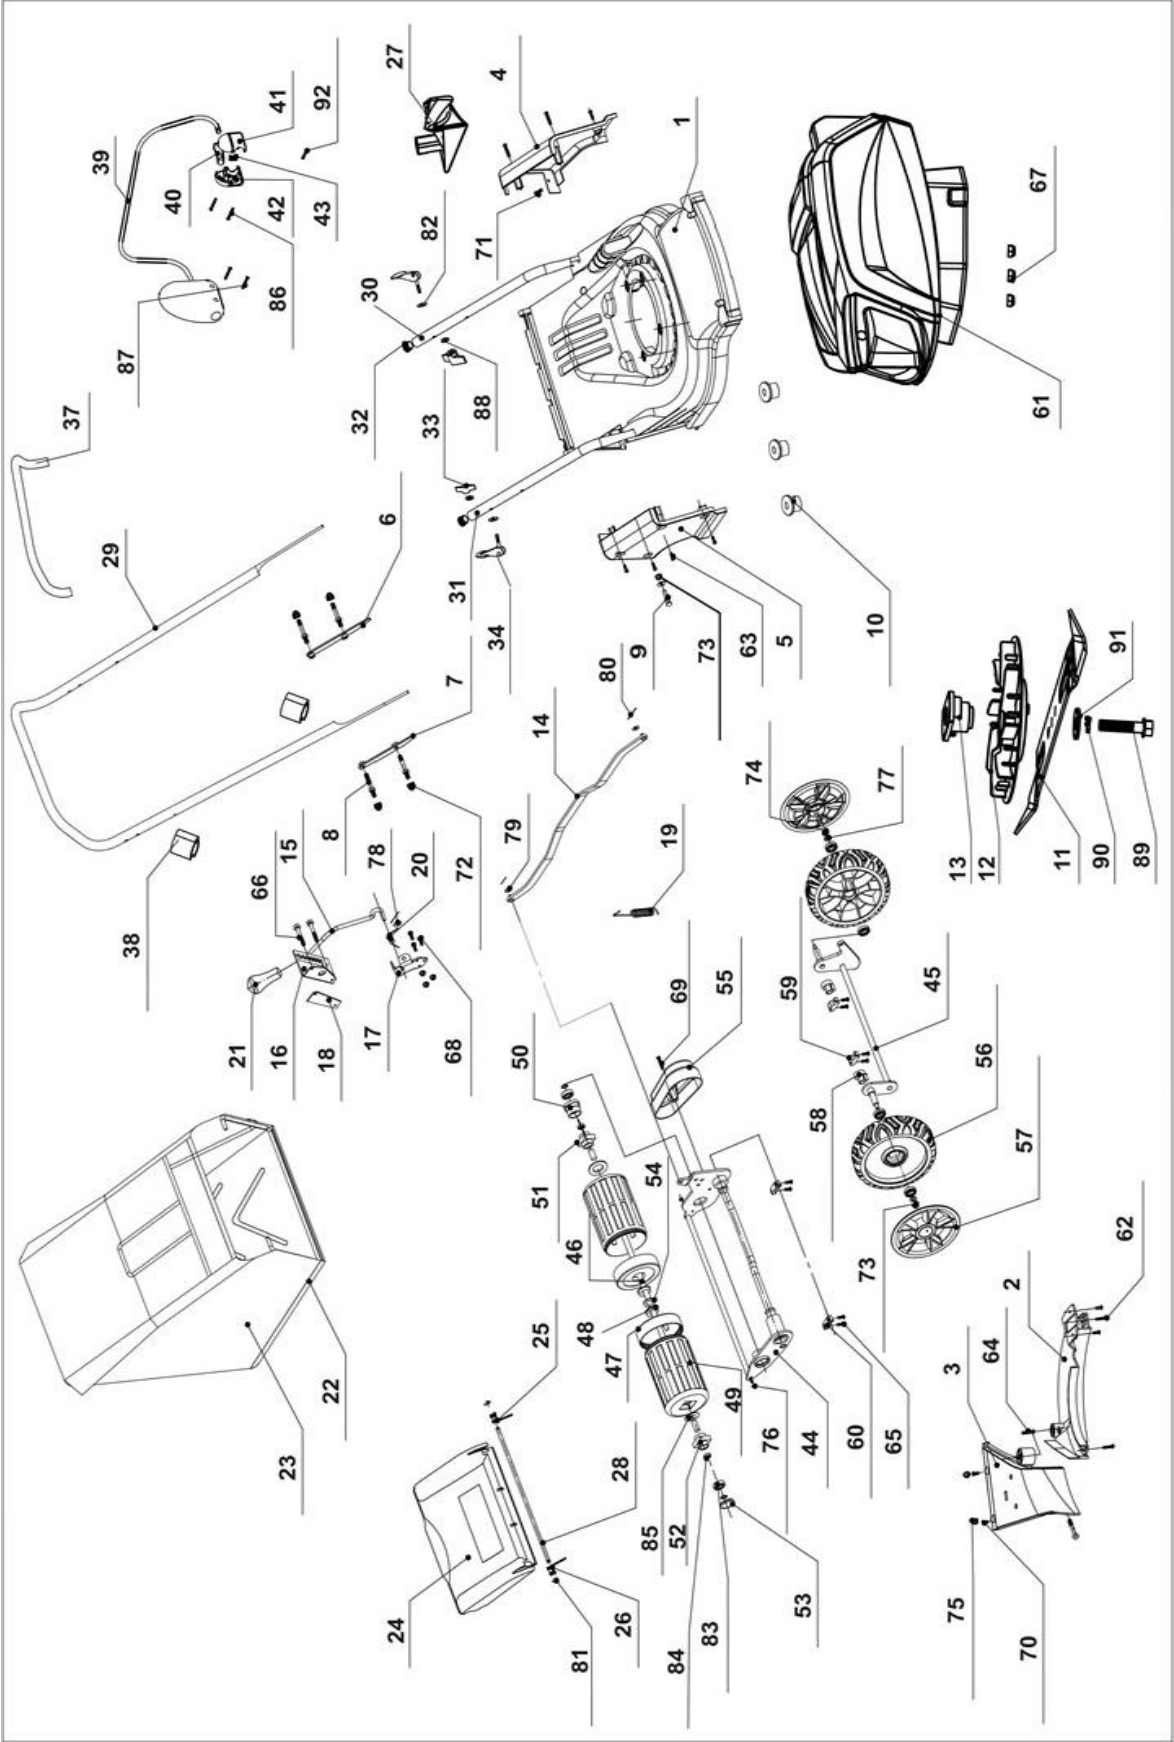

PARTS LIST – MACHINE



Item No.	Part No.	Description	Qty.	Item No.	Part No.	Description	Qty.
1	WE106-12	Cutting Deck	1	24	WE106-56	Rear Flap	1
2	WE106-3	Belt Cover	1	25	WE106-60	Left Rear Flap Spring	1
3	WE106-1	Grass Guide Cover	1	26	WE106-58	Right Rear Flap Spring	1
4	WE106-15	LH Lower Cover	1	27	WE106-61	Mulch Plug	1
5	WE106-17	RH Lower Cover	1	28	SAS05-040005	Rear Flap Axle	1
6	WE106-39	Handle Fix Plate Left	1	29	WE106-44	Upper Handle with 37	1
7	WE106-42	Handle Fix Plate Right	1	30	WE106-34	Left Lower Handle	1
8	WE106-40	Double-ended Bolt	4	31	WE106-35	Right Lower handle	1
9	WE106-19	Connecting Bar Extension Spring	1	32	WE106-38	Lower Handle Rubber Cover	2
10	WE107-12	Bush	3	33	WE127-51072-110	Flash Nut	2
11	WE128-52178	Cutting Blade	1	34	WE128-50477-110	Quick Release Handle	2
12	WE127-51552	Fan	1	37	N/A	Soft Grip on 29	1
13	WE127-51553	Blade Boss	1	38	WE127-SL42T-05107	Round Cable Clamp	2
14	WE106-108	Connecting Bar	1	39	WE127-51766	Brake Lever	1
15	WE106-109	Height Adjustment Bar	1	40	WE127-479372	Brake Lever Bush	1
16	WE106-110	Height Adjustment Board	1	41	WE127-479373	Left Brake Lever Fixing Bracket	1
17	WE106-105	Height Adjustment Frame	1	42	WE127-479374	Right Brake Lever Fixing Bracket	1
18	WE106-111	Height Adjustment Fixed Plate	1	43	WE127-479375	Fixing Bracket Spring	1
19	WE106-62	Connecting Bar Spring	1	44	WE106-76	Rear Axle	1
20	WE106-106	Height Adjustment Spring	1	45	WE106-96	Front Axle	1
21	WE106-107	Height Adjustment Handle	1	46	WE106-72	Roller Axle	1
22	WE106-53	Grass Bag Frame	1	47	WE106-69	Roller Cover	2
23	SAXX101337	Grass Bag	1				




PARTS LIST – MACHINE

Item No.	Part No.	Description	Qty.	Item No.	Part No.	Description	Qty.
48	WE106-70	Nylon Bush	2	70	SAXX101310	Bolt M6x16	2
49	WE106-68	Roller	2	71	SAXX03020020026	Bolt M5x16	1
50	WE106-65	Roller Bearing Housing	1	72	WE106-41	Cap Nut M8	4
51	WE106-66	Left One-way Bearing Housing	1	73	WE479283	Flange Nut M8	2
52	WE106-74	Right One-way Bearing Housing	1	74	WE51309	Flange Nut M8 Left-Hand Thread	1
53	WE106-75	Hub Cap	1	75	WE479268	Flange Nut M6	2
54	WE106-71	Roller Axle Bush	1	76	WE106-102	Lock Nut M6	5
55	WE106-81	Sprocket Cover	1	77	WE107-85	Big Washer 8	3
56	WE106-95	Front Wheel	2	78	WE106-101	Flat Washer 8	1
57	WE106-93	Wheel Trim	2	79	WE106-104	Small Washer 10	2
58	WE106-97	Front Axle Bush	2	80	WE106-100	Pin 2x20	3
59	WE106-98	Front Axle Gland Bush	2	81	WE106-57	Clip 6	2
60	WE106-88	Rear Axle Gland Bush	2	82	SA479580	Clip 5	2
61	WE128-52181	LD40V500W Motor	1	83	WE106-64	Bearing 6001-2RS	6
62	WE106-4	Self-Tapping Screw 5x20F	4	84	SAXX101358	Sealed Washer 12.3x3.4x3.4	2
63	WE106-18	Self-Tapping Screw 5x35F	3	85	WE106-67	One-way Needle Bearing HF-1216	2
64	SAXX101309	Self-Tapping Screw 5x50F	5	86	SA479288	Self-Tapping Screw ST4x15F	2
65	WE106-2	Self-Tapping Screw 5x30F	9	87	WE127-479296	Self-Tapping Screw ST4x25F	2
66	WE106-108	Bolt M6x25	2	88	WE479317	Flat Washer ϕ 8.5x ϕ 18x2	2
67	WE479257	Non-metal Lock Nut M8	3	89	WE128-52020	Bolt M10x45	1
68	WE106-14	Flange Bolt M6x16	3	90	WE50630	Spring Washer 10	1
69	WE107-02	Bolt M6x40	1	91	SA479581	Flat Washer ϕ 10.5x ϕ 30x3	3
				92	WE127-479324	Screw M3x10	2



PARTS DIAGRAM – MOTOR

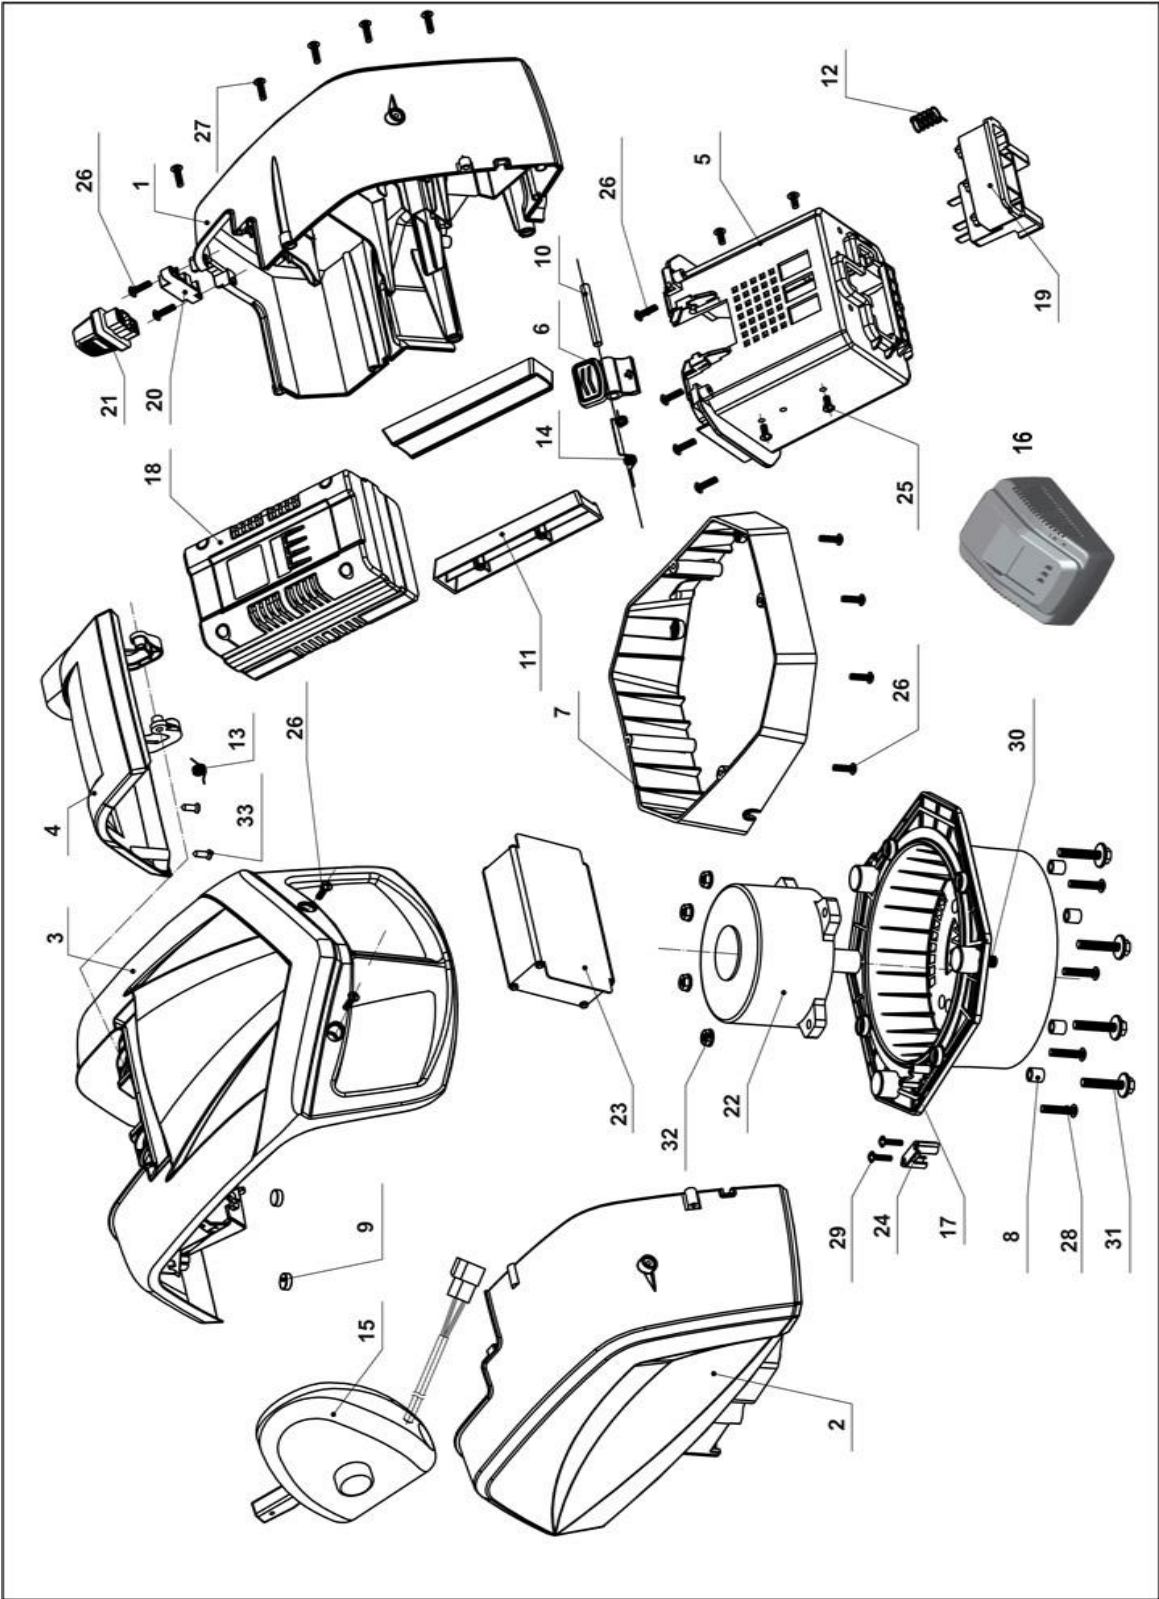



PARTS LIST – MOTOR

Item No.	Part No.	Description	Qty	Item No.	Part No.	Description	Qty
1	WE128-51541	Left Housing	1	18	WES40VB	40V Battery	1
2	WE128-51542	Right Housing	1	19	WE128-52024	Output Terminal	1
3	WE128-51543	Upper Housing	1	20	WE128-51922	Groove Board	1
4	WE128-51544	Transparent Cover	1	21	WE128-51926	Safety Key	1
5	WE128-51545	Battery Housing	1	22	WE128-51983	Motor	1
6	WE128-51546	Battery Release Lever	1	23	WE128-51984	Motor Drive	1
7	WE128-51547	Lower Housing	1	24	SA479200-01	Cable Clamp	1
8	WE128-51551	Motor Bracket Bush	1	25	WE128-479250	Self-Tapping Screw ST4x9F	6
9	WE128-51554	Magnetic Iron	2	26	SA479288	Self-Tapping Screw ST4x15F	16
10	WE128-51555	Battery Release Axle	1	27	SA479297	Self-Tapping Screw ST4x20F	13
11	WE128-51556	Battery Guide	2	28	WE128-51913	Self-Tapping Screw ST5x25F	4
12	WE128-51561	Battery Compressed Spring	1	29	WE479298	Self-Tapping Screw ST3.5x20F	2
13	WE128-51562	Transparent Cover Torsion Spring	1	30	WE128-52258	Bolt M8x45	3
14	WE128-51563	Battery Release Torsion Spring	1	31	WE128-51999	Bolt M6x35	4
15	WE128-51780	Safety Switch	1	32	WE479268	Nut M6	4
16	WES40VC	40V Charger	1	33	WE128-51916	Self-Tapping Screw ST4.2x13 C Type	2
17	WE128-51915	Motor Bracket	1				



EC DECLARATION OF CONFORMITY

We Handy Distribution Ltd - SN3 5HY (Importer) declare that the product:

Designation: 40v Lithium-ion battery powered 43cm Rotary Rear Roller Lawnmower.

Model(s): WERR17LIP

Product Number: 1938144001

Type/Serial No: As per rating label on machine

Complies with the following directives:

Machinery Directive – 2006/42/EC

EMC Directive – 2014/30/EU

Noise Directive – 2000/14/EC Annex VI & 2005/88/EC

The conformity assessment procedure followed was in accordance with:

EN 60335-2-77:2010, EN60335-1:2012/A11:2014, EN 62233:2008

EN 55014-1:2006/A2:2011, EN 55014-2:2015, EN 61000-3-2:2014,

EN ISO 3744:1995, ISO 11094:1991

Guaranteed Sound Power Level: 96 dB(A)

Vibration (Max.): 2.37m/s², K=1.5m/s²

Notified Bodies: TÜV SÜD Product Service GmbH

Address(es): Zertifizierstelle, Ridlerstraße 65, 80339 München, Germany

Authorised signatory & technical file holder

Date: 30 May 2017

Signature:

Name:

Mr Simon Belcher

Position:

Managing Director

Company:

Handy Distribution Ltd

Address:

Murdock Rd, Dorcan, Swindon, Wiltshire, SN3 5HY.



This Service Book is provided with your Webb, to help you look after your purchase to our recommendations and enable you to take advantage of the 2 year conditional manufacturer domestic warranty*.

* Commercial/Professional & Hire users receive a 90 day warranty

Present this service book to your authorised Webb repair dealer, whenever a service or a warranty appraisal is required.

The booklet is applicable to the following products, in the UK only:

- Ride On Lawn Tractors
- Cylinder Lawnmowers
- Petrol Rotary Lawnmowers
- Petrol Hand Held Range

Please register your machine using the following pages or at www.webblawnmowers.co.uk. By registering your machine, you agree to maintain the machine in accordance with the service schedules specified in this manual and services duly recorded. You may be asked to produce this booklet as proof of servicing in the event of a claim. Proof of purchase should also be kept as a reference.

Ensure you have the following information available from your machine product label. The two examples below can be found on your machine:



1. Model Number

2. Serial & Product Number

Please complete using BLOCK CAPITALS.
Sections marked* must be completed to validate Warranty.

1. Users Statement of Warranty

Each new machine is warranted against defective material or assembly of material under normal usage. The warranty applies to the original purchaser, is not transferable and covers faulty parts and the labour involved in replacing and repairing those parts, which are of original manufacture.

2. Period of Warranty

2 year conditional warranty from the original date of sale to the first domestic user.

90 days from the original date of sale to the professional/commercial or for hire user.

Engine warranty as per the engine manufacturer's warranty, which will be supplied with the machine.

90 days from the original date of sale for Replacement Spare Parts

All machines' must be serviced within the first 14 months from the original date of purchase, to qualify for a second year parts & labour warranty, details of the service must be recorded in the service record within this manual.

A reduced warranty period of 90 days applies to those items which are subject to normal wear and tear and in normal use, will need replacement or adjustment.

These items are chargeable after 90 days of ownership.

Filters
Tyres / Wheels
Drive chains and belts
Brake & clutch friction components
Control cable & starter cords
Fluids & lubricants
Spark plugs
Blades (Lawnmowers & Brushcutters)
Cutter bars (Hedgecutters)
Drive & clutch cable surfaces
Nylon Lines (Line Trimmers)
Carburettor cleaning
Bearings
Bushes
Electric cable
Grass collectors

3. Not covered by this warranty

(a) The warranty policy does not cover any depreciation or damages caused by ordinary wear, rusting or corrosion, lack of correct maintenance or operation, misuse, abuse, lack of transportation or accident.

(b) The warranty policy does not cover any costs necessary for the standard periodic maintenance services instructed by the operators manual, or service parts replacement which would include oil, filters, tyres, belts, brake linings, fuses, blades, seals and other service parts unless it can be proven that the item has evidence of faulty manufacture.

(c) The warranty policy will not cover failure or damage caused as a result of parts or accessories being modified without the written approval of GJ Handy & Co Ltd.

(d) The warranty policy will not cover the unit if non-genuine parts have been fitted and as a result damage has occurred to the unit.

(e) The warranty policy is non-transferable and is only applicable to the original purchaser.

4. Disclaimer

(a) This warranty is only a remedy for defect of products. GJ Handy & Co Ltd will never warranty in terms of the merchantability or the fitness for a particular purpose.

(b) No person is authorised to make any warranties, representations or promises, expressed or implied, on behalf of GJ Handy & Co Ltd, or to modify the terms conditions or limitation of this warranty policy in any way.

(c) Neither GJ Handy & Co Ltd nor any company affiliated with GJ Handy & Co Ltd shall be liable in any event or manner whatsoever for incidental or consequential damages or injuries, including, but not limited to, loss of crops, loss of profit, out of pocket expenses or profits, rental of substitute equipment or other commercial losses.

5. General

(a) Most warrantable failures show up within the first few weeks of use. These failures are usually straightforward and warranty assessment is relatively easy.

(b) Failures relating to cutter decks and belts need careful investigation, as the cause may not always be straightforward.

Look for damage to blades and pulleys especially when the cutter belt or blade boss have snapped or cracked as this could be due to impact damage.

(c) Customers should always refer to the operator/instruction manual when any disputed problem arises, you will find most areas covered within the manual.

Protecting your machine

Maintenance

Regular maintenance of your Webb machine is essential to ensure it operates, safely, efficiently and therefore reducing the environmental impact.

It is the owner's responsibility to ensure that their Webb machine is maintained at specific intervals. Any approved Webb service dealer can undertake a service, which are specialised in our products and will be aware of your particular machine and any technical updates which will save valuable time & money.

If you are using your machine in dry, dusty or high temperatures, you will need to service the machine more regularly.

Fuel

Due to ongoing efforts by fuel companies to reduce emissions, unleaded petrol will oxidize & deteriorate in storage overtime, leaving residue from detergent components.

Fuel deterioration problems may occur when petrol is stored for over 30 days. If you are planning to store fuel for over 30 days, we recommend you add Handy Parts Sure-Start fuel stabilizer to fresh fuel after purchasing. Sure-Start cannot reconstitute stale fuel.

Storage

When storing your machine for an extended period, we do recommend that you follow the instructions of engine instruction manual.

Always store the fuel in a clean, approved and sealed container. If the container is steel, ensure it is not corroded.

If the container is not filled to its recommended capacity, air can accelerate fuel deterioration.


Always store fuel away from direct sunlight, in a dark, cool environment.

Your servicing Webb approved dealer will stamp & date the below relevant sections, when the correct service actions have been completed.
PLEASE ENSURE THE SERVICE BOOK IS AVAILABLE FOR THE DEALER, DURING SERVICE WORK.

1st Service


This must be stamped by an approved service dealer to qualify for a free second year warranty.

12 Months

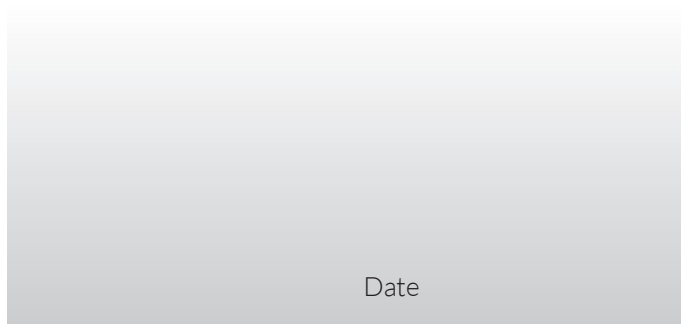


Date

24 Months

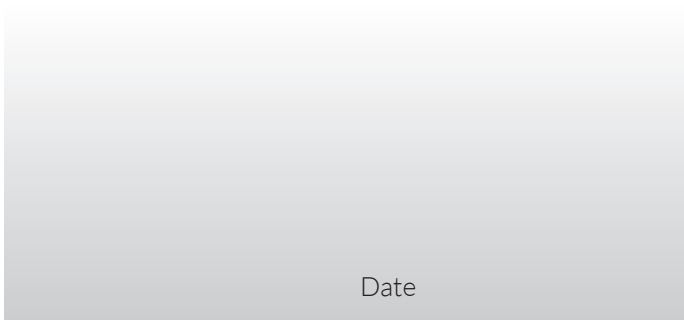

Date

36 Months

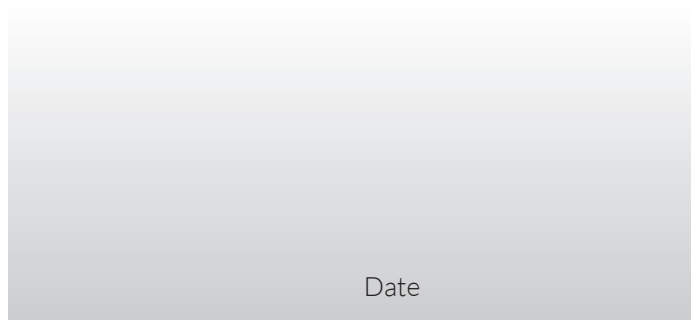

Date

Service Record

48 Months

Date

60 Months

Date

72 Months

Date

84 Months

Date

96 Months

Date

108 Months

Date

120 Months

Date

132 Months

Date

Product Information (* Compulsory)

If you have registered online, this form is not necessary.
PLEASE POST THIS COPY TO THE ADDRESS OVERLEAF

*Model No:	
*Product No:	
*Serial No:	
*Date of Purchase:	

Personal Information (* Compulsory)

*Title		*Forename		*Surname	
--------	--	-----------	--	----------	--

*House Number		*House Name	
*Address 1			
*Address 2			
*Town			
*County			
*Postcode			

Home Tel		Mobile Tel	
Email			

Age	18 to 25		26 to 35		36 to 45		46 to 60		61 to 80		81 & over	
-----	----------	--	----------	--	----------	--	----------	--	----------	--	-----------	--

*Dealer Stamp (Complete Address)



*Selling Retailer (If dealer stamp not available)

*Dealer Name	
*Dealer Address	
*Date of Purchase	

*Usage	Domestic Use		Commercial/Professional/Hire Use	
--------	--------------	--	----------------------------------	--

Webb Lawnmowers privacy commitment to machine owners: Thank you for completing this form. The information supplied, helps us to improve the products & services we provide, including information that we believe is relevant to your and/or your machine. We value your trust by giving us this information about yourself and we are committed to protecting your privacy. From time to time Webb, its associated companies, authorised dealers or third parties working on our behalf may wish to contact you regarding our products, services, offers, technical improvements or just opinions, which may be used for marketing, research or analysis purposes.

If you DO NOT wish to be contacted by either of the following methods, please tick the relevant box POST TELEPHONE

If you would like us to contact you by Email, please tick this box

You may give Webb Lawnmowers notice in writing at any time that you no longer wish to receive direct marketing communications

Webb Lawnmowers
Murdock Road
Dorcan
Swindon
Wiltshire
SN3 5HY