 




Erbauer

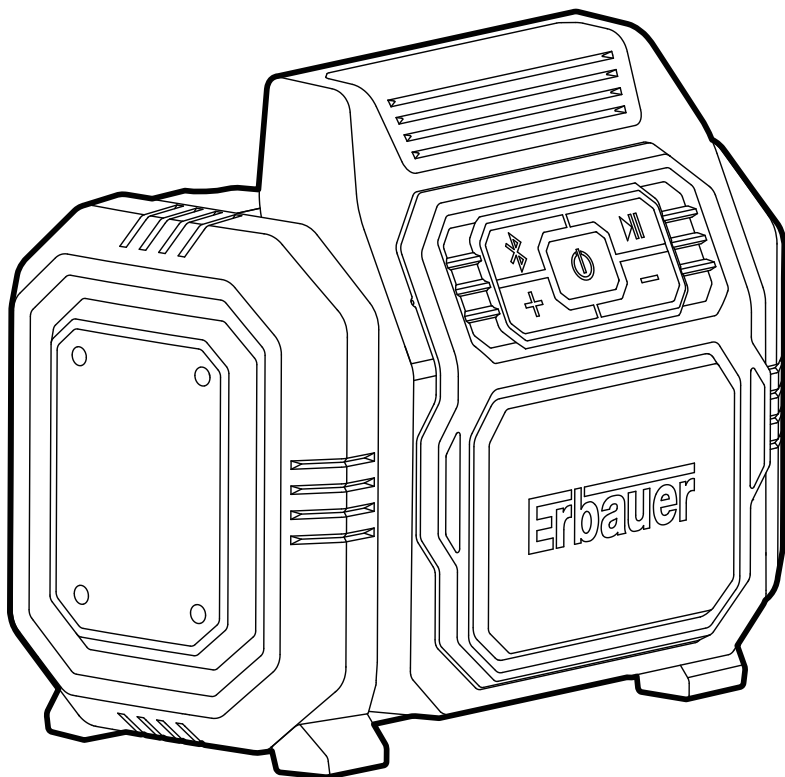

EAN. 3663602440116

ESP18-Li

ORIGINAL INSTRUCTIONS



Safety instructions



Product description



Assembly



Use



+



Care & maintenance



 
Guarantee



Declaration of Conformity












WARNING! Please read all safety warnings carefully and be sure that they are fully understood before handling the tool.

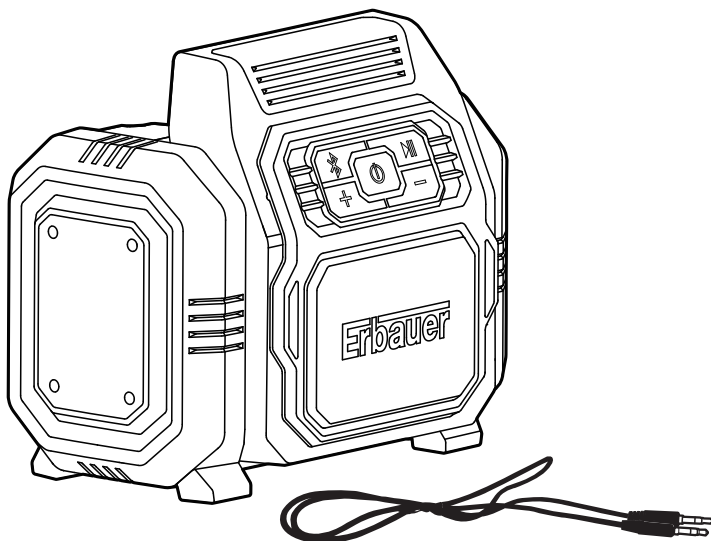



PRODUCT DESCRIPTION

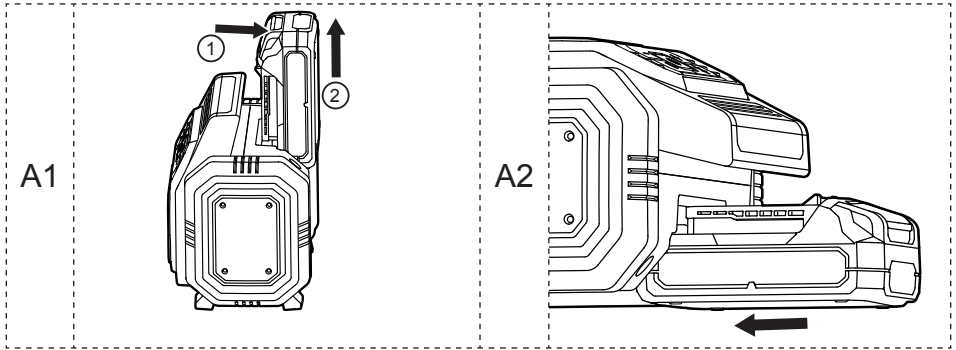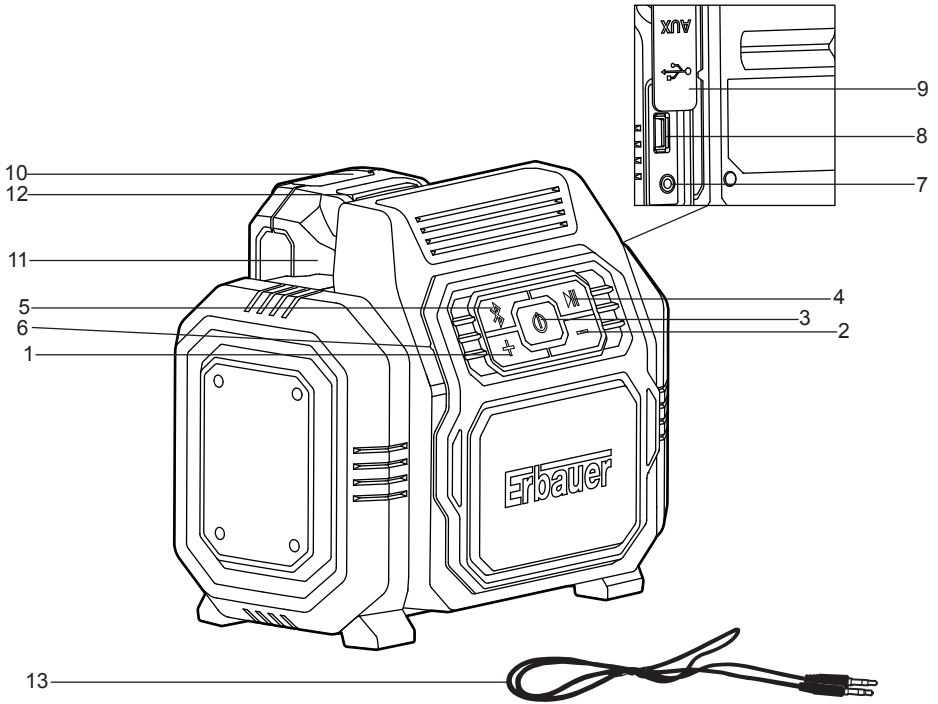  

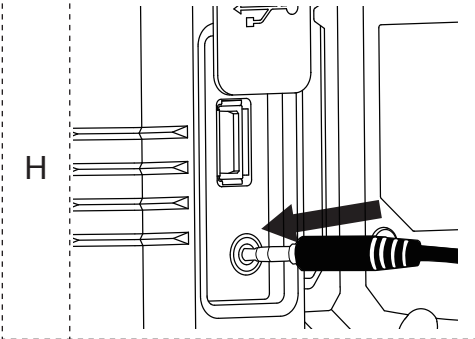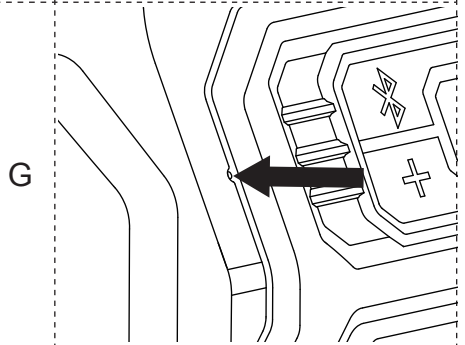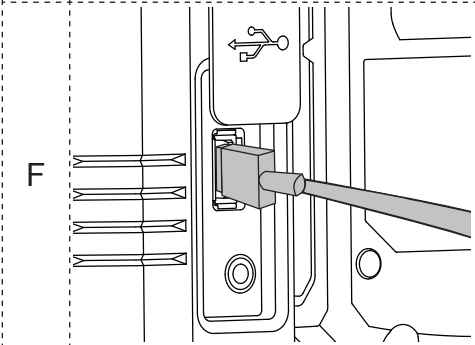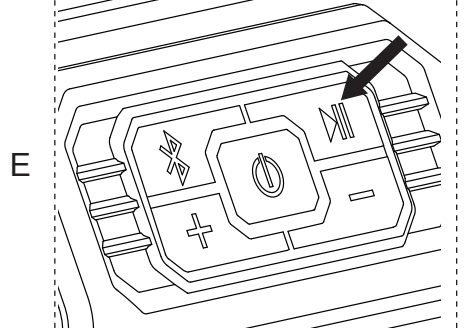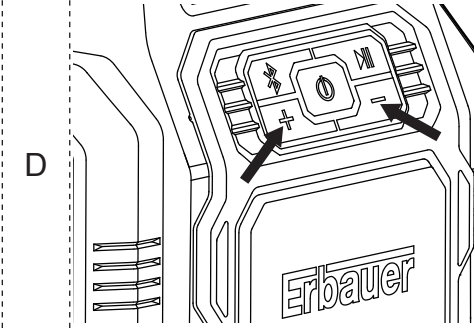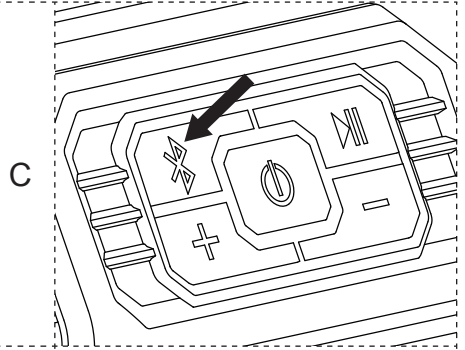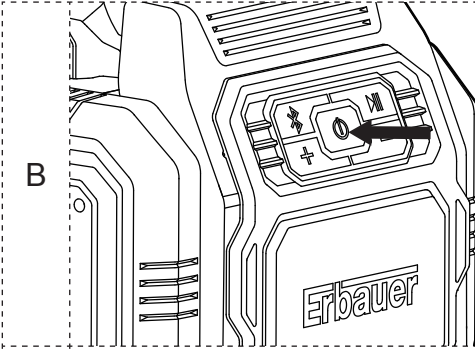       



SAFETY INSTRUCTIONS

GENERAL PRODUCT SAFETY WARNINGS



WARNING! Read all safety warnings, instructions, illustrations and specifications provided with this product. *Failure to follow all instructions listed below may result in electric shock, fire and/or serious injury.* Save all warnings and instructions for future reference.

This product can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the product in a safe way and understand the hazards involved. Children shall not play with the product. Cleaning and user maintenance shall not be made by children without supervision.

Never expose the product to dripping or splashing, no objects filled with liquids, such as vases, shall be placed on it.

No flame sources, such as lighted candles, should be placed on it.

Never disassemble or modify this product in any way. Refer all servicing to qualified service personnel.

BATTERY PRODUCT USE AND CARE

- a. **Recharge only with the charger specified by the manufacturer.** *A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.*
- b. **Use product only with specifically designated battery packs.** *Use of any other battery packs may create a risk of injury and fire.*
- c. **When battery pack is not in use, keep it away from other metal objects, like paper clips, coins, keys, nails, screws or other small metal objects, that can make a connection from one terminal to another.** *Shorting the battery terminals together may cause burns or a fire.*
- d. **Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help.** *Liquid ejected from the battery may cause irritation or burns.*
- e. **Do not use battery pack or tool that is damaged or modified.** *Damaged or modified batteries may exhibit unpredictable behaviour resulting in fire, explosion or risk of injury.*
- f. **Do not expose a battery pack or tool to fire or excessive temperature.** *Exposure to fire or temperature above 130 °C may cause explosion.*
- g. **Follow all charging instructions and do not charge the battery pack or tool outside the temperature range specified in the instructions.** *Charging improperly or at temperatures outside the specified range may damage the battery and increase the risk of fire.*

ADDITIONAL SAFETY WARNINGS FOR BATTERY

- a. *Do not connect the positive terminal and negative terminal of the battery to each other with any metal object (such as wire).*
- b. *Do not carry or store battery together with necklaces, hairpins or other metal objects.*
- c. *Do not pierce the battery with nails, strike the battery with a hammer, step on the battery or otherwise subject it to strong impacts or shocks.*
- d. *Do not solder directly onto the battery.*
- e. *Do not expose battery to water or salt water, or allow the battery to get wet.*
- f. *Do not disassemble or modify the battery.*
- g. *Do not place the battery in or near fire, on stoves or other high temperature locations. Do not place the battery in direct sunlight, or use or store the battery inside cars in hot weather.*
- h. *Do not place the battery in microwave ovens, high-pressure containers or on induction cookware.*
- i. *If you intend to store a battery for a period without use then store battery at room temperature (19°C to 25°C), charged to about 30 – 50% of capacity. When storing for very long periods boost charge the battery once per year to prevent over discharge.*
- j. *Never service damaged battery packs. Service of battery packs should only be performed by the manufacturer or authorized service providers.*



PRODUCT DESCRIPTION

1. Volume + button
2. Volume - button
3. ON/OFF button
4. Play/Pause Button
5. Bluetooth Pairing Button/Indicator Light
6. Built-in microphone
7. Aux Input Port
8. USB Output Port
9. Dustproof Cover
10. Power bar button
11. Battery pack (not included)
12. Battery pack release button
13. Aux Cable

01 TECHNICAL SPECIFICATIONS

Rated voltage:	18 Vdc
USB output voltage:	5 Vdc
USB output current:	2.1 A
RF frequency range:	2402-2480MHz
Max RF power output:	3.09dBm
Protection degree:	IPX0
Net weight :	0.7 kg (without battery pack)
Ambient temperature range for speaker and battery use: -10°C to 40°C	

For use with battery pack and charger as below:

Battery pack model: EBAT18-Li-2 / EBAT18-Li-4 / EBAT18-Li-5 / EHPB18-Li-4
EHPB18-Li-8

Charger model: EC18-Li / EFC18-Li / EMC18-Li

RATING LABEL EXPLANATION

ESP18-Li = MODEL NUMBER

E = ERBAUER
SP = SPEAKER
18 = 18 V d.c.
Li = LITHIUM ION



ASSEMBLY

01 SYMBOLS



Caution / Warning.



Read the instruction manual.



Switch the product off and remove the battery pack to disconnect from the power supply before assembly, cleaning, adjustments, maintenance, storage and transportation.



Do not expose to rain or wet conditions.



Do not dispose of battery packs in rivers or immerse in water.



Do not dispose of battery packs in fire. They will explode and cause injury.



Do not expose battery packs to heat in excess of 40°C




Keep Cool Battery Technology



USB output port

yyWxx

Manufacturing date code: Year of manufacturing (20yy) and week of manufacturing (Wxx)

 The product complies with the applicable European directives and an evaluation method of conformity for these directives was done.



WEEE symbol. Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or local store for recycling advice.

02 UNPACKING

Unpack all parts and lay them on a flat, stable surface.

- Remove all packing materials and shipping devices, if applicable.
- Make sure the delivery contents are complete and free of any damage. If you find that parts are missing or show damage do not use the product but contact your dealer. Using an incomplete or damaged product represents a hazard to people and property.
- Ensure that you have all the accessories and tools needed for assembly and operation. This also includes suitable personal protective equipment.



WARNING! The product and the packaging are not children's toys! Children must not play with plastic bags, sheets and small parts! There is a danger of choking and suffocation!

03 ASSEMBLING THE MACHINE

ASSEMBLY

CHARGING YOUR BATTERY PACK

 








The battery has been shipped in a low charge condition. Charge it fully before first use. Refer to the charger instruction manual for the details.

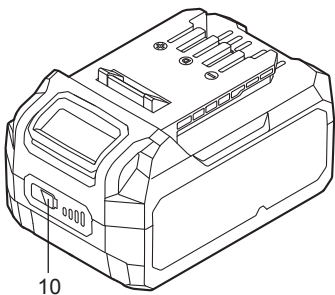TO REMOVE OR INSTALL THE BATTERY PACK (A1, A2)

Depress the battery pack release button to release and slide the battery pack out from your tool. After recharge, slide it back into your tool. A simple push and slight pressure will be sufficient.

BATTERY PACK POWER BAR

The Li-Ion battery pack (11) is equipped with a POWER BAR which is used to give an indication of the battery pack's remaining charge. Press the POWER BAR button (10) to check battery charge as below. The LED will stay lit for approximately 5 seconds.

  Flash  On  Off	76-100% Charge	
	51-75% Charge	
	26-50% Charge	
	5-25% Charge	
	under 5% Charge	



USE

01 INTENDED USE

This product is intended to import audio sound from other devices such as mobile phones, MP3 players, CD players etc. for playing music through Bluetooth or AUX cable, it can also be used as a speakerphone during phone calls.

02 OPERATION

ON / OFF SWITCH (B)

To turn on the Bluetooth speaker, press the ON/OFF button (3); the Bluetooth-pairing button indicator light (5) will illuminate and begin to flash to indicate that the Bluetooth speaker is active.

To turn off the Bluetooth speaker, press the ON/OFF button again.

CONNECTING TO BLUETOOTH (C)

Turn on the Bluetooth speaker. The speaker will default to Bluetooth pairing mode and the indicator light (5) will flash until it has successfully paired or has timed out.

Activate the Bluetooth function on your Bluetooth device such as mobile phone, computer etc., refer to the instructions of your device if necessary.

Place your Bluetooth device close to the speaker. The distance should not exceed 1 m.

Select Erbauer ESP18-Li (name of the speaker) as the default device.

The connection should establish within a few seconds and the Bluetooth pairing button indicator light (5) will stop flashing.

If previously paired to the desired device, the speaker will automatically reconnect to the same device when the speaker is turned on.

To pair the speaker to a different device, press and hold the Bluetooth-pairing button (5) for 3 seconds until the blue indicator light flashes. The speaker will then be in Bluetooth pairing mode and can be connected to a different device. It will sound until new connection is done.

VOLUME (D)

Use the Volume + button (1) and Volume - button (2) to increase or decrease the volume of the speaker, respectively.

PLAY/PAUSE BUTTON (E)

You can pause the music by pressing the Play/Pause Button (4). Press the Play/Pause Button again to continue playing music.

USB OUTPUT PORT (F)

When a battery pack is installed and the speaker is turned on, the USB output port (8) on the Bluetooth speaker supplies a charging point suitable for your cell phone or other small USB device (5 Volt d.c., up to 2.1 Amp).



NOTE: Any device that uses more than 2.1A of DC electrical current will trip a self-resetting overload switch and disable the output. To reset the Bluetooth speaker, remove the device and turn on the Bluetooth speaker.

BUILT-IN MICROPHONE FOR HANDS-FREE CALLS (G)

You can listen through the speaker and speak through the built-in microphone (6) during phone calls after Bluetooth-pairing. To answer a phone call when your device is connected via Bluetooth, press the Play/Pause Button (4). To end the call, press the Play/Pause Button (4) again.

CONNECTING DIRECTLY TO AUX DEVICE (H)

Plug one end of the Aux cable(13) into AUX input port(7) and the other end to an MP3 player, CD player, or other audio device, making sure that they are properly connected. Turn on the Bluetooth speaker. The speaker will be in AUX mode and the indicator light will shine blue.



NOTE: In the absence of a connection to an Aux cable, the speaker will enter into Bluetooth pairing mode. When connected to an Aux cable, the speaker will change from Bluetooth pairing mode to AUX mode.



CARE & MAINTENANCE

MAINTENANCE

Your product requires no additional lubrication or maintenance. There are no user serviceable parts in your product. Never use water or chemical cleaners to clean your product. Wipe clean with a dry cloth. Always store your product in a dry place. Keep it clean. Keep all working controls free of dust.

RECYCLING AND DISPOSAL



Waste electrical products should not be disposed of with household waste.

Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.

For further information visit www.recycle-more.co.uk

DISPOSAL OF AN EXHAUSTED BATTERY PACK



To preserve natural resources, please recycle or dispose of the battery pack properly.

This battery pack contains Li-Ion batteries. Consult your local waste authority for information regarding available recycling and/or disposal options. Discharge your battery pack by operating your tool, then remove the battery pack from the tool housing and cover the battery pack connections with heavy-duty adhesive tape to prevent short circuit and energy discharge. Do not attempt to open or remove any of the components.

REPAIR

This product does not contain any parts that can be repaired by the consumer. Contact an authorised service centre or a similarly qualified person to have it checked and repaired.

STORAGE

- Switch the product off and remove the battery pack.
- Clean the product as described above.
- Store the product and its accessories in a dark, dry, frost-free, well-ventilated place.
- Always store the product in a place that is inaccessible to children.
- We recommend using the original package for storage or covering the product with a suitable cloth or enclosure to protect it against dust.

TRANSPORTATION

- Switch the product off and remove the battery pack.
- Attach transportation guards, if applicable.
- Always carry the product by its handle.
- Protect the product from any heavy impact or strong vibrations which may occur during transportation in vehicles.
- Secure the product to prevent it from slipping or falling over.



GUARANTEE

At **Erbauer** we take special care to select high quality materials and use manufacturing techniques that allow us to create ranges of products incorporating design and durability. That's why we offer a 2 year trade guarantee against manufacturing defects on our **Erbauer** products.

This product is guaranteed for 2 years from the date of purchase, if bought in store, delivered or bought online. You may only make a claim under this guarantee upon presentation of your sales receipt or purchase invoice. Please keep your proof of purchase in a safe place.

This guarantee covers product failures and malfunctions provided the **Erbauer** product was used for the purpose for which it is intended and subject to installation, cleaning, care and maintenance in accordance with standard practice and with the information contained above and in the user manual. This guarantee does not cover defects and damage caused by or resulting from:

- Normal wear and tear, including accessory wear
- Overload, misuse or neglect
- Repairs attempted by anyone other than an authorised agent
- Cosmetic damage
- Damage caused by foreign objects, substances or accidents
- Accidental damage or modification
- Failure to follow manufacturer's guidelines
- Loss of use of the goods

This guarantee is limited to parts recognised as defective. It does not, in any case, cover ancillary costs (movement, labour) and direct and indirect damage.

If the **Erbauer** product is defective during the guarantee period, then we reserve the right, at our discretion, to replace the item with a product of equivalent quality and functionality or to provide a refund.

This guarantee only applies to the country of purchase or delivery and is not transferrable to any other countries. This guarantee is non-transferrable to any other person or product. Relevant local law will apply to this guarantee.

Guarantee related queries should be addressed to a store affiliated with the distributor you purchased the **Erbauer** product from.

This guarantee is in addition to and does not affect your statutory rights relating to faulty goods as a consumer.



DECLARATION OF CONFORMITY



EU Declaration of Conformity

We
Kingfisher International Products B.V.
Rapenburgerstraat 175E
1011 VM Amsterdam
The Netherlands

Declare that the product:
 Erbauer 18V cordless speaker ESP18-Li
 Serial number 00001-99999

Complies with the essential health and safety requirements of the following directives:

Radio Equipment Directive (RED)2014/53/EU

References to the following harmonized standard were made:

EN 62368-1:2014+A11:2017

EN 62479:2010

EN 55032:2015+AC:2016,CLASSB

EN 61000-3-2:2014

EN 61000-3-3:2013

EN 55035:2017

Draft EN 301 489-1 V2.2.1 (2019-03)

Draft EN 301 489-17 V3.2.0 (2017-03)

EN 300 328 V2.1.1 (2016-11)

(EU) 2015/863 amending 2011/65/EU Restrictions of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment

Authorised signatory and technical file holder:

Kingfisher International Products B.V.
 Rapenburgerstraat 175E
 1011 VM Amsterdam
 The Netherlands

on: 18/09/2019

Eric Capotummino
 Group Quality Director

Manufacturer • Fabricant • Producent • Producător • Fabricante:

UK manufacturer:

Kingfisher International Products Limited
3 Sheldon Square London W2 6PX
United Kingdom
www.kingfisher.com/products

EU manufacturer:

Kingfisher International Products B.V.
Rapenburgerstraat 175E
1011 VM Amsterdam
The Netherlands

www.diy.com | www.screwfix.com | www.screwfix.ie

To view instruction manuals online,
visit www.kingfisher.com/products

Customer Helpline (Freephone)

UK 0800 324 7818 uk@kingfisherservice.com

Eire 1800 932 230 eire@kingfisherservice.com