



AV AUTO SELECTOR

28520
28520SP
28520R
28520HS

USER GUIDE

Philex Customer Careline 08457 573479

Setting up

Scart Input A (VCR2 / CAMERA / DVD RECORDER)

Connect any equipment that does not use a direct Scart to Scart connector (eg using Scart adaptors), or Scart equipment that does not have its own automatic switching voltage to Scart Input A. This includes cameras, camcorders, games consoles and karaoke machines.

Scart Input B

Connect equipment which connect using Scart to Scart cables. This equipment would have its own automatic switching voltage. This includes, DVD players, digital TV receivers (DTV) and satellite/ cable receivers (excluding recording devices – See Scart input C).

Scart Input C

Connect any recording equipment such as VCR's, DVD recorders (DVDR) or hard disc recorders (HDD).


Phono Output 1

Phono Output 1 (video, left and right audio) provides the same signals as the *TV/Monitor Scart output*. A second TV or another VCR can be connected here (using a 3 Phono to 3 Phono lead, or 3 Phono to Scart lead as appropriate). Use the audio Phono outputs (marked white for the left channel, red for the right channel) to connect to a Hi-Fi or amplifier.

Phono Output 2

Phono Output 2 (video, left and right audio) can be connected to the output of the TV. Connection via a fully wired (21 pins all connected) Scart to Scart lead will allow playback of sound and

Continued overleaf ►

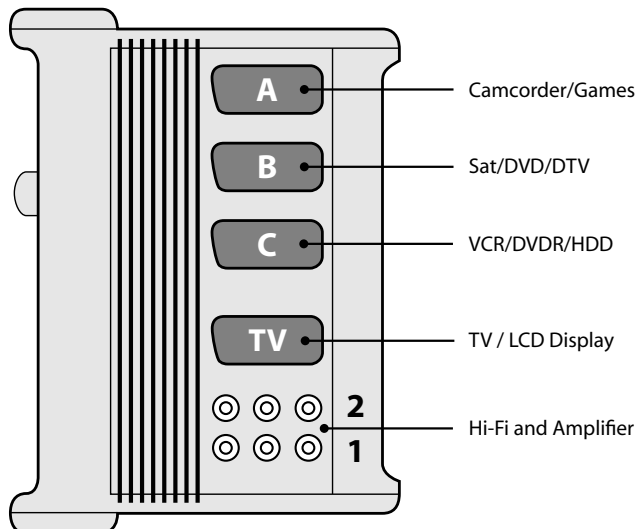

► *Phono Output 2 continued from overleaf*

video independent of each other whilst copying or watching TV programmes. For example, when in AV mode most modern TVs will show the channel set on the tuner (via the Scart socket). In this way you can view a programme from the satellite receiver whilst your VCR is recording the programme received by the TV's tuner.

Mains Connection

Attach the supplied AC/DC power adaptor to the power input on the right-hand side of the AV Auto Selector. Plug the mains adaptor into a mains socket. The power indicator on the front panel will illuminate red.

Recording

1. Recording from Scart A to Scart C

- a) Connect equipment with no automatic switching voltage to Scart input A.
- b) Connect a recording device to Scart input C.
- c) Ensure your equipment connected to Scart input A is playing.
- d) Set the VCR/DVD recorder/Hard disc recorder to AV mode
- e) Start recording. The 'A' indicator LED will illuminate green to indicate that the two devices are linked.

Using the AV Link switch

The *AV Link switch* allows you to view normal broadcast or cable TV whilst recording from a satellite receiver or camcorder. Press the AV Link switch. The indicator illuminates YELLOW. A switching voltage from *Scart Inputs B* or *C* is sent to the *TV/Monitor Scart socket*. This will automatically switch the TV to AV mode. Use your TV remote control to switch to AV mode if this does not occur automatically, or to view normal TV/cable programmes whilst recording.

2. Recording from Scart B to Scart C

- a) Before you can begin recording you must ensure that any equipment connected to Scart A is switched OFF.
- b) Connect equipment with automatic switching voltage to Scart input B.
- c) Connect a recording device to Scart input C.
- d) Switch on your equipment connected to Scart input B
- e) Set the VCR/DVD recorder/Hard disc recorder to AV mode.
- f) Start recording. The 'A' indicator LED will illuminate green to indicate that the two devices are linked.

Troubleshooting

No Picture or sound

1. Ensure the power supply has been connected all systems and is switched ON
2. Ensure that all Scart and phono connectors have been connected securely and that no Scart pins have been bent or broken.
3. Ensure your television has been set to the AV channel (please contact your television manufacture for details)

Poor picture

1. Ensure that all Scart and phono connectors are in suitable condition and have not been over stretched or warped.
2. Ensure that all Scart and phono connectors have been inserted fully into the relevant sockets.

Cannot record

1. Ensure that the recording device is connected to Scart input C.
2. If recording from Scart input B, ensure that equipment connected to Scart input A is switched OFF.

For further information or any queries please contact

Philex Customer Careline: 08457 573 479
(Local rate – UK only)

Technical Support: <http://technical.philex.com>

Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.

