## Mono Sink Mixer Installation and Maintenance Instructions

## REMOVING OLD TAPS OR MIXER

- 1 A spanner may be required. This can be purchased in store.
- 2 Ensure mains water supply is turned off at the stopcock or service valves.
- 3 After disconnecting the water supply, drain the pipework.
- 4 Unscrew the nuts connecting the water pipes to the fittings.
- 5 Save and inspect fibre washer for future use.



- 2 Prior to installation flush out pipework to remove any debris.
- 3 Screw threaded bar into base of body.
- 4 Place anti-rotational washer into groove at base of tap body and connect tail pipes, tightening with a spanner and place the fixings through the sink unit.
- 5 Slide rubber horseshoe washer and metal horseshoe washer over threaded bar and fix unit in place using stud nut. Do not overtighten as it could damage the basin.
- 6 Connect the braided pipes to the base of tap body and re-connect the hot and cold water supply taps.

This product should be fitted in accordance with Water ByLaw Regulations Check valves should be fitted where necessary.

## AFTERCARE INSTRUCTIONS

Whilst modern plating techniques are used in the manufacture of this item, the surfaces will wear if cleaned incorrectly. Clean this product with a soft cloth and clean water. The use of any abrasive material will invalidate the guarantee.



Fully remove grub screw from mixer if fitted.
Insert spout into body ensuring white plastic collar is positioned, so that gap in collar aligns with screw hole. Push spout fully into body and insert screw.
The screw should be inserted into hole and tightened. The screw should not be tightened onto the collar

Please ensure to fit spout prior to installation of mixer to sink