

ROBUS[®]

QUALITY PRODUCTS BY LED GROUP

R201SC 240V Fixed D/L R208SC 240V Tilt D/L R201SCMP 240V Fixed D/L Pk10

Please read instructions before commencing installation and retain for future reference.

Specification:

Protection against electric shock: Class II (Double insulated do not earth!)

Lamp type:	240V GU/GZ10 Max. 50W			
Dimensions:	Cut-out	Overall Diameter	Depth	Lamp retention
R201SC/R201SCMP	Ø70mm	Ø80mm	100mm	Twist & lock bezel
R208SC	Ø82mm	Ø95mm	100mm	Twist & lock bezel

Temperature range: $-20^{\circ}\text{C} < t_a < 40^{\circ}\text{C}$

 
Supply: 240V 50Hz



Luminaire designed to be used only with self-shielded tungsten halogen lamps or self-shielded metal halide lamps

Luminaires not suitable for covering with thermally insulating material

Suitable for mounting on normally flammable surface



Minimum distance from illuminated object is 0.5 metre

Complies with EN60598 (BS4533)

 
Installation:

!Electrical products can cause death or injury, or damage to property. If in any doubt about the installation or use of this product, consult a competent electrician.

- 1 Ensure mains supply is switched off.
- 2 Mark ceiling with appropriate cut-out size.
- 3 Before cutting, ensure that the hole does not impinge on joists, pipe work, cables or other building services.
- 4 Ensure there is at least 100mm of free space around and 50mm above the luminaire. Do not cover the luminaire with thermal insulation.
- 5 Connect supply cables Live and Neutral to fitting terminals (polarity is unimportant). Do Not Earth.
- 6 Offer luminaire up to cut-out with the springs being held vertically. The luminaire is retained in position by the spring tension against the ceiling.
- 7 Lamp installation and replacement.

!Ensure mains supply is off. !When operating the luminaire is too hot to touch. Switch off and allow to cool before undertaking any maintenance work.







R201SC, R201SCMP & R208SC: twist bezel inner ring anticlockwise to unlock, unclip the lamp from the retaining spring at the back of the ring, hold lamp holder firmly and rotate lamp 1/8 turn anti-clockwise to remove, clockwise to insert.

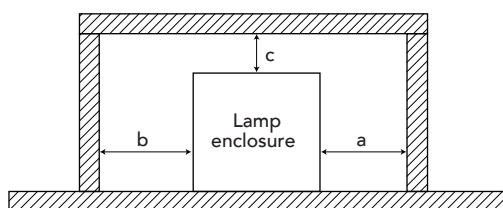

a:100mm
b:100mm
c:50mm

The Installation must be carried out by an electrician

      Installation diagram:

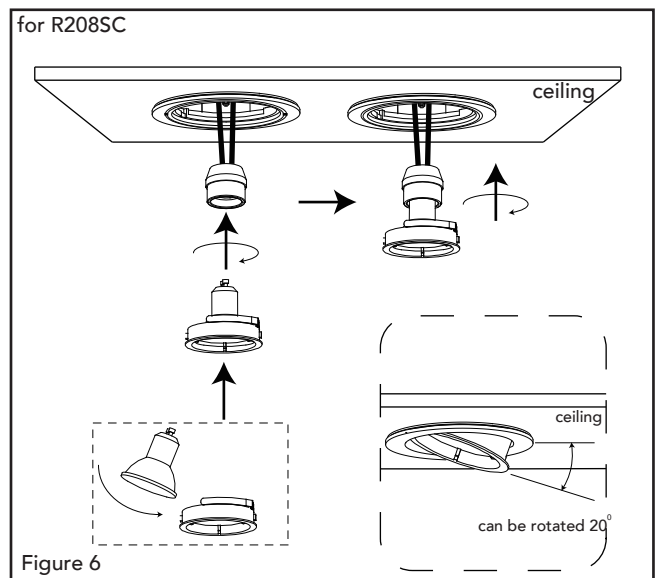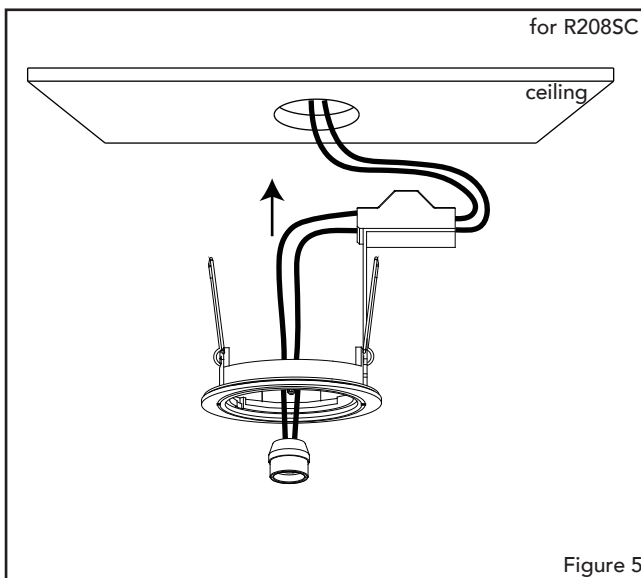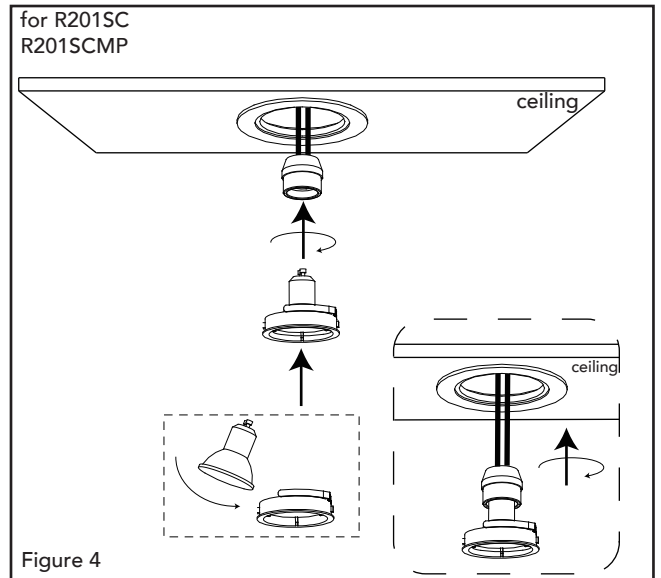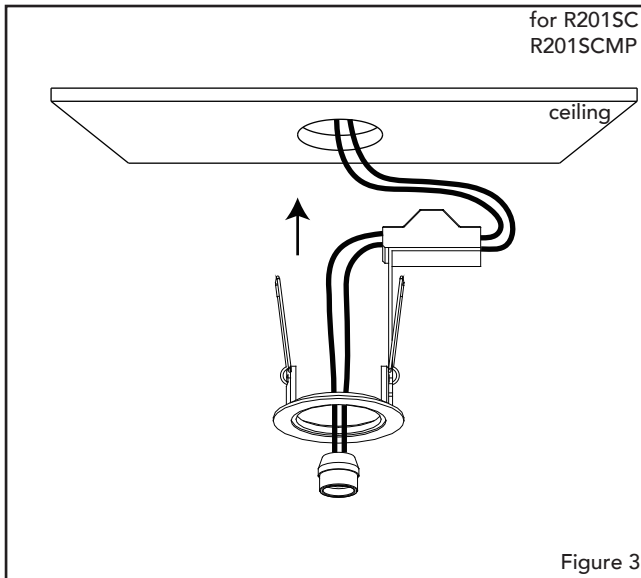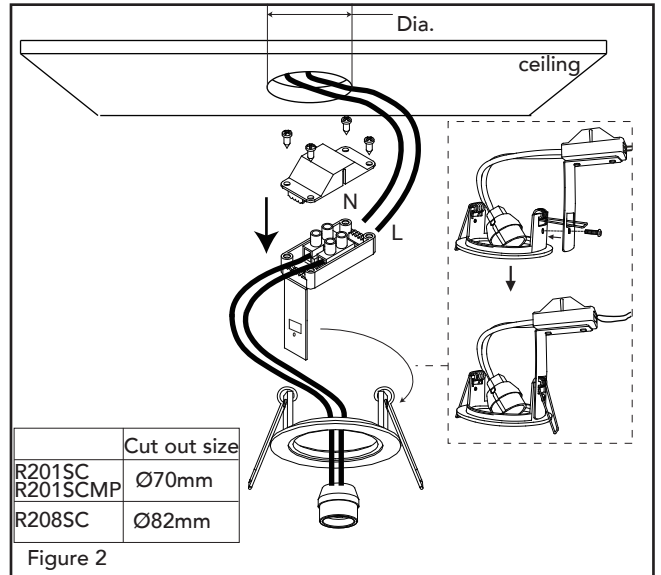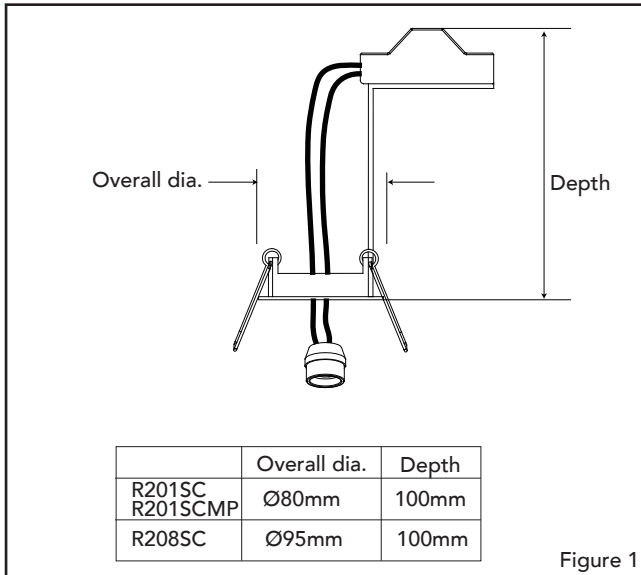

The Installation must be carried out by an electrician

