

Security Safe Owner's Manual (For information on using your safe's lock(s), please see pages 2-3.
See back cover for model and combination information.)

كتيب المستخدم لخزنة حفظ الودائع
للحصول على معلومات استعمال أقفال خزنة الودائع راجع الصفحات ٤ - ٥. راجع الغلاف الخلفي للحصول على معلومات الموديل والرقم التوافقي.

Brugerhåndbog til sikkerhedsboks (For information angående boksens lås(e), se venligst side 6-7.
Se bagsiden for model- og kombinationinformation.)

Gebruikershandleiding van Veiligheidskluis (Voor informatie over het gebruik van het (de) slot(en), zie pagina 8-9.
Zie de achteromslag voor informatie over het model en de combinatie.)

Kassakaapin käyttöopas (Kassakaapin lukon käyttöohjeet ovat sivuilla 10-11.
Malli- ja yhdistelmä tiedot ovat takakannessa.)

Manuel du propriétaire du coffre de sécurité (Pour de plus amples renseignements sur l'utilisation de la (des) serrure(s)
de votre coffre-fort, voir les pages 12 à 13. Voir au dos de la couverture pour le type de modèle et toute information sur la combinaison.)

Bedienungsanleitung für Sicherheitstresor (Anleitungen zur Bedienung des Schlosses/der Schlösser Ihres Safes
finden Sie auf den Seiten 14-15. Informationen über Typ und Kombination finden Sie auf dem hinteren Einbanddeckel.)

Εγχειρίδιο ιδιοκτήτη χρηματοκιβωτίου ασφαλίας (Για πληροφορίες σχετικά με τη χρήση των κλειδαριών του χρηματοκιβωτίου σας,
δείτε τις σελίδες 16-17. Δείτε το πίσω εξώφυλλο για πληροφορίες σχετικές με το μοντέλο και το συνδυασμό).

מדריך למשתמש בכספת בטחון

(למידע אודות השימוש במנעולי הכספות ראה דפים 18-19 למידע נוסף אודות צירופים ומודלים ראה דף אחרון.)

Biztonsági páncélszekrény tulajdonosok kézikönyve (Kérjük, olvassa el a 20-21. oldalon lévő tudnivalókat a széfek zárjával kapcsolatban.
A hátsó borítón található információt a különféle modellekről és széfkombinációkról).

Manuale dell'utente della cassaforte (Per istruzioni su come usare la chiusura o le chiusure della cassaforte, vedere alle pagine 22-23.
Per informazioni sui modelli e le combinazioni vedere la copertina posteriore del manuale.)

保管庫取り扱い説明書

(お客様が購入された金庫の使用方法については、24-25 ページをご参照ください。型名及びダイヤルについては裏表紙をご覧ください。)

Brukerveiledning for sikkerhetsafe (For informasjon vedrørende bruk av din(e) seiflås(er), vennligst henvend til sidene 26-27.
Henvend til bakpermen for informasjon angående Modell og kombinasjon.)

Instrukcja sejf (Po informacji na temat używania zamka (zamków) sejf proszę zajrzeć na str. 28-29.
Na tylnej okładce znajdują się informacje dotyczące modelu i szyfru.)

Manual do Proprietário do Cofre de Segurança (Para obter informações a respeito da utilização da(s) fechadura(s)
do seu cofre, favor consultar as páginas de 30 a 31. Ver o verso da capa para informações sobre Modelo e combinação.)

Руководство для владельца сейфа (Информация об использовании замком или замками сейфа приведена на стр. 32-33.
Модель и комбинация шифра указаны на задней стороне обложки.)

Manual del dueño de la caja fuerte de seguridad (Para obtener información sobre el uso del cierre, o los cierres,
de su caja fuerte, por favor, consulte las páginas 34-35. Véase la contraportada para información sobre el modelo y la combinación.)

Användarhandbok för kassaskåp (för information om hur du använder kassaskåpets lås, hänvisas du till sid. 36-37.
Se omslagets baksida för information om modellen och låskombinationen.)

Emniyet Kasası Kullanım Elkitabı (Kasanızın kilit(lerini) kullanıma ilişkin bilgi için lütfen 38-39. nci sayfalara bakınız.
Model ve kilit şifresine ait bilgi için bu kitapçığın arka kapağına bakınız.)

Thank you for purchasing this Sentry product.

For safes with key lock only

Your Sentry safe is equipped with a high security, 8 lever key lock, two (2) keys are provided.

User Instructions

To Open: Insert the key and turn it to the right (clockwise).



CAUTION!

Remove the key after closing the door and keep it in a secure place.

For safes with combination OR combination and key lock




Your Sentry safe is equipped with a high security key lock with two (2) keys. **Both key and combination are necessary to open safe. Dial the combination first.**

Test first with door open!





Test your new combination several times with the door open, to make sure you have recorded it correctly. Your new combination is ready to use.

COMBINATION:

3-Number Combinations

1. Start with dial on zero.
2. Turn dial **LEFT** three turns and stop at _____ 
3. Turn dial **RIGHT** stopping second time on _____ 
4. Turn dial **LEFT** stopping first time on _____ 

4-Number Combinations

1. Start with dial on zero.
2. Turn dial **LEFT** four turns and stop at _____ 
3. Turn dial **RIGHT** stopping third time on _____ 
4. Turn dial **LEFT** stopping second time on _____ 
5. Turn dial **RIGHT** stopping first time on _____ 

KEY:

After dialing combination, insert key, matching red dot on lock with round bump on key. Turn key to the right (clockwise) and pull to open door.

To Close and Lock

With the door closed, turn key left (counterclockwise), then spin the combination dial several times.

After closing the door, remove the key and keep it in a secure place.


For safes with electronic lock

Battery Installation

To power the lock, four alkaline AA batteries (**not included**) are required.

NOTE: Non-alkaline and rechargeable batteries ARE NOT RECOMMENDED.

To install batteries, remove keypad by rotating the cover counterclockwise, then pulling toward you. (Fig. A) Unlock door with the override key provided in the plastic bag attached to the owner's manual, and open the door using the lever handle. Remove key hook plate located on the inside back of the door by sliding the plate upward, then pulling toward you. (Fig. B) Insert the four batteries as indicated. Replace the key hook plate and keypad.

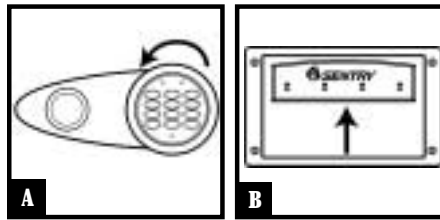

Test first with door open!

(See back cover of this manual for your factory code.)

Test your combination several times with the door open.

NOTE: All electronic lock units have been provided with an override key (skeleton key). Some electronic units are equipped with a handle OR electronic lock and key.

1. Insert the four-bitted key into the lock to the left of the keypad. (**Be sure key lock is turned as far left as possible.**)
2. Press the five-digit factory code. The green light will come on.
3. For units with key, turn the key to the right.
4. Open the door.

Using the keypad

Only a light touch is needed. A green PROCEED light and a single beep indicate that the keypad "felt" your touch. The lock allows 5 seconds for each key press. If you pause longer, an error signal will occur (blinking red light and three beeps), indicating you should start over.

Access Codes

There are three possible ways to unlock and access the safe—by entering its preset Factory Code, your own User Code or a Passcode.

You can always open the safe by entering the 5-digit Factory Code. But if you prefer to use your own code, you can program the safe to open to the 5-digit User Code of your choice. If you wish to give someone else temporary access to the safe, you can program a passcode that can later be erased.

Programming a user code

There are two ways to program a user code.

- A**
1. Press the Program key.
 2. Enter the Factory Code. The green LED remains ON while you enter the 5-digit user code of your choice. After 5 digits are entered the green LED turns OFF. (To enter a new User Code, repeat these steps.)
- B**
1. Press the red button inside the safe. The lock will "beep" and the green LED will come on.
 2. Enter a 5-digit user code. (To enter a new User Code, repeat these steps.)

Programming a passcode

1. Press the Program key twice.
2. Enter your 5-digit User Code. The green LED remains ON.
3. Enter the 5-digit passcode of your choice (any combination except 00000.) After 5 digits are entered, the green LED turns OFF.

(To enter a new passcode, repeat these steps. To erase the passcode, press Program twice, enter your User Code and then enter 00000.)

Unlocking

To unlock the safe, you must enter a valid Factory Code, User Code or Passcode. Once you have done this, you have 4 seconds to open the safe by turning the handle or 4-bitted key to the unlock position. If you fail to do so in time, the lock will reactivate.

(If you realize you have made an error while entering your code, press the CLEAR button and start over.)

Key override

If your electronic lock fails or you do not have any codes available, you may use a key override to access this unit. Remove the keypad by rotating the cover counterclockwise, then pull toward you. Unlock the door by inserting the key provided into the hole and turning clockwise. Open the door. **Do not lock override key inside of unit.**

Signals

Your electronic-lock safe communicates by means of several audio/visual signals.

Red (Error) LED + three beeps indicates one of the following:

1. You have pressed Program key out of sequence
2. You have entered an invalid code or passcode.
3. You have let 5 seconds or more elapse between key entries.

Green (Proceed) LED + single beep occurs

1. After entering each digit of Factory or User Code, or Passcode
2. After pressing Clear key
3. After pressing Program key

Green LED only

1. Comes ON after you enter a valid code/passcode and remains lit during the 4-second period in which the safe can be opened.
2. Comes ON in the Program User Code mode after you enter the Factory Code and remains lit until you have finished entering a 5-digit User Code.
3. Comes ON in the Program Passcode mode after you have entered your User Code and remains ON until you have entered a 5-digit passcode.

Yellow LED – Low Battery Indicator

Indicates "low battery" and will typically not turn OFF until new alkaline batteries are installed.

Your electronic lock automatically performs a low battery test during each lock use.

If a "low battery" condition is detected, the Yellow LED will come ON and remain ON during each subsequent lock operation. (The lock will continue to function in a Low Battery state, until battery failure.) The Yellow LED will turn OFF only after three consecutive "Good Battery" readings or after the low batteries are replaced. (Note: When the new batteries are installed, the Yellow LED may come ON and stay ON during the first lock operation before it returns to OFF.)

NOTE: When changing the batteries, you must use the factory code to open. (See back cover.)
Passcode will have to be re-programmed.

Delay Mode

The lock automatically enters a two-minute Delay Mode after an invalid code has been entered three consecutive times. In this mode, the lock cannot be activated and any key entry will generate an ERROR signal.

Bolt-down Instructions

1. Select a suitable and convenient location for your safe. Set the safe in place and use the holes provided in the bottom or back of the safe to mark the location of the holes to be drilled in the floor or wall. It is not recommended to attempt to bolt to both floor and wall. If bolting to a wall, please ensure that the safe is resting on a supporting surface, i.e. floor, table or shelf.
2. Move the safe away and drill holes of the appropriate diameter and depth for the type of hardware being used and the mounting surface.
3. Place the safe back over the holes and install the fasteners as required.
4. **NOTE:** For maximum security on models which have feet, remove feet before bolting to floor.

1 Year limited warranty

This product (the "Product") is warranted to the original purchaser for one year (1) from the date of purchase to be free of structural and mechanical defects due to faulty materials or workmanship. If a structural or mechanical defect occurs during the warranty period, Sentry Group or its designee (hereafter "Sentry") will repair or replace the defective part(s) of the Product or Product, at its option, at no charge. **THIS WARRANTY DOES NOT AFFECT YOUR STATUTORY RIGHTS UNDER THE LAWS OF THE COUNTRY WHERE YOU PURCHASED THE PRODUCT. IMPORTANT NOTE: PLEASE REFER TO (*) BELOW FOR THE PARTICULAR RULES APPLICABLE TO AUSTRALIA AND OTHER COUNTRIES.**

Warranty Service

Warranty service may be obtained by contacting your local Sentry office or distributor with your name address, proof of purchase from carton (UPC Code), original sales receipt and a description of the problem. See Sentry Group office contact information noted on the back of this owner's manual. **DO NOT SHIP YOUR DEFECTIVE PRODUCT BACK TO SENTRY.**

Limitations Of Warranty

1. Except for damages caused by gross negligence or willful misconduct and, in any event, to the extent allowed by the applicable laws and rules on manufacturer's liability for defective products, Sentry's responsibility and the buyer's exclusive remedy under this warranty are limited to the repair or replacement of the defective part(s) of the Product or Product, at Sentry's option. In no event shall Sentry be liable for loss or damage due to external events such as fire, water, theft or vandalism or for any incidental or consequential damages to persons or property (including the contents of the Product) resulting from the breach of this or any other express or implied warranty applicable to the Product. **IMPORTANT NOTE: THE ABOVE EXCLUSION AND LIMITATION DO NOT APPLY IN AUSTRALIA. PLEASE REFER TO (**) BELOW FOR THE PARTICULAR RULES APPLICABLE IN AUSTRALIA AND OTHER COUNTRIES.**
2. Except as may be otherwise provided by applicable law, Sentry disclaims any and all other covenants and warranties, whether written or oral, express or implied, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose. The implied warranty applicable to this Product shall not exceed the standard one (1) year limited warranty. **IMPORTANT NOTE: THE ABOVE EXCLUSION AND LIMITATION DO NOT APPLY IN AUSTRALIA. PLEASE REFER TO (***) BELOW FOR THE PARTICULAR RULES APPLICABLE IN AUSTRALIA AND OTHER COUNTRIES.**
3. To the full extent permitted by law, Sentry is not responsible for damage, defects, or malfunction to the Product caused by shipment. The Product, which was packed with due care and reasonable handling, should be in good condition on arrival.
4. This Limited Warranty does not cover defects, damage, or malfunction caused by modification, alteration, repair or service of the Product by anyone other than Sentry or its designee, or caused by physical abuse to or misuse of the Product.
5. No Sentry agent, employee, representative, dealer or retailer has the authority to make or imply any representation, promise or agreement which in any way varies the terms of this Limited Warranty.
6. This Limited Warranty shall apply to new, first quality Products and shall not apply to factory seconds or previously-owned products, or products previously damaged by such events including, but not limited to, fire, flood, earthquake, etc.

All of the provisions of this Limited Warranty are separate and severable. If any provision is held invalid and unenforceable, such determination shall not affect the validity or enforceability of the other provisions. This Limited Warranty gives you specific legal rights, which may vary in accordance with the mandatory provisions of law of the country where you purchased the Product.

IF YOU PURCHASED THE PRODUCT IN ONE OF THE FOLLOWING COUNTRIES, THE FOLLOWING RULES APPLY:

(*) AUSTRALIA: IN ADDITION TO THE RIGHTS OBTAINED UNDER THIS LIMITED WARRANTY, YOU MAY HAVE ADDITIONAL RIGHTS AND REMEDIES IMPLIED BY APPLICABLE LAWS, SUCH AS THE TRADE PRACTICES ACT 1974. THE LIMITATIONS SET OUT IN THIS LIMITED WARRANTY IN NO WAY AFFECT YOUR STATUTORY RIGHTS UNDER ANY SUCH LAWS.

THE PHILIPPINES: You may choose between the repair of the defective part of the Product or Product or a refund of the purchase price. If you elect to have the purchase price refunded, the amount directly attributable to the use of the Product prior to the discovery of the defect shall be deducted. You may obtain warranty service by providing the required information and presenting either the proof of purchase from carton or the original sales receipt or the warranty card.

() AUSTRALIA: Replace Paragraph 1 with the following:** Except for damages caused by gross negligence or willful misconduct, and, in any event, to the extent allowed by the applicable laws and rules on manufacturer's liability for defective products, Sentry's responsibility and the buyer's exclusive remedy under this Limited Warranty are limited to the repair or replacement of the defective part(s) of the Product or Product, at Sentry's option. In no event shall Sentry be liable for any incidental or consequential damages (including but not limited to loss or damage due to fire, water, theft or vandalism) to persons or property (including the contents of the Product) resulting from the breach of this Limited Warranty or any other express warranty applicable to the Product.

FRANCE: In the event that you are a consumer or a professional not acting in its field of specialty when purchasing the Product, you will in any case be entitled to the legal warranty of absence of hidden defects with respect to the Product.

THE PHILIPPINES: You may choose between the repair of the defective part of the Product or Product or a refund of the purchase price. If you elect to have the purchase price refunded, the amount directly attributable to the use of the Product prior to the discovery of the defect shall be deducted.

THE UNITED KINGDOM: Nothing in paragraph 1 or otherwise in this Limited Warranty shall exclude or in any way limit Sentry's liability to you for (i) death or personal injury caused by Sentry's negligence (including negligence as defined in s. 1 Unfair Contract Terms Act 1977), (ii) breach of terms regarding title implied by s. 12 Sale of Goods Act 1979, or (iii) any liability to the extent the same may not be excluded or limited as a matter of law.

(*) AUSTRALIA: Replace Paragraph 2 with the following:** To the full extent allowed under law, Sentry disclaims any and all other covenants and warranties, whether written or oral, express or implied.

JAPAN: Sentry also disclaims the implied defect warranty under Article 570 of the Civil Code.

THE UNITED KINGDOM: Nothing in Paragraph 2 or otherwise in this Limited Warranty shall exclude or in any way limit Sentry's liability to you for (i) fraud, (ii) breach of terms implied by the Sale of Goods Act 1979 regarding title, the goods' correspondence with a description or sample, or their quality or fitness for any particular purpose, or (iii) any liability to the extent the same may not be excluded or limited as a matter of law.