


ENERGER

800W Table Saw

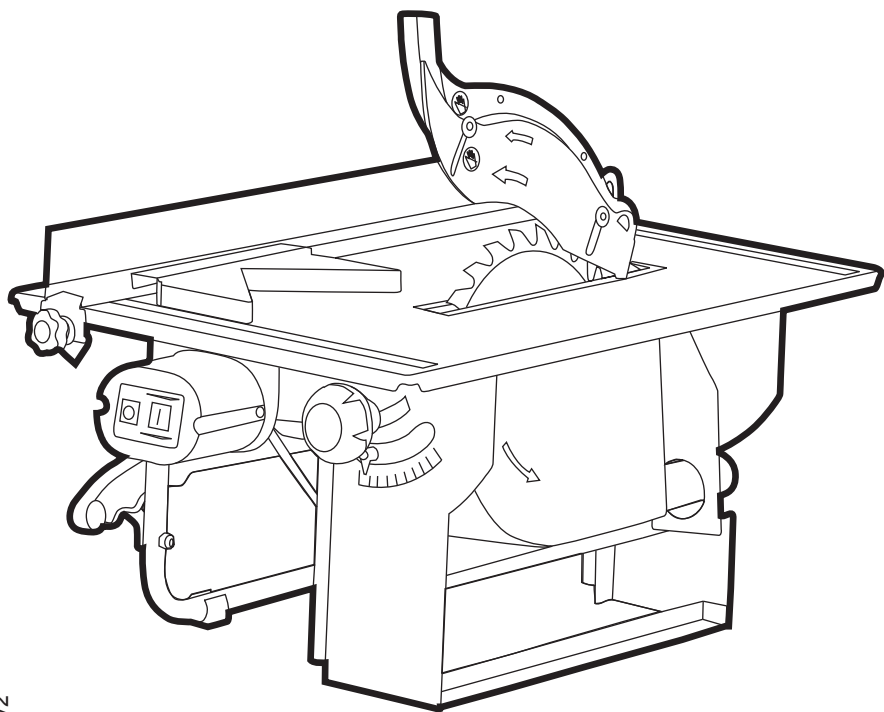

ENB539TAS

Barcode: 5052931254309



WARNING! Read the instructions before using the product!

ENERGER

Thank you for choosing a product **ENERGER** it will give you full satisfaction in your craft in the work.

The band saw is a product easy to use, it comes with accessories. For best use, you must read this notice. It will provide key information on the functions of the device and the rules to follow for maintenance.

Please keep this manual for future reference later.

Let's get started...

These instructions are for your safety. Please read through them thoroughly before use and retain them for future reference.



Getting started...

02

Your product

03

Technical and legal information

05

Before you start

10



In more detail...

15

Product functions

16

Operation

17

Care and maintenance

19

Trouble shooting

22

Recycling and disposal

22


Guarantee

23

EC declaration of conformity

24

Your product

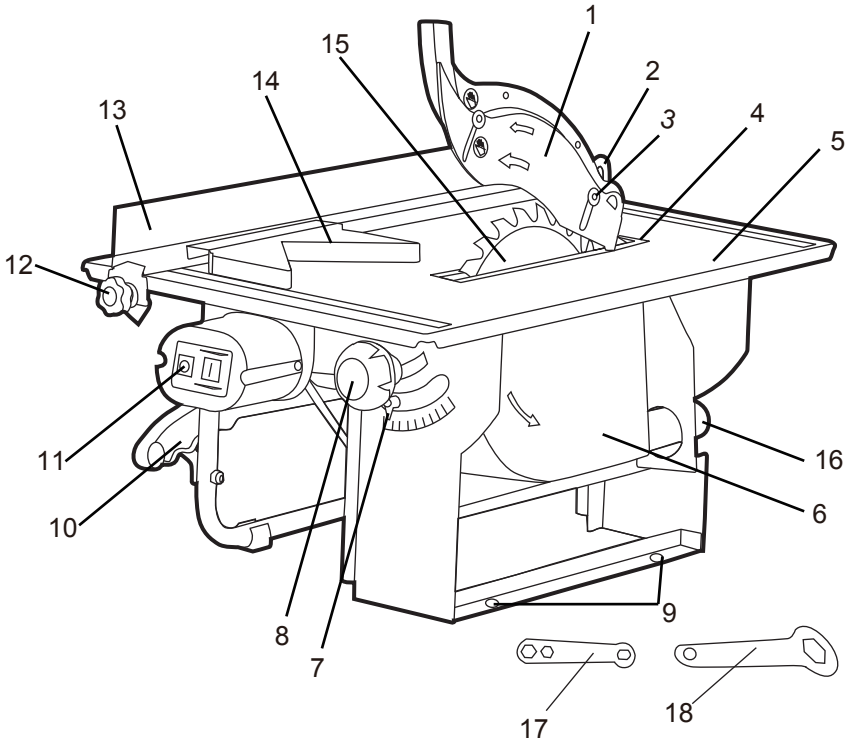

- | | |
|------------------------------|---------------------------------------|
| 1. Saw blade guard | 10. Push stick |
| 2. Riving knife | 11. On/Off switch |
| 3. Screw for saw blade guard | 12. Star-grip screw for parallel stop |
| 4. Table insert | 13. Rip fence |
| 5. Saw table | 14. Mitre guage |
| 6. Bottom guard | 15. Saw blade |
| 7. Scale for angle settings | 16. Dust port |
| 8. Bevel locking screw | 17. C wrench |
| 9. Mounting holes | 18. Spanner |

Technical data

Voltage:230-240V~50Hz
 Rated input:800W, S2:10min
 Protection class: I
 Degree of protection: IP20
 No load speed:2950min⁻¹
 Carbide saw blade:Ø200 x 30 x 2,4mm
 Thickness of riving knife:2,2mm
 Bevel angle range:0 -45°
 Table size:505 x 335mm
 Cutting height max. 90°:45mm
 Cutting height max. 45°:27mm
 Connector for dust extractor:dia. 24mm
 Weight:11kg

Noise and Vibration Data

A weighted sound pressure KpA :.....96.6dB(A)
 Uncertainty KpA :.....3dB
 A weighted sound power KwA :.....109.6dB(A)
 Uncertainty KWA :.....3dB
 Vibration level:.....2.5 m/s²
 Uncertainty K:.....1.5m/s²

The declared vibration total value has been measured in accordance with a standard test method and may be used for comparing one tool with another. The declared vibration total value may also be used in a preliminary assessment of exposure. **WARNING:** The vibration emission during actual use of the power tool can differ from the declared total value depending on the ways in which the tool is used. The need to identify safety measures and to protect the operator are based on an estimation of exposure in the actual conditions of use (taking account of all parts of the operating cycle, such as the times the tool is switched off, when it is running idle, in addition to trigger time).

Load factor:

A load factor of S2 10 min(temporary duty)means that you may operate the motor continuously at its nominal power level (800W) for no longer than the time stipulated on the specifications label (10minutes ON period). If you fail to observe this time limit the motor will overheat. During the OFF period the motor will cool again to its starting temperature.

Symbols



Warning! Denotes risk of personal injury, loss of life, or damage to the tool in case of non-observance



Wear ear protection.



Wear eye protection.



Wear respiratory protection.



The product complies with the applicable European directives and an evaluation method of conformity for this directives was done.



Read the instruction manual.



Wear protective gloves



Switch the product off and disconnect it from the power supply before assembly, cleaning, adjustments, maintenance, storage and transportation.



The table saw use for wood only.



Caution, risk of cutting.

yyWxx: Manufacturing date code; year of manufacturing (20yy)
and week of manufacturing (Wxx)

General safety



WARNING: When using electric tools basic safety precautions should always be followed to reduce the risk of fire, electric shock and personal injury including the following. Read all these instructions before attempting to operate this product and save these instructions.

- 1 Keep work area clear
 - > Cluttered areas and benches invite injuries.
- 2 Consider work area environment
 - > Do not expose tools to rain.
 - > Do not use tools in damp or wet locations.
 - > Keep work area well lit.
 - > Do not use tools in the presence of flammable liquids or gases.
- 3 Guard against electric shock
 - > Avoid body contact with earthed or grounded surfaces (e.g. pipes, radiators, ranges, refrigerators).
- 4 Keep other persons away
 - > Do not let persons, especially children, not involved in the work touch the tool or the extension cord and keep them away from the work area.
- 5 Store idle tools
 - > When not in use, tools should be stored in a dry locked-up place, out of reach of children.
- 6 Do not force the tool
 - > It will do the job better and safer at the rate for which it was intended.
- 7 Use the right tool
 - > Do not force small tools to do the job of a heavy duty tool. Do not use tools for purposes not intended; for example do not use circular saws to cut tree limbs or logs.
- 8 Dress properly
 - > Do not wear loose clothing or jewellery, they can be caught in moving parts.
 - > Non-skid footwear is recommended when working outdoors.
 - > Wear protective hair covering to contain long hair.
- 9 Use protective equipment
 - > Use safety glasses.
 - > Use face or dust mask if working operations create.
- 10 Connect dust extraction equipment
 - > If the tool is provided for the connection of dust extraction and collecting equipment, ensure these are connected and properly used.

General safety

11 Do not abuse the cord

- > Never yank the cord to disconnect it from the socket.
- > Keep the cord away from heat, oil and sharp edges.

12 Secure work

- > Where possible use clamps or a vice to hold the work.
- > It is safer than using your hand.

13 Do not over reach

- > Keep proper footing and balance at all times.

14 Maintain tools with care

- > Keep cutting tools sharp and clean for better and safer performance.
- > Follow instruction for lubricating and changing accessories. Inspect tool cords periodically and if damaged have them repaired by an authorized service facility. Inspect extension cords periodically and replace if damaged. Keep handles dry, clean and free from oil and grease.

15 Disconnect tools

- > When not in use, before servicing and when changing accessories such as blades, bits and cutters, disconnect tools from the power supply.

16 Remove adjusting keys and wrenches

- > Form the habit of checking to see that keys and adjusting wrenches are removed from the tool before turning it on.

17 Avoid unintentional starting

- > Ensure switch is in "off" position when plugging in.

18 Use outdoor extension leads

- > When the tool is used outdoors, use only extension cords intended for outdoor use and so marked.

19 Stay alert

- > Watch what you are doing, use common sense and do not operate the tool when you are tired.

20 Check damaged parts

- > Before further use of tool, it should be carefully checked to determine that it will operate properly and perform its intended function.
- > Check for alignment of moving parts, binding of moving parts, breakage of parts, mounting and any other conditions that may affect its operation.
- > A guard or other part that is damaged should be properly repaired or replaced by an authorised service centre unless otherwise indicated in this instruction manual.
- > Have defective switches replaced by an authorised service centre.
- > Do not use the tool if the switch does not turn it on and off.

21 Warning

- > The use of any accessory or attachment other than one recommended in this instruction manual may present a risk of personal injury.

22 Have your tool repaired by a qualified person

- > This electric tool complies with the relevant safety rules. Repairs should only be carried out by qualified persons using original spare parts, otherwise this may result in considerable danger to the user.

Additional safety

- > The bench-type circular saw is designed for the slitting and cross-cutting of all types of timber, commensurate with the machine's size. The machine is not to be used for cutting any type of round wood.
- > The machine is to be used only for its prescribed purpose.
- > Any use other than that mentioned is considered to be a case of misuse. The user/operator and not the manufacturer shall be liable for any damage or injury resulting such cases of misuse. The machine is to be operated only with suitable saw blades. It is prohibited to use any type of cutting-off wheel.
- > Use only saw blades recommended by the manufacturer, which confirm to EN 847-1, with a warning. When changing the saw blade, beware that the thickness of the body of the saw blade shall not be more than the thickness of the splitter (riving knife).
- > Take care that the selection of the saw blade is suitable for the material to be cut.
- > To use the machine properly you must also observe the safety regulations, the assembly instructions and the operating instructions to be found in this manual.
- > All persons who use and service the machine have to be acquainted with this manual and must be informed about its potential hazards.
It is also imperative to observe the accident prevention regulations in force in your area.
- > The same applies for the general rules of occupational health and safety. The manufacturer shall not be liable for any changes made to the machine nor for any damage resulting from such changes.
- > Even when the machine is used as prescribed it is still impossible to eliminate certain residual risk factors. The following hazards may arise in connection with the machine's construction and design:
 - > Contact with the saw blade in the uncovered saw zone.
 - Reaching into the running saw blade (cut injuries).
 - Kick-back of workpieces and parts of workpieces.
 - Saw blade fracturing.
 - Catapulting of faulty carbide tips from the saw blade.
 - Damage to hearing if essential ear-muffs are not worn.
 - Harmful emissions of wood dust when the machine is used in closed rooms.
- > Please note that our equipment has not been designed for use in commercial, trade or industrial applications. Our warranty will be voided if the machine is used in commercial, trade or industrial businesses or for equivalent purposes.
- > Wear suitable personal protective equipment when necessary, this could include
 - a) Hearing protection to reduce the risk of induced hearing loss.
 - b) respiratory protection to reduce the risk of inhalation of harmful dust.
 - c) wear gloves when handling saw blades and rough material. Saw blades shall be carries in a holder whenever practicable.
- > Connect circular saws to a dust-collecting device when sawing wood. The operator shall be informed of the factors that influence exposure of dust e.g. type of material being machined and importance of local extraction (capture or source) and proper adjustment of hoods/baffles/chutes.

Additional safety

- > Do not use high speed steel (HS) blades.
- > The push-stick or push block should always be stored with the machine when not in use safe operation:
 - Use push-sticks or push blocks to feed the workpiece past the saw blade;
 - Use and correct adjustment of the riving knife;
 - Use and correct adjustment of the upper saw blade guard;
 - Rebating or grooving should not be carried out unless suitable guarding, such as a tunnel guard, is fitted above the saw table;
 - Saws shall not be used for slotting (stopped groove);
 - a table giving guidance on spindle speed selection for different materials to be sawn shall be given for variable speed tool;
 - use only saw blades for which the maximum possible speed is not less than the maximum spindle speed of the tool and the material to be cut;
 - when transporting the machine use only transportation devices and do never use guards for handling or transportation;
 - During transportation the upper part of the saw blade should be covered; for example by the guard; adjust the parallel stop to the width of workpiece you require.
- > Feed in the workpiece with two hands. Always use the push stick in the area of the saw blade.
- > Always push the workpiece through to the end of the splitter.
- > Warning : Not to use saw blades which are damaged or deformed.

Health advice

WARNING! When sawing, dust particles will be produced. In some instances, depending on the materials you are working with, this dust can be particularly harmful to you (e.g. lead from old gloss paint).

You are advised to consider the risks associated with the materials you are working with and to reduce the risk of exposure. You should:

- Work in a well-ventilated area.
- Work with approved safety equipment, such as those dust masks that are specially designed to filter microscopic particles.

Indication of the correct operator's position

Note: Correct operator stance and positioning is very important when operating any table saw.

- 1) Never place your hands within the 'no hands zone' (at least 150mm away from the blade). Keep hands away from the path of the blade.
- 2) Secure the workpiece firmly to the table and against the fence to prevent any movement.
- 3) Avoid awkward operations and hand positions where a sudden slip could cause your fingers or a hand to move into the blade.
- 4) Before attempting a cut, make a 'dry run' with the power off so that you can see the path of the blade.

Unpack

- > Unpack all parts and lay them on a flat, stable surface.
- > Remove all packing materials and shipping devices if applicable.
- > Make sure the delivery contents are complete and free of any damage. If you find that parts are missing or show damage do not use the product but contact your dealer. Using an incomplete or damaged product represents a hazard to people and property.
- > Ensure that you have all the accessories and tools needed for assembly and operation. This also includes proper personal protective equipment.

You will need

Items not supplied	Items supplied
1. Protective gloves	1. Saw blade (for wood only)
2. Screwdriver with PH2 head	2. Spanner
3. Mounting nuts, bolts and washers (M6x40mm)	3. C-wrench



WARNING! Do not connect to power supply until assembly is complete. Failure to comply could result in accidental starting and possible serious injury.

Assembling the saw blade(Fig. 1-2)



Caution! Pull out the power plug.

- > Turn the bevel locking screw (8) and set the saw blade to 0° and lock the bevel locking screw (8).
- > Unscrew the fixing screws (19) and remove bottom guard (6).
- > Undo the nut (20) with a C wrench (17) on the nut itself and a spanner (18) on the saw shaft to apply counter-pressure.



Caution! Turn the nut in the direction of rotation of the saw blade (15).

- > Place one new blade (15) on arbor shaft. Make sure saw blade teeth point down at the front side of saw table. Place outer flange and arbor nut on arbor shaft and verify that large, flat surface of the outer flange faces the saw blade and the saw blade (15) is firmly seated against the inner flange. The bottom guard Must be re-assembled on.



Caution! Note the direction of rotation (see arrow on the saw blade).

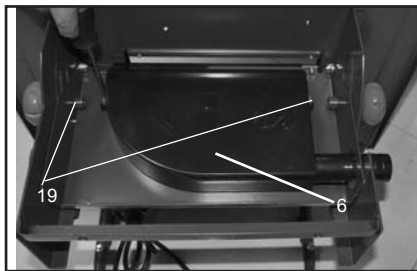


Fig. 1

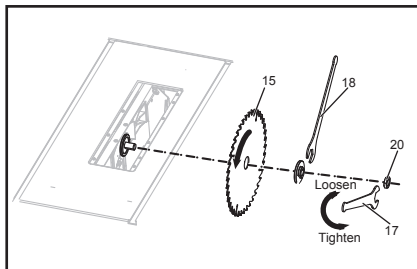


Fig.2

Assembling the riving knife(Fig. 3-5)

- > Take out the table insert (4) by removing the two cross-head screws (21).
- > Slacken the two screws (22), ensuring the plate under the table is not removed, then insert the riving knife slots under the screw heads.
- > Adjust the riving knife (2) so that the gap between the saw blade (15) and the riving knife (2) equals 3 - 5 mm.
- > The riving knife (2) has to be in line with the saw blade (15) in longitudinal direction.
- > Retighten the two screws (22).
- > The setting of the riving knife has to be checked each time after changing the saw blade.
- > Fit the table insert (4) and re-tighten the two cross-head screws (21).

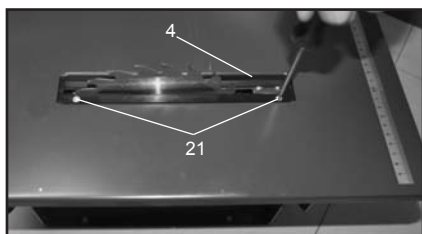


Fig.3

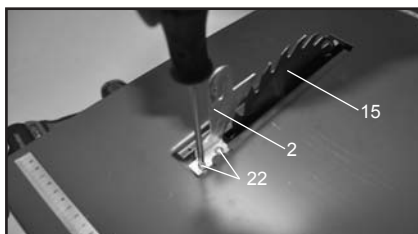


Fig.4

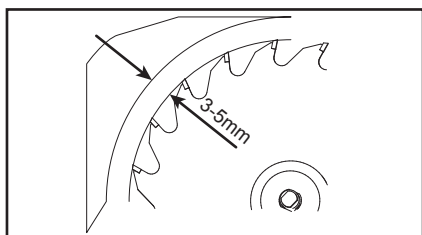


Fig.5

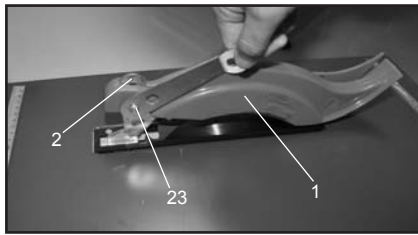


Fig.6

Assembling the saw blade guard(Fig. 6)



Warning: Risk of injury!

The saw blade guard must be in position at all times to prevent contact with the saw blade. It should lift up and onto the work piece when the work piece is passed through the saw.

- > Mount the saw blade guard (1) on the riving knife (2) and align with saw blade teeth.
- > Insert the screw (23) through the hole in the saw blade guard (1) and in the riving knife (2) and secure it with the nut.
- > Blade guard **MUST** be in place.



Warning: The blade guard should return to its rest position after the work piece has been cut.

Assembling the rip fence (Fig. 7-8)

> This fence is used for all ripping operations. Never rip freehand without the fence in place and securely locked.

> Adjust the rip fence (7) to the desired width from the blade using the scale rules on the table surface for reference. To adjust loosen the two securing knobs (12) (one at each end).

Note: The rounded washer (24) should be placed outside and squared washer (25) should be placed inside.

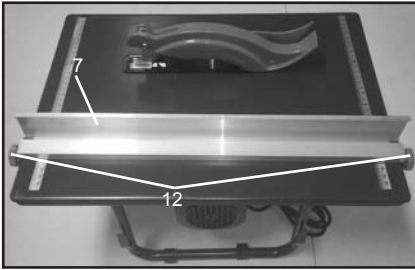


Fig. 7

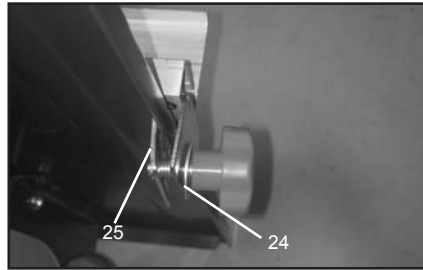


Fig. 8

Assembling the mitre gauge (Fig. 9)

> Push the mitre gauge (14) rail into the rip fence.

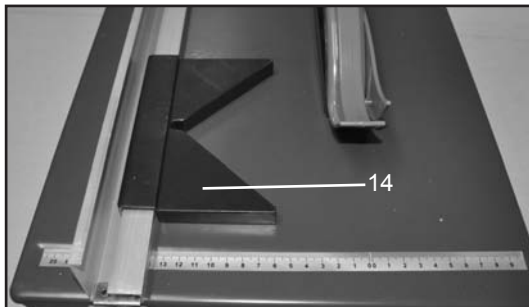


Fig. 9

Mounting the table saw (Fig. 10-11)

The table saw must be properly secured to a sturdy workbench using the two mounting holes (9) on the saw base.

> Place the table saw over the workbench table top and mark two locations on top of the workbench by setting the mounting holes at the saw base.

> Drill two mounting holes at the marked location of the workbench.

> Place the table saw on the workbench and align the mounting holes of the table saw with the drilled holes in the workbench.

> Firmly screw the table saw to the bench surface. "M6" roundhead screws (minimum 40 mm length) or nuts and bolts (M6x40mm) (not provided).

Carefully check the workbench after mounting to make sure that no movement can occur during use. If any tipping, sliding, or walking is noted, secure the workbench to the floor before operating.

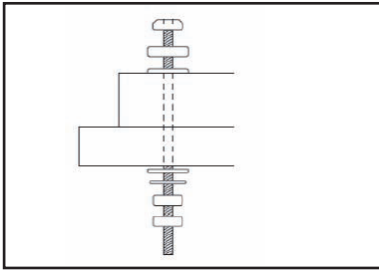


Fig. 10

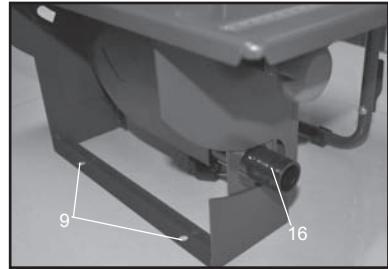


Fig. 11

Dust extraction (Fig. 11)

> The table saw is equipped with dust extraction port (16) / Dia. 24mm for extracting sawdust and chips.

> Using the extractor adapter, connection to a range of different sawdust extractors is straightforward.



WARNING! Attach a dust extraction device when using this product in order to keep the working area clean! Wear a dust mask when operating this product! Dust can be harmful to health! Especially dust and chips of wood that has been treated, e.g. with a wood preservative or stain!

Connection to the power supply

> Connect the plug with a suitable socket.

WARNING! Check the voltage! The voltage must comply with the information on the rating label!

> Your product is now ready to be used.



In more detail..

Product functions	17
Operation	18
Care and maintenance	20
Trouble shooting	22
Recycling and disposal	22
Guarantee	24
EC declaration of conformity	25

Intended use

This table saw is designated with a rated input of 800 Watts. This product is intended for cutting wood and similar material e.g. MDF and chipboard. This product should not be used on other materials or those harmful to health. It is to be used for dry operation only without water or other cooling liquids. This product is intended for private domestic use only, not for any commercial trade use. It must not be used for any purposes other than those described.

Start the machine (Fig. 12)

Switching on:

> To start the machine by pressing the green I button (11-a) on the On/Off switch (11). When turning the switch ON stand on either side of the blade and never in front of it. Allow saw blade to reach full speed before cutting.

Switching off:

> To stop the machine by pressing the red 0-Button (11-B) on the On/Off Switch (11).

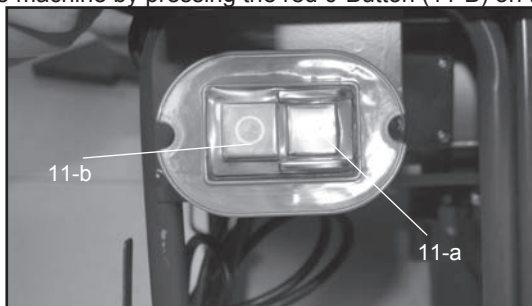


Fig. 12

Bevel locking screw (Fig. 13)

> The bevel locking screw (13) locks the blade in the desired tilting angle. To loosen turn it anti-clockwise. When setting the angle of the cut fully loosen it.

> The saw blade can be adjusted steplessly between 0° and 45°.

> The bevel locking screw (13) is used to tilt the blade for bevel cutting.

> Before turning the table saw ON, be sure it is securely tightened so that the blade will not shift during the table saw operation.

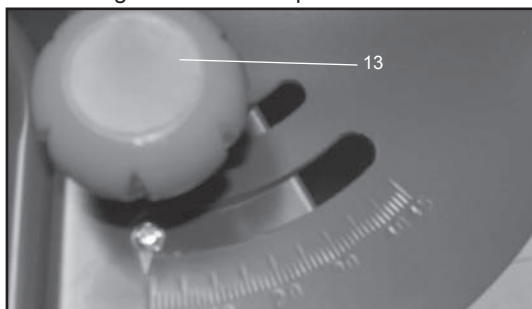


Fig. 13

Push stick

- > Push stick (10) is a device used for safely pushing a work piece through the blade instead of using your hands. They can be made from scrap wood in various sizes and shapes to be used in a specific project.
- > The stick must be narrower than the work piece, with a 90° notch in one end and shaped for a grip on the other end.
- > Use a push stick whenever the fence is 12cm or more from the blade.
- > Push stick should be used in place of the user's hand to guide the material between the fence and blade. When using a push stick, the trailing end of the board must be square.
- > A push stick against an uneven end could slip off or push the work piece away from the fence.
- > Warning: Risk of injury! Do not locate the push stick to the rear of the work piece, kickback can result from the push stick pinching the work piece and binding the blade in the saw kerf if positioned improperly. It may cause serious personal injury.

Cross cutting (Fig. 14)

- > Cross cutting is cutting wood across the grain at 90° or square with both the edge and the flat side of the wood.

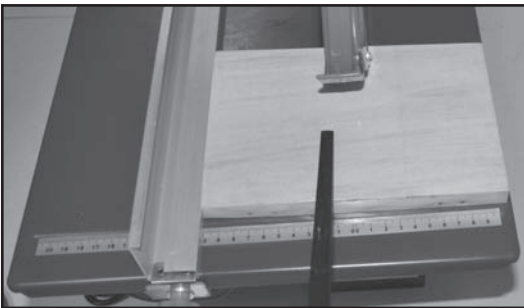


Fig. 14

Bevel cross cutting (Fig. 15)

> Bevel cross cutting is the same as cross cutting except that the wood is also cut at an angle other than at 90° with the flat side of the wood. Follow the same procedures as you would for cross cutting. But adjust the blade to the desired angle.

Use the mitre gauge in the groove to the right of the blade to avoid the blade guard from interfering with the cut.

WARNING! When cross cutting or mitre cutting, across the end of a narrow work piece always use the rip fence or mitre gauge. NEVER make these cuts freehand (not using the mitre gauge or the other devices) because the blade could bind causing a kickback or causing your hand or fingers to contact the blade. Remove the rip fence from the table when not in use. Make sure the blade safety guard is mounted for all through sawing operations (the blade cuts through the entire thickness of the work piece).

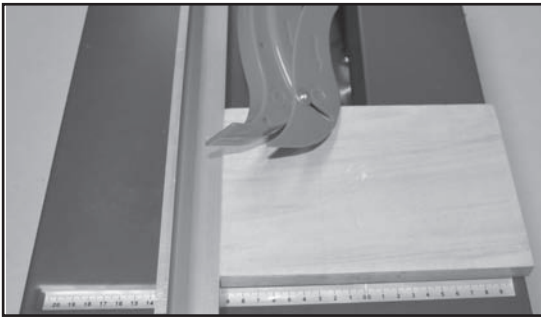


Fig. 15

Ripping

> Ripping is cutting a piece of wood with the grain or length-ways.

> This is done using the rip fence (13). Position the rip fence to the desired width of the rip and lock it in place. Before starting to rip be sure that the rip fence is parallel to the saw blade, and that the riving knife is properly aligned with the saw blade.

> When ripping long boards or large panels always use a work support. Hold the piece against the fence and feed it through the blade with a smooth, steady pressure.

> When the ripping width is wider than 150mm (6") use your right hand to feed the work piece until it is clear of the table. Use your left hand only to guide, not to feed the work piece.

Bevel cutting

- > Bevel ripping is the same as ripping, except that the blade bevel angle is set to an angle other than "0".
- > When bevel ripping material 150mm (6") or narrower use the fence on the right side of the blade only.

The golden rules of care

1. Keep the product clean. Remove debris from it after each use and before storage.
2. Regular and proper cleaning will help ensure safe use and prolong the life of the product.
3. Inspect the product before each use for worn and damaged parts. Do not operate it if you find broken and worn parts.

WARNING! Always switch the product off, disconnect it from power supply and let the product cool down before performing inspection, maintenance and cleaning work!

WARNING! Only perform repairs and maintenance work according to these instructions! All further works must be performed by a qualified specialist!

General cleaning

- > Keep the ventilation slots of the machine clean to prevent overheating of the engine.
- > Regularly clean the machine housing with a soft cloth, preferably after each use.
- > Keep the ventilation slots free from dust and dirt.
- > If the dirt does not come off use a soft cloth moistened with soapy water.
- > Never use solvents such as petrol, alcohol, ammonia water, etc. These solvents may damage the plastic parts.

WARNING! Danger of electric shock! Never spray the device with water or subject it to water. To clean, never use cleansers or solvents. This can cause irreparable damage to the device. The plastic parts can be eaten away by the chemicals.

Saw blade replacement (Fig.18-19)

If the saw blade is damaged or deformed, please replace the saw blade. Before replacing the saw blade, you must clean the flanges and use standard saw blade which conform to EN847-1.



Caution! Pull out the power plug.

- > Turn the bevel locking screw and set the saw blade to 0° and lock the bevel locking screw.
- > Unscrew the fixing screws (19) and remove bottom guard (6).
- > Undo the nut (20) with a C wrench (17) on the nut itself and a spanner (18) on the saw shaft to apply counter-pressure.
- > Take out the old blade and place one new blade (15) on arbor shaft. Make sure saw blade teeth point down at the front side of saw table. Place outer flange and arbor nut on arbor shaft and verify that large, flat surface of the outer flange faces the saw blade and the saw blade (15) is firmly seated against the inner flange. The bottom guard Must be re-assembled on.



Caution! Note the direction of rotation (see arrow on the saw blade).

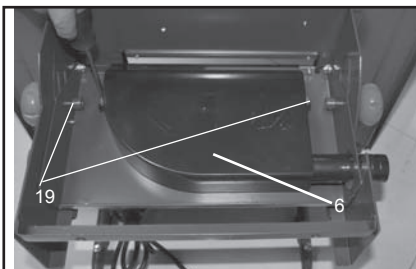


Fig.16

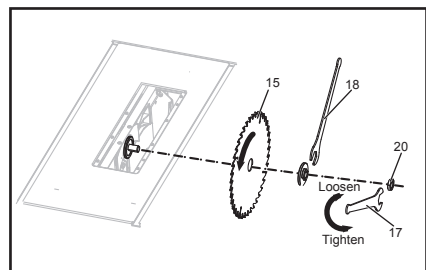


Fig.17

Power cord

If the power cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a safety hazard.

UK plug

If you need to replace the fitted plug then follow the instructions below. **IMPORTANT:** The wires in the mains lead are coloured in accordance with the following code:

Blue – Neutral

Brown – Live


Green & Yellow – Earth

As the colours of the wires in the mains lead of this apparatus may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows. The wire which is coloured blue, must be connected to

the terminal, which is marked with N or coloured black. The brown wire must be connected to the terminal which is marked with an L or coloured red. The green & yellow wire must be connected to the terminal which is marked Earth E. **WARNING:** Never connect live or neutral wires to the earth terminal of the plug.

Only fit an approved 13 Amp BS1363/A plug and the correct rated fuse.

NOTE: If a moulded plug is fitted and has to be removed take great care in disposing of the plug and severed cable, it must be destroyed to prevent engaging into a socket.

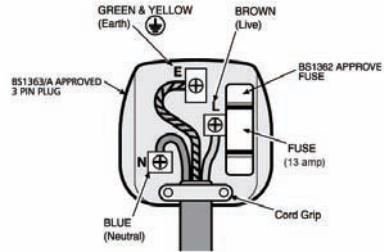

Repair

1. This product does not contain any parts that can be repaired by the consumer. Contact a qualified specialist to have it checked and repaired.

Storage

1. Clean the product as described above.
2. Store the product and its accessories in a dry, frost-free place.
3. Always store the product in a place that is inaccessible to children. The ideal storage temperature is between 10 and 30°C.
4. We recommend using the original package for storage or covering the product with a suitable cloth to protect it against dust.

Transportation

1. Switch the product off and disconnect it from power supply before transporting it anywhere.
2. Attach transportation guards, if applicable.
3. Always carry the product by its handle.
4. Protect the product from any heavy impact or strong vibrations which may occur during transportation in vehicles.
5. Secure the product to prevent it from slipping or falling over.

Trouble shooting

Suspected malfunctions are often due to causes that the user can fix themselves. Therefore check the product using this section. In most cases the problem can be solved quickly.

Problem	Possible cause	Solution
1. Product does not start	1.1 Not connected to power supply 1.2 Power cord or plug is defective 1.3 Other electrical defect to the product	1.1. Connect to power supply 1.2. Check by a specialist electrician. 1.3. Check by a specialist electrician
2. Product does not reach full power	2.1 Extension cord not suitable for operation with this product 2.2 Power source (e.g. generator) has too low voltage 2.3 Air vents are blocked	2.1. Use a proper extension cord 2.2. Connect to another power source 2.3. Clean the air vents
3. Unsatisfactory result	3.1 Accessory not suitable for work piece material 3.2 riving knife not aline with blade.	3.1. Use proper accessory 3.2 Check by a specialist electrician.



WARNING! Only perform the steps described within these instructions! All further inspection, maintenance and repair work must be performed by an authorised service centre or a similarly qualified specialist if you cannot solve the problem yourself!

Recycling and disposal



Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or local store for recycling advice.

Guarantee

This ENERGER product carries a guarantee of 12 months.

If your product develops a fault within this period, you should, in the first instance contact the retailer where the item was purchased.

This guarantee specifically exclude losses caused due to:

- > Fair wear and tear
- > Misuse or abuse
- > Lack of routine maintenance
- > Failure of consumable items
- > Accidental damage
- > Cosmetic damage
- > Failure to follow manufacturer's guidelines
- > Loss of use of the goods This guarantee does not affect your statutory rights.

This guarantee is only valid in the UK. For any enquiries relating to the guarantee please refer to your retailer.



Declaration of conformity

We, Importer
Powersmith Ltd., BA22 8RT

Declare that the product:

Designation: 800w Table Saw

Model: ENB539TAS

Complies with the following Directives

2004/108/EC Electromagnetic Compantibility Directive

2006/42/EC Machinery Directive

2006/95/EC Low voltage Directive

2012/19/EU Restrictions of the Use of Certain Hazardous Substances
in Electrical and Electronic Equipment

2002/96/EC and 2003/108/EC Waste Electrical and Electronic Equipment(WEEE)

Standards and technical specifications referred to:

EN61029-1/A11:2010

EN61029-2-1:2010

EN55014-1/A2:2011

EN55014-2/A2:2008

EN61000-3-2/A2:2009

EN61000-3-3:2008

Authorised Signatory and technical file holder

Date : 15/12/2015

Signature: P.C. Harries

Name / title: Peter Harries / Quality Manager
Powersmith (UK) LTD. Trade House Mead Avenue, BA22 8RT



2015



Powersmith (UK) LTD.
Trade House Mead Avenue, BA22 8RT
