

Fan heater



FH-203

Ref:44164

Let's get started...

These instructions are for your safety. Please read through them thoroughly before use and retain them for future reference.



Getting started...

Safety	03
Before you start	05
Quick start	06



In more detail...

Technical and legal information	08
Care and maintenance	09


PLEASE READ THE FOLLOWING INSTRUCTIONS CAREFULLY BEFORE USING THE APPLIANCE.

CAUTION - Fire, electric shock, physical injury and material damage hazards:

To use the appliance, always follow the instructions for assembly, use and maintenance as well as usage cautions:

1. Carefully read and retain these instructions.
2. Before connecting the appliance, be sure that the mains voltage available matches that specified on the rating plate.
3. Do not use the appliance for other than its intended use. For domestic indoor use only.
4. Place the appliance on a flat, stable, heat-resistant surface. Operating the product in any other position could cause a hazard.
5. There may be trace of odour during the first few minutes of initial use. This is normal and will quickly disappear.
6. The heater is hot when in use. To avoid burns, do not let bare skin touch any hot surface. Use the carrying handle when moving the product.
7. Keep combustible material such as furniture, cushions, bedding, paper, clothes, curtains etc. at least 1m away from the heater.
8. Do not use the heater in areas where flammable liquids are stored or where flammable fumes may be present.
9. Do not cover or obstruct any of the heat outlet grilles or the air intake openings of the heater.
10. Do not use the heater in the rooms with explosive gas or while using inflammable solvents, varnish or glue.
11. Keep the heater clean. Do not allow any objects to enter any ventilation or exhaust opening as this may cause electric shock, or fire or damage to the heater.
12. Always unplug or disconnect the appliance from the mains power supply when not in use or when moving or cleaning it. Do not pull the cord to unplug the heater.
13. Do not immerse the cord, plug or any part of the appliance in water or any other liquid.
14. Do not attempt to repair, disassemble or modify the appliance. There are no user-serviceable parts inside.
15. The heater must not be located immediately below a socket-outlet.
16. Do not use this heater in the immediate surroundings of a bath, a shower or a swimming pool.

17. Do not use this heater with a programmer, timer, separate remote-control system or any other device that switches the heater on automatically, since a fire risk exists if the heater is covered or positioned incorrectly.

18.  **WARNING** : In order to avoid overheating, do not cover the heater.

19. **WARNING!** - DO NOT COVER THIS APPLIANCE WITH ITEMS SUCH AS CLOTHING, BLANKETS OR PLACE NEXT TO CURTAINS OR NET/BLINDS.

20. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

21. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

22. Children of less than 3 years should be kept away unless continuously supervised. Children aged from 3 years and less than 8 years shall only switch on/off the appliance provided that it has been placed or installed in its intended normal operating position and they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children aged from 3 years and less than 8 years shall not plug in, regulate and clean the appliance or perform user maintenance.

23. **CAUTION** - Some parts of this product can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present.

24. **CAUTION** - if using an extension lead please ensure you do not exceed the maximum rated running wattage/load of the extension lead.

 
Things to check before you start

- For domestic use only.
- Never allow children or persons unable to operate the appliance safely, use this appliance without supervision.
- Please dispose of plastic bags carefully and keep them away from children.
- This appliance is designed for use as a supplementary heat source, it is not intended to be the main source of heat.

IMPORTANT: When in use never cover the heater in any way or place it close to combustible materials. The heater will get hot, never touch it whilst in use. Always keep children and pets at a safe distance and never leave unsupervised in a room with a heater that is working.

Your product

1. Main body
2. Thermostat
3. Indicator light
4. Selection switch

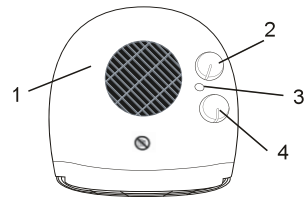


 

Warning ! This product comes fully assembled, before using please ensure that all components and fixings are secure, and make sure the appliance is in perfect condition before operation.




IMPORTANT-RETAIN THIS INFORMATION FOR FUTURE REFERENCE: READ CAREFULLY

The controls

This appliance can be operated by the manual controls located on the top of the heater:

1. " 0 " - OFF position
2. "  " - Fan only
3. "  " - Low heating 1000 W
4. "  " - Maximum heating 2000 W

 Note: Before switching off the appliance, please operate the heater for fan mode for around 20-30 seconds in order to lower the temperature of the internal part of the appliance.

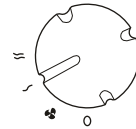

Thermostat control: Turn the thermostat switch clockwise or anticlockwise to set the desired temperature you require. The thermostat will attempt to keep the room temperature at the desired level automatically. Turn the thermostat clockwise to the maximum position. Once the desired room temperature is reached, turn the thermostat anticlockwise until the heater switches off. The heater will switch on and off automatically to maintain the desired temperature.

Safety Control (Thermal Cut-Out):

CAUTION - This product has two overheat protection devices. The first protection device is an overheat switch which can be re-set, once the cause of the overheating has been removed AND the heater has cooled down. The product can then continue to be used normally. The second overheat protection device is a thermal fuse which CANNOT be reset by the user. In the event that the heater stops working as a result of overheating take the following immediate steps: switch the electricity off at the socket and remove the plug. Remove any objects that are covering the product. CAUTION: Do not touch the heater as it will be hot.

Set the heater switches to OFF and leave the heater to cool down fully. Once completely cool, reconnect the heater and switch it on. If it fails to work it is likely that the secondary overheat protection device (thermal fuse) has operated – this overheat protection system cannot be reset by the consumer. Do not open this product. There are no user-serviceable parts inside.

Technical specifications

- > Model: FH-203
- > Power supply: 220-240V~ 50Hz
- > Rated Power: 1700-2000W

> Class II 



Conforms to all relevant European Directives.

Maintenance and cleaning

1. Switch off and unplug from the power supply before cleaning.
2. Using a soft, moist cloth, with or without a mild soap solution, carefully clean the exterior surface of the product.

CAUTION: Allow the product to completely cool before handling or cleaning it.

3. Do not allow water or other liquids to run into the interior of the product, as this could create a fire and/or electrical hazard.

4. We also recommend the periodic cleaning of this appliance by lightly running a vacuum cleaner nozzle over the guards to remove any dust or dirt that may have accumulated inside or on the unit.

CAUTION: Do not use harsh detergents, chemical cleaners or solvents as they may damage the surface finish of the plastic components.

Storage

The product can be stored in the off-season, we recommend using the original (or appropriately sized) box. It is important to keep it in a safe, dry location.

Plug Replacement

This appliance is supplied with a BS1363 3 pin plug fitted with a 13 Amp fuse. Should the fuse require replacement, it must be replaced with a fuse rated at 13 Amp and approved to BS1362.

In the event the mains plug has to be removed/replaced for any reason, please note:

IMPORTANT: The wires in the mains lead are coloured in accordance with the following code:

Blue – Neutral

 
Brown – Live

As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows.

The blue wire must be connected to the terminal marked with an N or coloured black.

The brown wire must be connected to the terminal marked with an L or coloured red.

WARNING: Never connect live or neutral wires to the earth terminal of the plug.

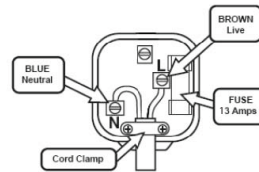

Recycling



This symbol is known as the 'Crossed-out Wheelie Bin Symbol'.

When this symbol is marked on a product or battery, it means that it should not be disposed of with your general household waste.

Some chemicals contained within electrical/electronic products or batteries can be harmful to health and the environment.

Only dispose of electrical/electronic/battery items in separate collection schemes, which cater for the recovery and recycling of materials contained within. Your co-operation is vital to ensure the success of these schemes and for the protection of the environment.



SFD Ltd BA22 8RT
