
 





# Assembly Instructions

## Panel radiator (SHW)


### Parts Supplied

Ref	Description	Illustration	Qty
A	Radiator		1
B	Air vent		1
C	Blanking plug		1


### Fittings Supplied

Ref	Description	Illustration	Qty
D	Masonry plug		2
E	Hook screw		2

#### Vertical use:

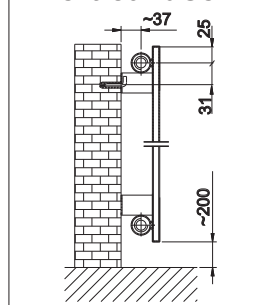

#### Horizontal use:

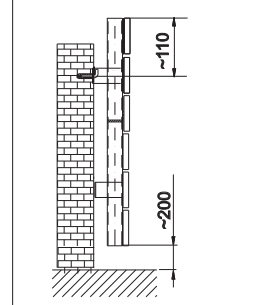

#### Vertical

Fixing Hole Position  
Template

225/225/375

#### Horizontal

Fixing Hole Position  
Template

1388/1688

### Tools Required (not supplied)

Drilling Machine  
Drill 12 mm masonry  
22 mm Spanner  
Hammer  
Flat Nosed Pliers

### Before you start :

- Please read instructions carefully before installation.
- Check the pack and make sure you have all parts listed above. If not, contact your supplier, who will be able to help you.
- Before drilling, first check that there are **no** hidden water pipes or electrical cables.
- This radiator is designed for use in closed heating systems only with a maximum pressure of 3 bars ( most common domestic heating systems do not exceed 3 bars )
- When you are ready to start, make sure you have the right tool to hand, plenty of space and clean dry area for assembly.
- Make sure that you use the right type of wall fixing;-masonry wall plugs supplied -.

## Installation

1. For masonry walls drill 2 holes to a depth of approximately 60 mm and a diameter of 12mm. The distance from the floor to the bottom of the radiator must be at least 200 mm for efficient heating (ventilation ).

### A: Vertical use

The horizontal distance between these two holes should be 375 mm for radiators with an external width of 595 mm or 225 mm for radiators with an external width of 445 mm, or 225 mm for radiators with an external width of 295 mm

### B: Horizontal use

The horizontal distance between these two holes should be 1688 mm for radiators with an external width of 1800 mm or 1388 mm for radiators with an external width of 1500 mm.

2. Insert masonry wall plugs ( D ) provided into the drilled holes.
3. Screw the hook screws ( E ) into the wall plugs ( D )
4. Hang the radiator on the hook screws.
5. Fit the supplied air vent ( B ) and blanking plug ( C ) into the upper threads of the radiator.
6. Connect the water flow and the return pipes to the chosen sides of the radiator. Make the final connections to the radiator isolation valves ( not supplied ). Ensure a water tight seal by using PTFE tape on the threads.
7. Open the valves to the radiator, fill and purge the remaining air from the radiator using the air vent ( B ). When full close the air vent.

## Care & Use

- You must be absolutely certain that the system is **THOROUGHLY** flushed before it is commissioned in order to rinse out any metal, flux and foreign residues. The system must also be thoroughly vented.
- To help prevent internal corrosion and lime scale formation it is recommended that a suitable inhibitor is added to the central heating system.
- Wipe clean with a soft or damp cloth. Never use scourers, abrasives or chemical cleaners.

## Troubleshooting

- If some panels of the radiator are not warm, check and purge once more using the air vent.