



 
 
 
## 863 Replacement Cylinder Fitting Instructions

### Installing a Replacement Cylinder

To fit a Replacement Cylinder you will require the following tools:

- Screwdriver
- Hacksaw

- Remove lock from the inside of the door.
- Unscrew the two connecting bolts and remove the old cylinder.
- Ensure the connecting rod is the same length as the old cylinder by hacksawing off the excess if necessary.
- Insert the new cylinder through the rose and screw into position with the two bolts (on door less that 45mm wide these bolts will been to be shortened). It is important to ensure the cylinder is aligned correnctly.
- Replace the lock. Be sure to engage the connection rod correctly in the back of the lock before tightening.

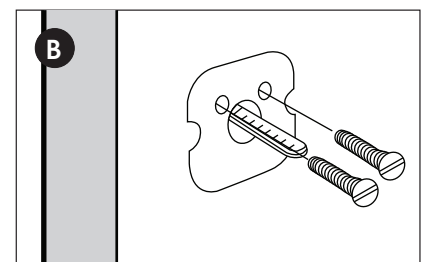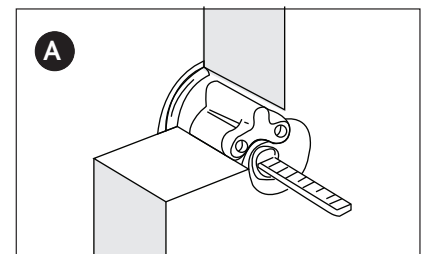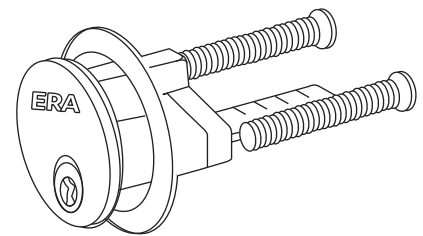

### Additional Information

**Maintenance** - Do not take cylinder apart. Do not oil paint the cylinder. Use a moist cloth only - household abrasives or solvents may affect the surface finish. Lubrication may occasionally be required.