 


 


Fitting Instructions for Ball Bearing Slides

1. The product has three parts:
Cabinet member, Slide member and
Drawer member.

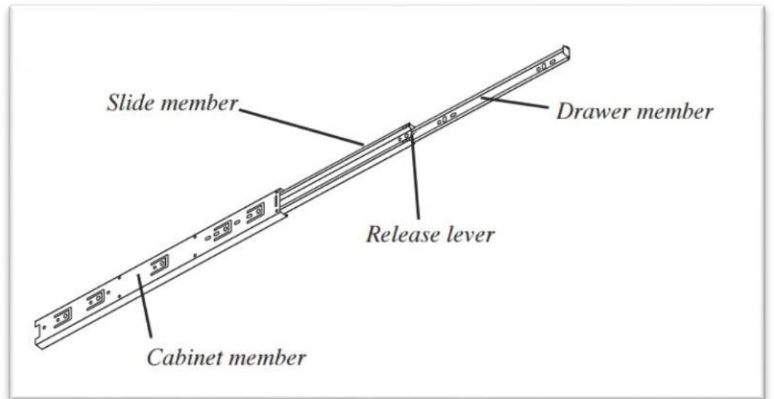

2. Separate the Cabinet Member from Drawer member using the Release Lever.

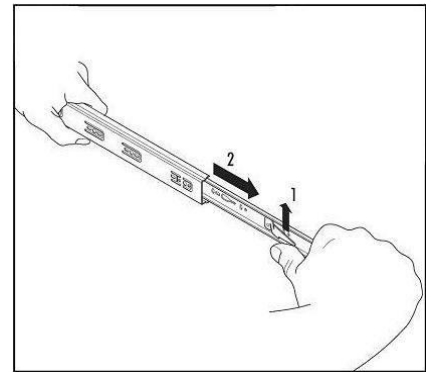

3. On the inside of your cabinet, mark the location of the position for your drawer slide. This should be positioned so that there will be 3mm gap between the drawers.




4. Extend the slide member and locate the cabinet member along the mark made in step 3. Insert the screws through the holes along the cabinet member.





5. Select the other slide & repeat the same process on the other side of the cabinet.
6. Replace the drawer member back with the slide on both the slides.
7. Fully extend the drawer members and place the drawer between the 2 slides – the front of the drawer member should be level with the front of the drawer.

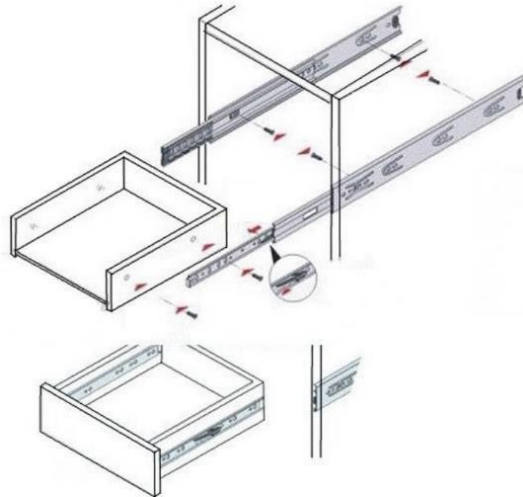

8. Secure the runner to the drawer using the supplied screws, making sure that the slides are the same height on both sides of the drawers.

