 


# TITAN

## Steam Cleaner

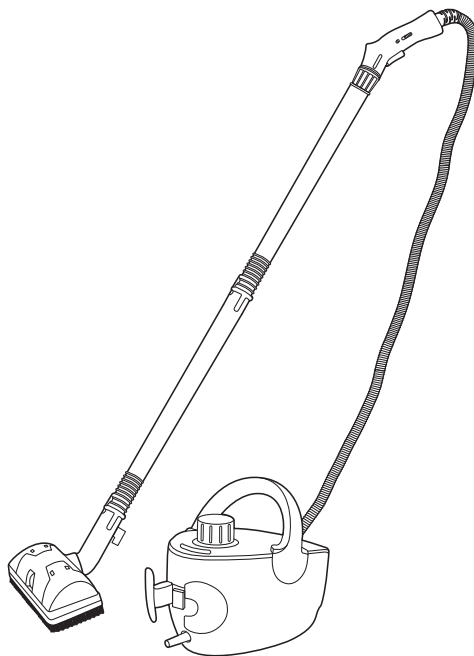

### TTB767STM

EAN: 5059340085883

BX220IM



**WARNING!** Read the instructions before using the appliance!

# Let's get started...

These instructions are for your safety. Please read through them thoroughly before use and retain them for future reference.



## Getting **started**... 03

**Safety** 03

**Your appliance** 08

**Before you start** 09



## **In more detail**... 09

**Assembly** 12

**Operation** 13

**Care and maintenance** 14

**Troubleshooting** 16


**Recycling and disposal** 16

**Guarantee** 17

**Specifications** 17

**EC declaration of conformity** 18

## Safety warnings

- ✓  **CAUTION! Risk of injury.** The filling aperture shall not be opened during use.
- ✓ Read this instruction manual thoroughly before using this appliance. Follow all the safety instructions to avoid damage caused by improper use.
- ✓ Keep this instruction manual for future use. Should this appliance be passed on to a third party, this instruction manual must be included.
- ✓ Use this appliance only in accordance with these instructions. Do not attempt to modify the appliance in any way.
- ✓ This appliance can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance.
- ✓ Keep the appliance out of reach of children when it is energized or cooling down.
- ✓ Ensure the rated voltage shown on the rating label corresponds with the voltage of the supply mains.

- ✓ The appliance must not be left unattended while it is connected to the supply mains.
- ✓ Do not touch the power plug with wet hands.
- ✓ Lay out the cord in such a way that no unintentional pulling or tripping over it is possible.
- ✓ Always switch off the appliance and disconnect from the socket outlet before filling it with water, changing accessories or cleaning it.
- ✓ The appliance has to be disconnected after use and before carrying out user maintenance on the appliance.
- ✓ Do not submerge the appliance in water or other liquids.
- ✓ Protect the power cord against damages. Do not let it hang over sharp edges, do not squeeze or bend it. Keep the power cord away from hot surfaces and open flames and ensure that nobody can pull on or trip over it unintentionally.
- ✓ Do not operate any appliance with a damaged power cord or plug, when the appliance malfunctions or has been damaged in any manner. If the power cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

- ✓ Do not insert foreign objects into the interior of the housing. Do not dismantle or open the appliance under any circumstances. No warranty claims are accepted for damage caused by improper handling.
- ✓ Operate the appliance with the supplied parts only to avoid the risk of injury.
- ✓ Do not direct the steam jet at persons or animals. Hot steam under high pressure can cause serious injuries.
- ✓ The liquid or steam must not be directed towards equipment containing electrical components, such as the interior of ovens.
- ✓ The appliance is not to be used if it has been dropped, if there are visible signs of damage or if it is leaking.
- ✓ Connect the power plug to an easily reachable socket outlet so that in case of an emergency the appliance can be disconnected immediately. Pull the power plug out of the socket outlet to completely switch off the appliance. Use the power plug as the disconnection device.
- ✓ This appliance is not intended to be operated by means of an external timer or separate remote-control system.

- ✓ The appliance is with a British Standard plug. In the event of an electrical overload the fuse may blow. Have the fuse replaced by the manufacturer or qualified service personnel.
- ✓ For additional protection, we recommend the use of a residual current device (RCD) with a tripping current not exceeding 30 mA in the electrical circuit supplying power to your appliance.
- ✓ Do not operate the appliance with an empty water tank. Disconnect the supply mains when the water reserve is used up.
- ✓ Do not add cleaning solutions, scented perfumes, oils or any other chemicals to the water tank as this may damage the appliance or make it unsafe for use. If you live in an area with hard water, we recommend the use of distilled water.
- ✓ Use extra caution when using the appliance to clean stairs or other uneven surfaces.
- ✓ Do not touch hot surfaces when using the appliance. Let the accessories cool down before changing them.
- ✓ Do not steam at one spot for an extended period of time to avoid damages to the surfaces.

- ☑ Do not use the window wiper on a cold surface, the sudden thermal change could cause the surface to break. Warm the surface with the steam jet thoroughly from a distance of about 40 cm.

## Symbol explanation

On the appliance, the rating label and within these instructions you will find among others the following symbols and abbreviations. Familiarise yourself with them to reduce hazards like personal injuries and damage to property.

V~	Volt, (alternating voltage)	L	Litre
W	Watt	g/min	Gram/minute
Hz	Hertz		



Warning sign.



Read the instruction manual.



Always disconnect the appliance from power supply and let the appliance cool down before performing inspection, maintenance and cleaning work!



WARNING! Hot steam! Risk of scalding.



Protection fuse is 13 A.



The appliance complies with the applicable European directives and an evaluation method of conformity for these directives was done.



Waste electrical appliances should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or local store for recycling advice.











Indoor use only.

IPX4

Protected against splashing water from any direction. Do not immerse in water.



 This appliance is classified as protection class I and must be connected to a protective ground.

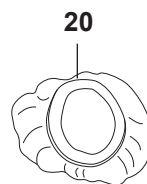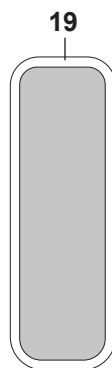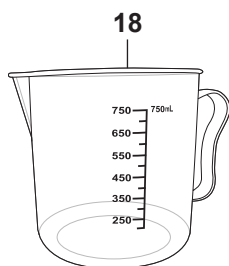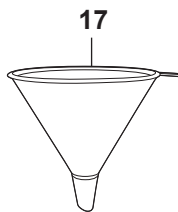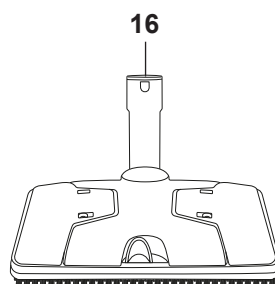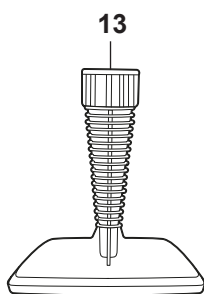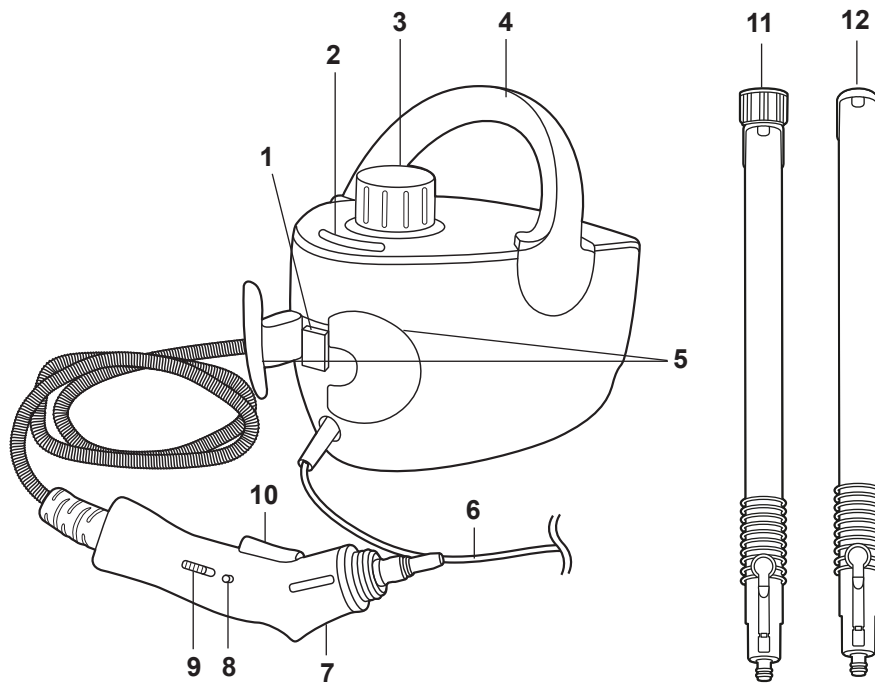



- |                        |                                    |
|------------------------|------------------------------------|
| 1 On/off switch        | 11 Extension tube (with connector) |
| 2 Steam ready light    | 12 Extension tube                  |
| 3 Water tank cap       | 13 Ironing steam head              |
| 4 Carrying handle      | 14 Wand nozzle                     |
| 5 Cord winder          | 15 Round brush                     |
| 6 Power cord with plug | 16 Floor brush                     |
| 7 Steam gun            | 17 Filling funnel                  |
| 8 Side button          | 18 Measuring cup                   |
| 9 Safety lock          | 19 Floor cloth x2                  |
| 10 Steam trigger       | 20 Cloth cover for ironing         |

## Unpacking



**DANGER! Risk of suffocation!** Keep all packaging materials away from children.

- Unpack all parts and lay them on a flat, stable surface. Remove all packing materials.
- Make sure the delivery contents are complete and free of any damage. If you find that parts are missing or show damage do not use the appliance but contact your dealer. Using an incomplete or damaged appliance represents a hazard to people and property.
- Keep the packaging for storing the appliance when not in use for an extended period of time.

## Intended use

- This appliance is designed for cleaning surfaces which are resistant to hot steam. Do not use on leather or wooden polished furniture, waxed floors, synthetic fabrics, velvet or other delicate, steam sensitive materials. It is recommended to test on a small hidden area of the working surface before use.
- This appliance is intended for private domestic use only, not for any commercial trade use. It must not be used for any purposes other than those described.
- This appliance is splash-proof only. Do not expose to high pressure water jets.
- This appliance is not intended for cleaning swimming pools.

## Filling the water tank



**WARNING!** Switch the appliance off and disconnect it from the socket outlet before filling the water tank.



**NOTE:** Use the steam trigger on the steam gun and direct the jet into a suitable container to bleed out the remaining pressure from the water tank.



**NOTE:** Always let the appliance cool down and then loosen the water tank cap slowly to let the pressure and hot steam escape.

1. Turn the water tank cap (3) anti-clockwise to remove it (Fig. 1).

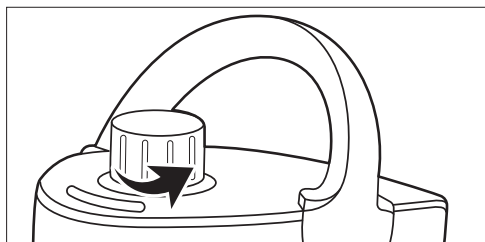


Fig. 1

2. Position the filling funnel (17) on the water tank inlet (Fig. 2).
3. Pour up approx. 1000 ml of water slowly using the measuring cup (18) (Fig. 3).

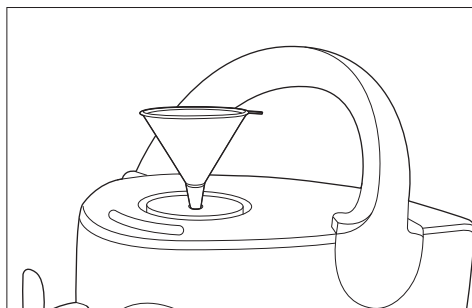


Fig. 2

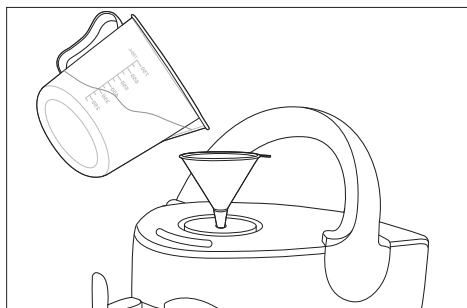


Fig. 3

4. Refit the water tank cap (3) and turn it clockwise to tighten it in place (Fig. 4).

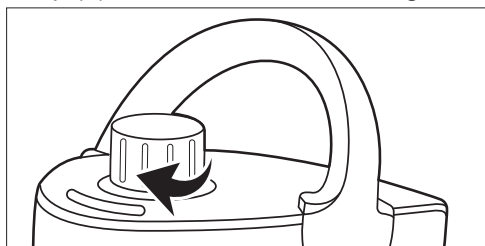


Fig. 4

## Switching on/off



**WARNING!** Before switching on the appliance, make sure that there is sufficient water inside the water tank. Refill the water tank if necessary.

1. Connect the power plug (6) to a suitable socket outlet.
2. To switch the appliance on, press the "I" down on the on/off switch (1). The steam ready light (2) illuminates red and the appliance starts to heat up (Fig. 5).
3. To switch the appliance off, press the "O" down on the on/off switch (1). Disconnect the appliance and let it cool down (Fig. 5).

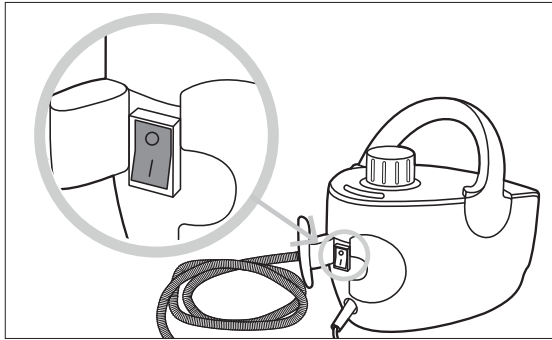


Fig. 5

## Child lock

Use the child lock to prevent the steam from being dispensed accidentally.

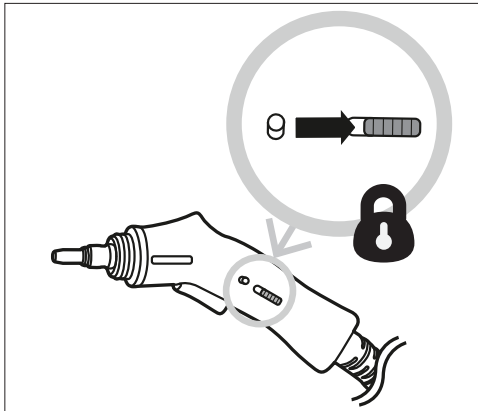


Fig. 6


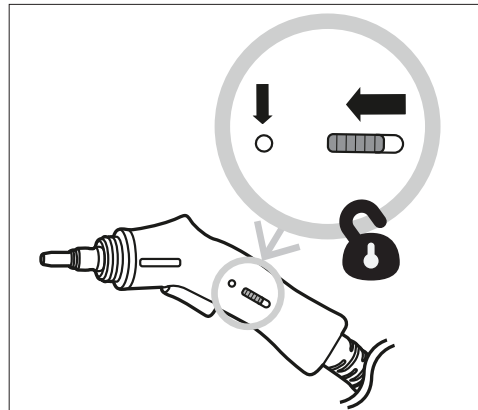


Fig. 7

1. Slide the safety lock (9) backward and the side button (8) will pop out. The child lock is activated (Fig. 6).
2. To deactivate the child lock, press the side button (8) down and slide the safety lock (9) forward (Fig. 7).

## Assembly


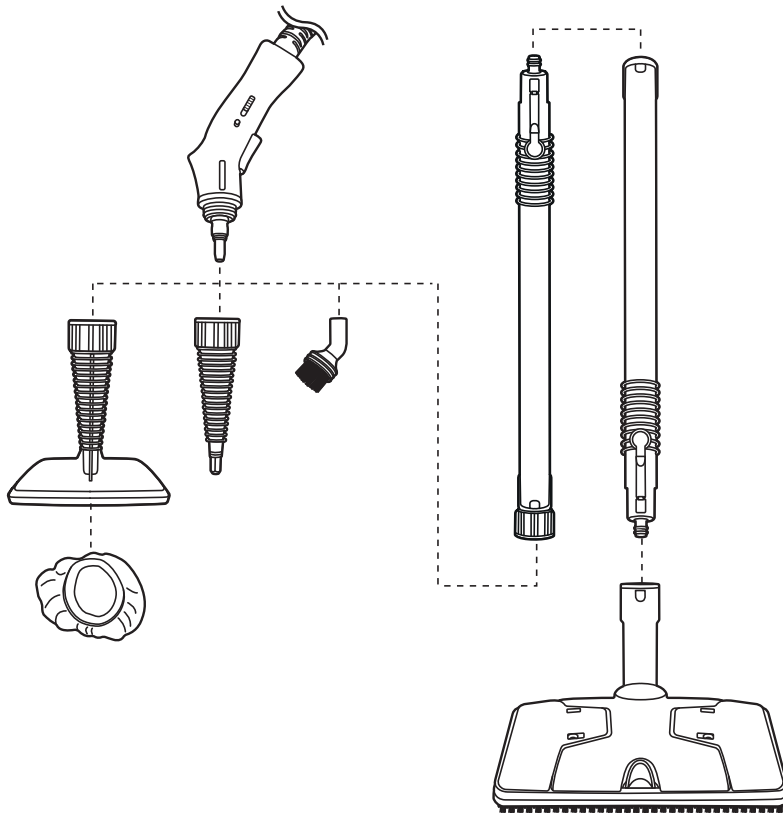


1. Connect the desired attachment to the steam gun (7). Press and turn clockwise to lock it in place.
2. Turn anti-clockwise and pull to remove the attachment.


Attachments	Intended use
Ironing steam head (13) with cloth cover (20)	<ul style="list-style-type: none"> <li>• Fit the cloth cover (20) to protect delicate fabrics from steam and heat when ironing with the steam head (13).</li> <li>• Remove dust from sofas, armchairs, cushions or mattresses.</li> </ul>
Wand nozzle (14)	<ul style="list-style-type: none"> <li>• For cleaning deep-seated dirt on all surfaces.</li> </ul>
Round brush (15)	<ul style="list-style-type: none"> <li>• Remove stubborn stains on cook tops and scale buildup on bathroom fixtures.</li> </ul>

Floor brush (16)

- Fit it to the extension tube (12), then to the extension tube with connector (11) which connects to the steam gun.
- For soft surfaces, such as carpets and rugs, attach a floor cloth (19) onto it. Slide the switch to the left to move the sliding plate out and then press to clamp the floor cloth.

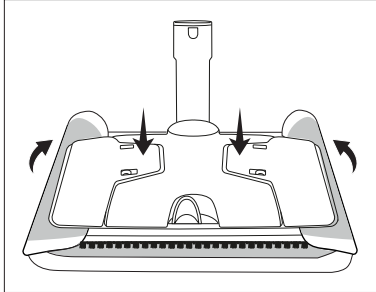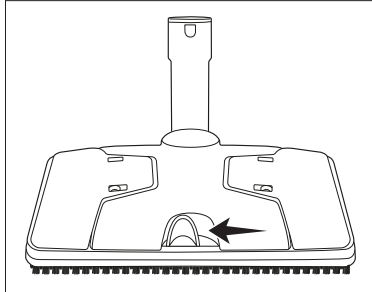

- For hard surfaces, slide the switch to the right to move the sliding plate in.

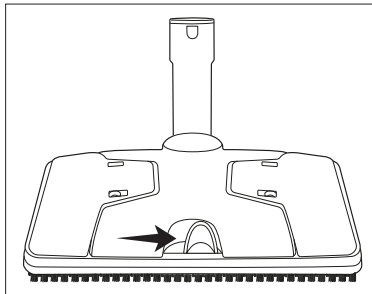

**CAUTION!** Avoid getting the fingers caught in between the clamp and the spikes of the floor brush (16) when attaching the floor cloth (19).

## Operation



**WARNING!** Never open the water tank cap during use.



**CAUTION!** Do not touch. The surface of the unit is hot during operation.



**NOTE:** The steam ready light illuminates red and green during operation to show that the appliance has reached the working pressure.

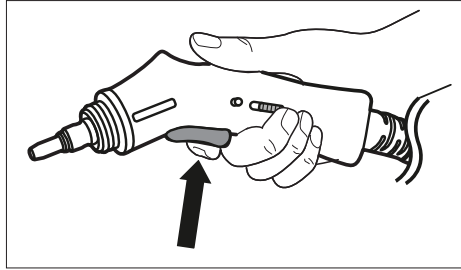


Fig. 8

1. Press the steam trigger (10) on the steam gun (7) to dispense steam (Fig. 8).
2. If needed, connect the desired attachment to the steam gun (7) (see section "Assembly").

## The golden rules for care



**WARNING!** Always disconnect the appliance from power supply and let the appliance cool down before performing inspection, maintenance and cleaning work!



Keep the appliance clean. Remove debris from it after each use and before storage.



Regular and proper cleaning will help ensure safe use and prolong the life of the appliance.



Inspect the appliance before each use for worn and damaged parts. Do not operate it if you find broken and worn parts.



**WARNING!** Only perform repairs and maintenance work according to these instructions! All further works must be performed by a qualified specialist!

## General cleaning



**NOTE:** Do not use chemical, alkaline, abrasive or other aggressive detergents or disinfectants to clean this appliance as they might be harmful to its surfaces.



Clean the appliance with a damp cloth. Shake to remove any residues and blocked items from the attachments.



Soak the floor cloths and the cloth cover for the multipurpose brush in warm soapy water for about 5-10 minutes. Then rinse with fresh water.



Pour clean water into the water tank. Shake the appliance gently and drain the water out of the water tank. Repeat for several times.

## Repair

This appliance does not contain any parts that can be repaired by the consumer. Contact an authorised service centre or a similarly qualified person to have it checked and repaired.


## UK plug

If you need to replace the fitted plug, then follow the instructions below.

**IMPORTANT:** The wires in the mains lead are coloured in accordance with the following code:

Blue – Neutral Brown – Live

As the colours of the wire in the mains lead of this appliance may not correspond with the coloured marking identifying the terminals in your plug, proceed as follows. The wire, which is coloured blue, must be connected to the terminal, which is marked with N or coloured black. The wire, which is coloured brown, must be connected to the terminal, which is marked L or coloured red.

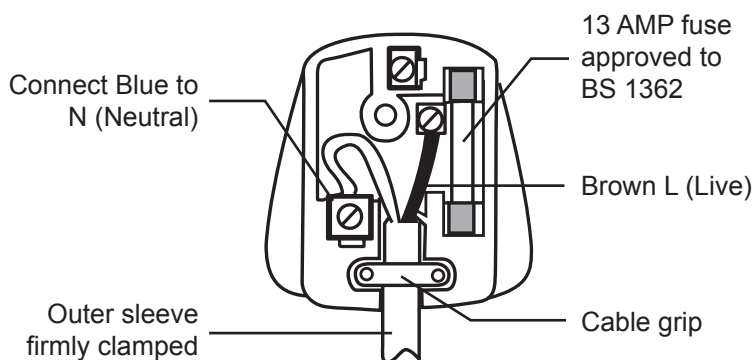

**WARNING!** Never connect live or neutral wires to the earth terminal of the plug.

### Troubleshooting

Suspected malfunctions are often due to causes that the users can fix themselves. Therefore check the appliance using this section. In most cases the problem can be solved quickly.



**WARNING!** Only perform the steps described within these instructions! All further inspection, maintenance and repair work must be performed by an authorised service centre or a similarly qualified specialist if you cannot solve the problem yourself!

Problem	Possible cause	Solution
1. No steam comes out of the nozzle on the steam gun.	1.1 No water in the water tank. 1.2 The working temperature has not reached.	1.1 Refill the water tank. 1.2 Wait until the steam ready light turns green.
2. Surfaces become cloudy, streaky or spotty after steaming.	2.1 The floor cloth or brush cover is too wet or dirty. 2.2 The steam gun is directed at one same spot for too long. 2.3 Hard water is used.	2.1 Disconnect and change with a dry, clean floor cloth or brush cover. 2.2 Do not direct the steam jet at one same spot for more than 15 seconds. 2.3 Use distilled water.
3. Floor head is hard to move.	3.1 The floor cloth or brush cover is not attached correctly. 3.2 The floor cloth or brush cover is too wet or dirty.	3.1 Disconnect and refit the floor cloth or brush cover. 3.2 Disconnect and change with a dry, clean floor cloth or brush cover.
4. The steam ready light illuminates red and green alternately during use.	This is normal and indicates the appliance is heating up to the desired temperature. The steam ready light stays green when it is ready to use.	

### Recycling and disposal



Waste electrical appliances should not be disposed of with household waste. Please recycle where facilities exist. Check with your local authority or local store for recycling advice.



## Guarantee

---

This appliance carries a guarantee of 24 months starting from the day of purchase. Please retain your receipt as a proof.

This guarantee specifically excludes losses due to:

- Normal wear and tear, including accessory wear
- Overload, misuse or neglect
- Failure of consumable items (such as batteries)
- Repairs attempted by anyone other than an authorized agent
- Accidental damage caused by foreign objects or substances
- Lack of routine maintenance
- Failure to follow manufacturer's guidelines
- Loss of use of the goods

Due to continuous appliance improvement, we reserve the right to change the appliance specification without prior notice.

This guarantee does not affect your statutory rights.

For any inquiries relating to the guarantee please contact your retailer:

If you purchased this appliance in B&Q store or website then call 0800 324 7818.

If you bought this appliance in SFX outlet or website then call 1800 932 230.

## Specifications

---

<b>Rated voltage:</b>	220-240 V~, 50/60 Hz
<b>Rated power consumption:</b>	1500 W
<b>Water tank capacity:</b>	1.3 L
<b>Heating time for the first use:</b>	approx. 7 minutes
<b>Amount of steam:</b>	approx. 30 g/min
<b>Working time:</b>	approx. 20 minutes
<b>Working pressure:</b>	3 Bar
<b>IP rating:</b>	IPX4
<b>Length of power line:</b>	3 meters

# TITAN

**Manufacturer, Fabricant, Producent,  
Producător, Fabricante:**

**UK Manufacturer**

Kingfisher International Products Limited  
3 Sheldon Square  
London  
W2 6PX  
United Kingdom

**EU Manufacturer**

Kingfisher International Products B.V.  
Rapenburgerstraat 175E  
1011 VM Amsterdam  
The Netherlands

EN

[www.diy.com](http://www.diy.com)

[www.screwfix.com](http://www.screwfix.com)

To view instruction manuals online,  
visit [www.kingfisher.com/products](http://www.kingfisher.com/products)