# **BRISTAN**

## **Installation Instructions** & User Guide

Please leave these instructions with the end user

Product Code: AS2 THBF C (D1)

## **Specifications**


**Inlet Water Temperature** 



60-65°C Recommended

#### **Dynamic Water Pressure**

Min: 0.5 bar

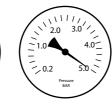


Max: 5.0 bar

Maximum Static Pressure: 10.0 bar

#### Inlet Dimensions

180mm Centres

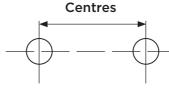

**Inlet Connections** 



3/4" BSP

**TMV2 Designation** 

HP-T

#### Tools You'll Need









#### **Prior to Installation**

All products manufactured and supplied by Bristan are safe provided they are installed, used correctly and receive regular maintenance in accordance with these instructions.

This product has been tested to the TMV2 scheme which complies with the BS EN 1287:1999 (LP) and BS 1111:1999 (HP) thermostatic mixing valve standards. It also satisfies the requirements of the Water Supply (Water Fittings) Regulations 1999 and current by-laws. For full Installation Requirements & Notes (IRN) please visit wras.co.uk/directory.

A TMV2 Manual has also been supplied with this product. Please refer to this manual for testing and commissioning guidance in order to ensure this product still complies to TMV2 standards.

BS 6700 recommends the temperature of stored water should never exceed 65°C. A stored water temperature of 60°C is considered sufficient to meet all normal requirements and will minimise the build up of lime scale in hard water areas.


We recommend isolation valves to be fitted to the inlet water supplies to ensure ease of future maintenance. Before installing these taps the water supply must be thoroughly flushed in order to remove any swarf, solder etc. This product must not be modified in any way as this will invalidate the guarantee.

If in doubt, contact a registered plumber or your Local Water Authority or the Secretary of The Institute of Plumbing, address as follows:-

The Institute of Plumbing, 64 Station Lane. Hornchurch, Essex, RM12 6NB

Tel:01708 472791

#### **Pack Contents**

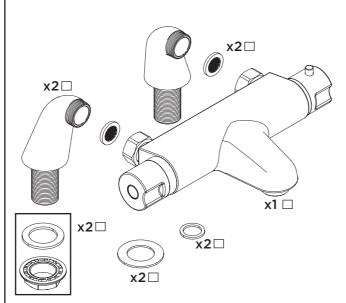

#### **Spare Parts**


To replace any spare parts for your tap, why not scan the QR Code or visit www.bristan.com and search for your product.



### Installation

Choose whether your tap will be deck or wall mounted.

Follow the WMNT10 C instructions to install if wall mounted.

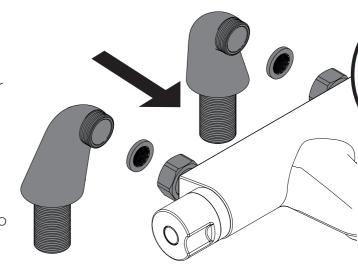



nis tap can als be wall mounted using WMNT10 C. Visit www.bristan. com for more details

If deck mounted, connect the legs supplied to the tap body, ensuring the filter washers are in place.




Feed the tap leas through the bath holes. ensuring the washers are in place.

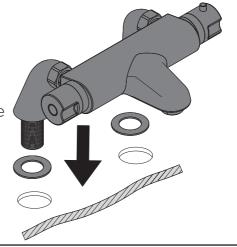


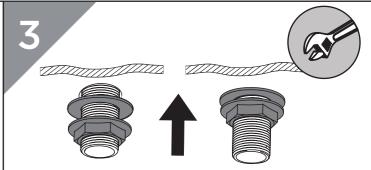

Secure the taps to the bath by using the washer and metal backnut below the bath.

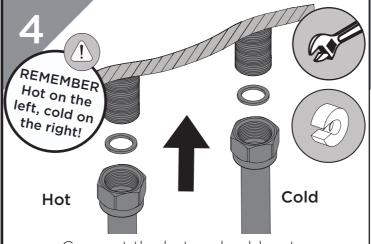

Connect the hot and cold water supplies to the threaded tails, ensuring the washers are in place.

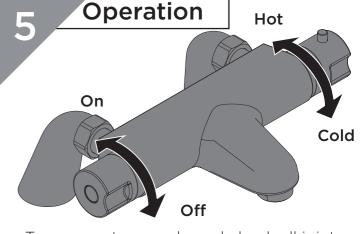

Turn on water supply and check all joints and connections for leaks.

Your tap is now ready to be commissioned.

## **General Cleaning**

Bristan products are made from premium materials, with hand polishing and electroplated finishes.


Your taps or shower should be regularly cleaned with warm water, a mild pH-neutral liquid soap, and polished with a soft cloth. Any residues from soap, toothpaste. shampoos and shower gels can cause blemishes if not rinsed off straight after use.

Household bleaches and cleaners contain harsh chemicals and may damage the surface finish. Avoid using abrasive cloths, scouring pads, scrub sponges, steel wool or anything similar. Some surfaces such as nickel and pewter may be affected by the dye found in some cloths, so it is also important to avoid hanging cloths on spouts.




#### **IMPORTANT**

Please review the TMV Manual supplied with this product for testing and commissioning guidance.

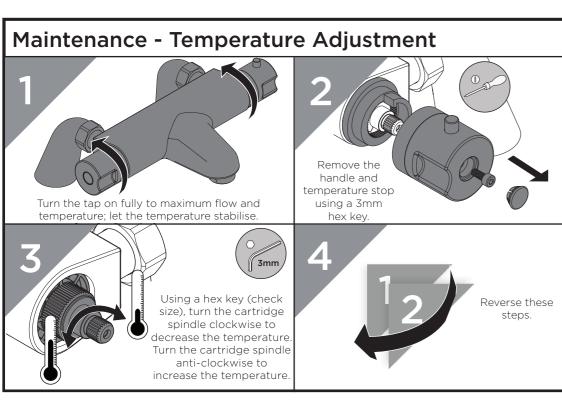

soak until

fully de-scaled.

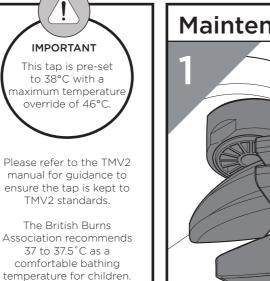

In premises covered by the

Care Standards Act 2000,


the maximum mixed water


outlet temperature is 43°C.


Reverse the steps to

replace the valves

and handles.

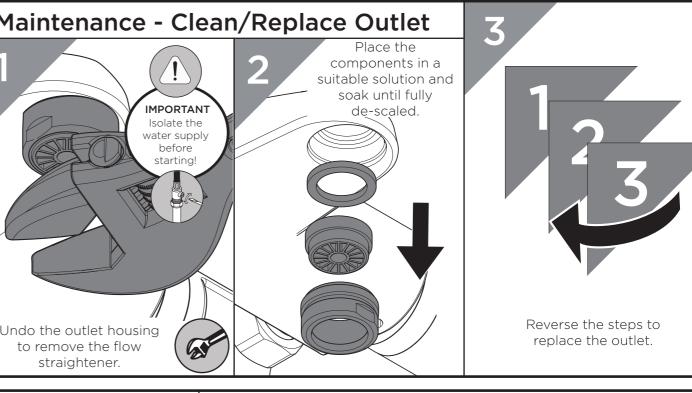

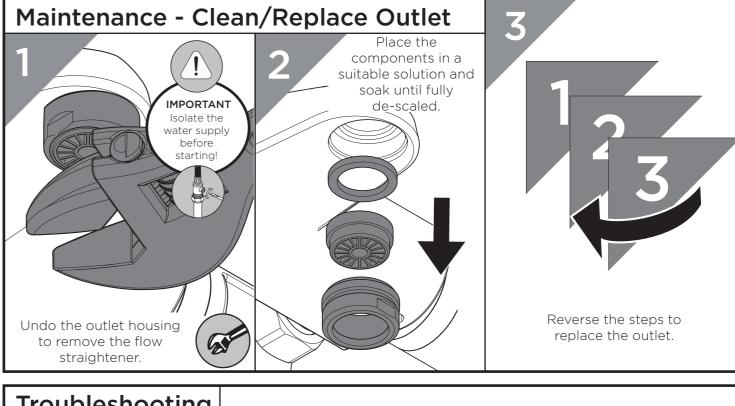

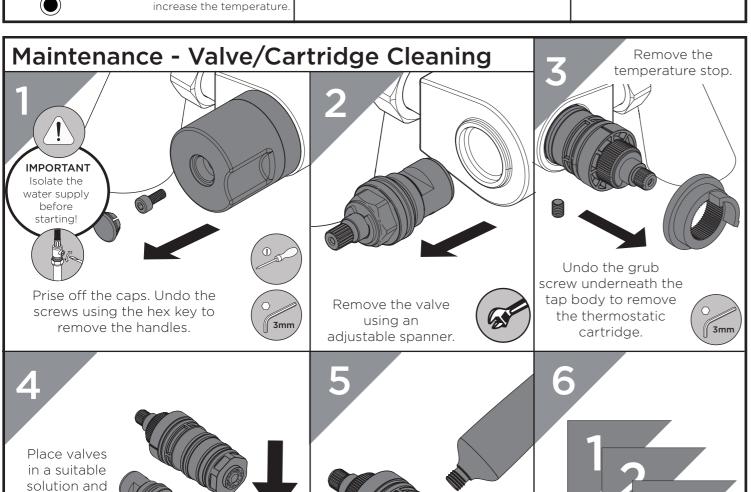

Check any seals and O-rings

for damage. Replace the

valve/cartridge if necessary.

Re-grease using WRAS

approved grease.

Troubleshooting		
Symptom	Cause	Remedy
No flow or low flow rate	Partially closed isolation valve.	Open isolation valve.
	Instantaneous water heater cycles on and off as flow rate or pressure is too low.	Increase water flow rate or pressure through system.
	Head of water is below the minimum distance required.	Refer to specification for minimum distance required.
	Hot or cold water being drawn off elsewhere causing pressure changes or instantaneous boiler temperature changes.	Do not use other water outlets when using the taps.
	Airlock or partial blockage in the supply pipework.	Flush through pipework to ensure removal of debris and any airlocks.
Water dripping from taps	This is normal for a short time after using the taps.	This is caused by residual water tension, the build up of water in the tap body.
	If water continues to drip, possibly due to the ceramic disc valves	Remove valves and clean, refer to 'Maintenance' section before starting any maintenance.
Taps do not turn on	Closed isolation valve.	Open isolation valve.
	Mains water supply turned off.	Turn on mains water supply.

#### **Love Your Chrome**



Bristan offers an effective chrome-friendly cleaning kit for use with your taps and showers. Scan the QR Code or search for 'CLEAN KITO1' on www.bristan.com.

At Bristan, we want to make things as easy as possible for our customers. That's why we offer solid guarantees on all our products, effective from the date of purchase, to give you peace of mind.

To start your free guarantee simply scan the QR code and register your product. Alternatively visit www.bristan.com/register to register your product via a computer.

For full guarantee terms and conditions visit www.bristan.com/guarantees.



We Know & We Care.