 




Erbauer

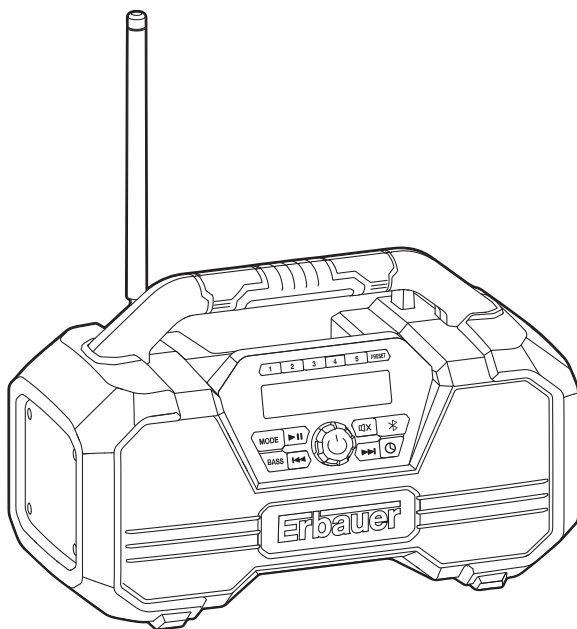

EAN. 5059340253237

ERD18-Li

ORIGINAL INSTRUCTIONS

EN



Safety instructions



Product description



Assembly



Use



+



Care & maintenance



 
 
 
Guarantee



Declaration of Conformity








WARNING! Please read all safety warnings carefully and be sure that they are fully understood before handling the tool.

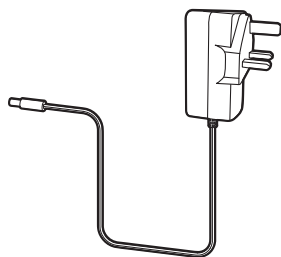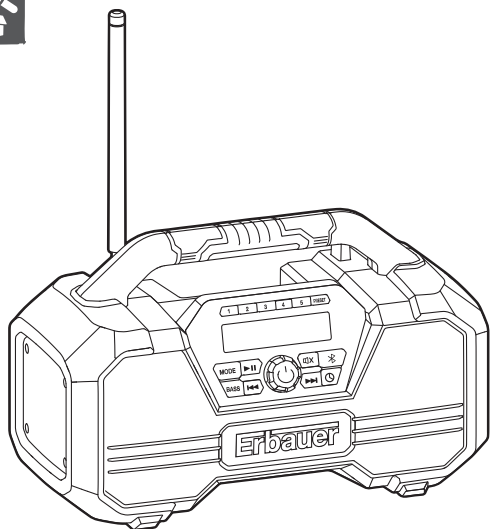





PRODUCT DESCRIPTION

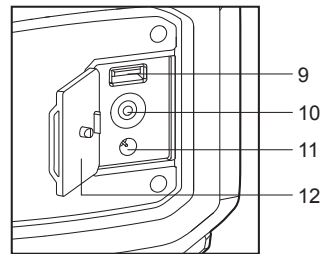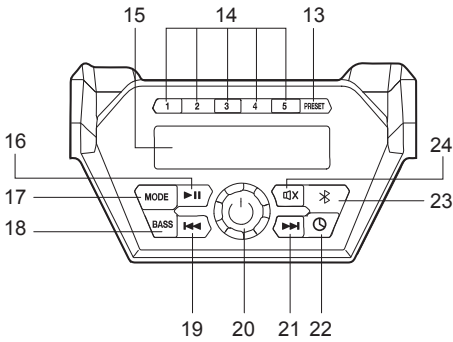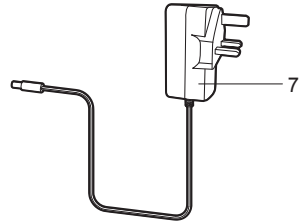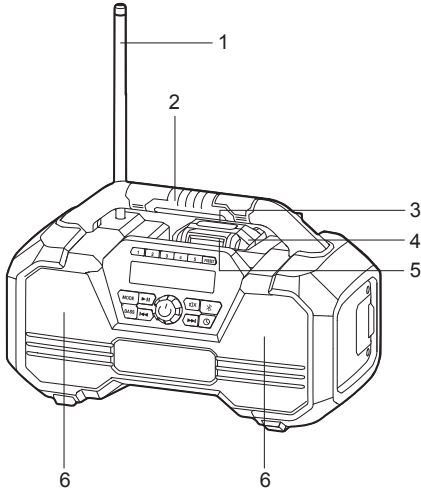     


A1

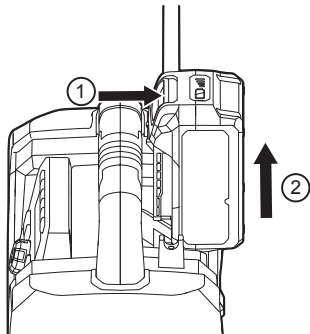 


A2

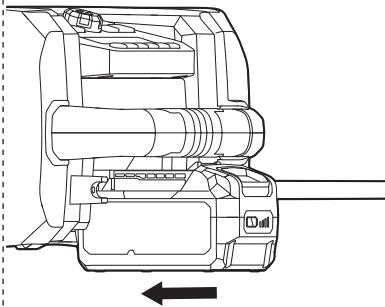 


B

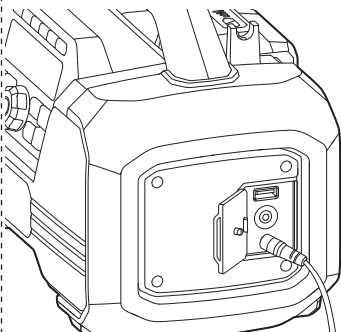 


C

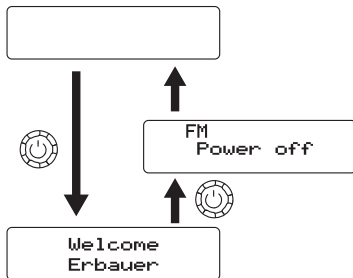 


D

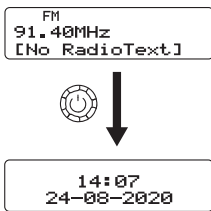 


E

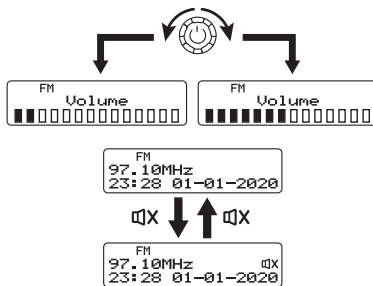 


F

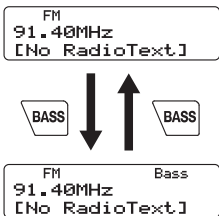 


G

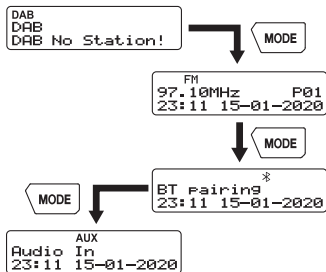 


H

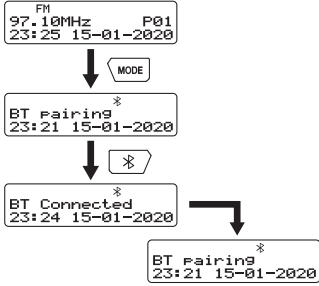 


J

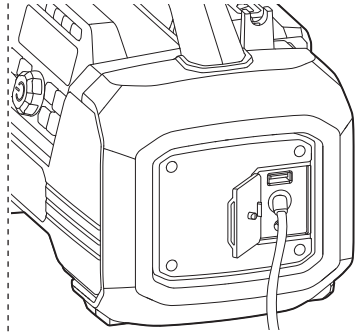 

K

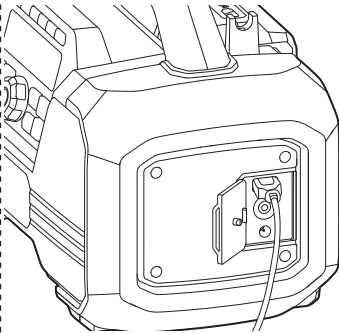 


L

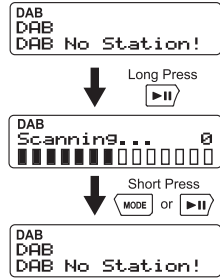 


M1



 
M2

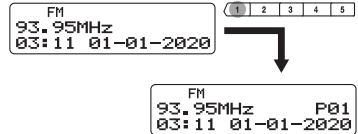

N1

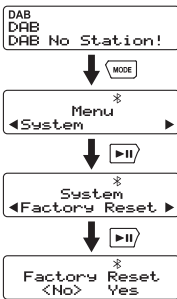 

N2

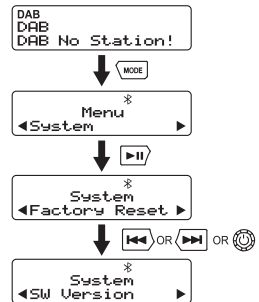 



SAFETY INSTRUCTIONS

GENERAL PRODUCT SAFETY WARNINGS



WARNING! Read all safety warnings, instructions, illustrations and specifications provided with this product. *Failure to follow all instructions listed below may result in electric shock, fire and/or serious injury.*

Save all warnings and instructions for future reference.

- *Never expose the product to dripping or splashing ,no objects filled with liquids, such as vases, shall be placed on it.*
- *No flame sources, such as lighted candles, should be placed on it.*
- *Never disassemble or modify this product in any way. Refer all servicing to qualified service personnel.*
- *Before all work on the product (e.g. disassembly, maintenance etc.) and during transportation or storage, remove the battery from the device.*
- *Use the product only in dry conditions. Protect the product from moisture and splash water.*
- *If the product is brought from a very cold to a warmer environment or vice versa, you should allow the product to acclimatise before using it. This will prevent condensation inside the product.*
- *When using the product in combination with external products, it is essential to observe the safety information and instructions in the operating instructions of the external products.*
- *Keep the product clean. Through contamination there is a risk of electric shock.*

- *Keep your work area clean and well lit. Cluttered or dark work areas invite accidents.*
- *Use only power supplies listed in the user manual.*

BATTERY PRODUCT USE AND CARE

- Recharge only with the charger specified by the manufacturer.** *A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.*
- Use product only with specifically designated battery packs.** *Use of any other battery packs may create a risk of injury and fire.*
- When battery pack is not in use, keep it away from other metal objects, like paper clips, coins, keys, nails, screws or other small metal objects, that can make a connection from one terminal to another.** *Shorting the battery terminals together may cause burns or a fire.*
- Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help.** *Liquid ejected from the battery may cause irritation or burns.*
- Do not use battery pack or tool that is damaged or modified.** *Damaged or modified batteries may exhibit unpredictable behaviour resulting in fire, explosion or risk of injury.*
- Do not expose a battery pack or tool to fire or excessive temperature.** *Exposure to fire or temperature above 130 °C may cause explosion.*
- Follow all charging instructions and do not charge the battery pack or tool outside the temperature range specified in the instructions.** *Charging improperly or at temperatures outside the specified range may damage the battery and increase the risk of fire.*

- h. *Use only batteries approved by the manufacturer.*

CAUTION :“Risk of fire or explosion if the battery is replaced by an incorrect type”

- i. *Replacement of a battery with an incorrect type that can defeat a safeguard.*
- j. *Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion.*
- k. *Leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas.*
- l. *A battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.*

ADDITIONAL SAFETY WARNINGS FOR BATTERY

- a. *Do not connect the positive terminal and negative terminal of the battery to each other with any metal object (such as wire).*
- b. *Do not carry or store battery together with necklaces, hairpins or other metal objects.*
- c. *Do not pierce the battery with nails, strike the battery with a hammer, step on the battery or otherwise subject it to strong impacts or shocks.*
- d. *Do not solder directly onto the battery.*
- e. *Do not expose battery to water or salt water, or allow the battery to get wet.*
- f. *Do not disassemble or modify the battery.*
- g. *Do not place the battery in or near fire, on stoves or other high temperature locations. Do not place the battery in direct sunlight, or use or store the battery inside cars in hot weather.*
- h. *Do not place the battery in microwave ovens, high-pressure containers or on induction cookware.*

- i. *If you intend to store a battery for a period without use then store battery at room temperature (19°C to 25°C), charged to about 30 - 50% of capacity. When storing for very long periods boost charge the battery once per year to prevent over discharge.*
- j. *Never service damaged battery packs. Service of battery packs should only be performed by the manufacturer or authorized service providers.*



PRODUCT DESCRIPTION

1. FM Antenna
2. Handle
3. Power Bar Button
4. Battery Pack (not included)
5. Battery Release Button
6. Speaker
7. AC/DC Adaptor
8. AUX Cable
9. USB Output Port
10. AUX Input Port
11. DC Socket
12. Dust-Proof Cover
13. Preset List Button
14. Preset Button
15. Display
16. Play/Pause Button
17. Mode Button
18. Bass Button
19. Tune/Seek Down Button
20. On/Off/Volume Knob
21. Tune/Seek Up Button
22. Clock Button
23. Bluetooth® Button
24. Mute Button

01 TECHNICAL SPECIFICATIONS

Rated AC input for AC/DC Adaptor:	100-240V~ 50-60Hz, 0.7A
Rated output for AC/DC Adaptor:	18Vd.c. 1.2A, 21.6W
Rated DC input:	18V d.c.
Rated output power of Speaker:	15Wx2
USB port output:	5 V, Max. 2.1 A
AUX cable plug:	3.5 mm

Bluetooth® standard:	V5.0
Bluetooth® Range:	Up to 100 ft. (30 m)
Bluetooth® Frequency Range:	2402 MHz - 2480 MHz
Bluetooth® Max EIRP:	-1.41 dBm (0.723 mW)
FM:	87.5MHz-108MHz
DAB:	174.928MHz-239.2MHz
IP class:	IP64
LxWxH:	310 x 200 x 150 mm
Net weight (without battery):	2 kg
Operating temperature:	0 - 40°C

For use with battery pack and charger as below:

Battery pack model:	EBAT18-Li-2 / EBAT18-Li-4 / EBAT18-Li-5 / EHPB18-Li-4 EHPB18-Li-8
Charger model:	EC18-Li / EFC18-Li / EMC18-Li

For use with AC/DC Adapter as below:

Model No.:	MX24W1-1801200B
Manufacturer:	Shenzhen Mingxin Power Technologies Co.,Ltd.

RATING LABEL EXPLANATION

ERD18-Li = MODEL NUMBER	E = ERBAUER
	RD = RADIO
	18 = 18 V d.c.
	Li = LITHIUM ION



ASSEMBLY

01 SYMBOLS



Caution / Warning.



Read the instruction manual.



Switch the product off and remove the battery pack to disconnect from the power supply before assembly, cleaning, adjustments, maintenance, storage and transportation.

IP64

Ingress protection degree



Do not dispose of battery packs in rivers or immerse in water.



Do not dispose of battery packs in fire. They will explode and cause injury.



Do not expose battery packs to heat in excess of 40°C

KEEP COOL TECHNOLOGY

Keep Cool Battery Technology



USB output port



Only for indoor use



Double insulation



The output plug is with positive center pole and negative outer pole



Positive terminal



Negative terminal



Bluetooth®

DAB

The name “DAB” in this manual indicates “Digital Radio”

yyWxx

Manufacturing date code: Year of manufacturing (20yy) and week of manufacturing (Wxx)



The product complies with the applicable European directives and an evaluation method of conformity for these directives was done.



This product is in accordance with applicable UK legislation. Radio Equipment Regulations 2017 (S.I. 2017/1206)



This symbol designates that this tool is listed by the Intertek Testing Services, to Germany and EU Standards.



WEEE symbol. Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or local store for recycling advice.

02 UNPACKING

Unpack all parts and lay them on a flat, stable surface.

- Remove all packing materials and shipping products, if applicable.
- Make sure the delivery contents are complete and free of any damage. If you find that parts are missing or show damage do not use the product but contact your dealer. Using an incomplete or damaged product represents a hazard to people and property.
- Ensure that you have all the accessories and tools needed for assembly and operation. This also includes suitable personal protective equipment.



WARNING! The product and the packaging are not children’s toys!

Children must not play with plastic bags, sheets and small parts! There is a danger of choking and suffocation!

03 ASSEMBLING THE DEVICE

ASSEMBLY

CHARGING YOUR BATTERY PACK

 








The battery has been shipped in a low charge condition. Charge it fully before first use. Refer to the charger instruction manual for the details.

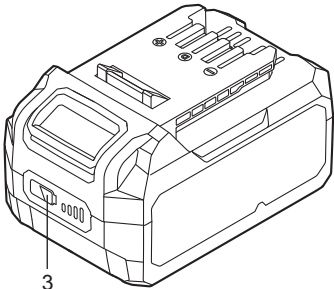TO REMOVE OR INSTALL THE BATTERY PACK (A1, A2)

Depress the battery pack release button to release and slide the battery pack out from your tool. After recharge, slide it back into your tool. A simple push and slight pressure will be sufficient.

BATTERY PACK POWER BAR

The Li-Ion battery pack (4) is equipped with a POWER BAR which is used to give an indication of the battery pack's remaining charge. Press the POWER BAR button (3) to check battery charge as below. The LED will stay lit for approximately 5 seconds.

  Flash  On  Off	76-100% Charge	
	51-75% Charge	
	26-50% Charge	
	5-25% Charge	
	under 5% Charge	

USING SUPPLIED AC/DC ADAPTOR (B)

Open the dust-proof cover (12) on the right side of the radio, insert the AC/DC adaptor (7) plug into the DC socket (11).

Plug the adaptor into a standard mains socket outlet. Whenever the adaptor is used, the battery pack is automatically disconnected. The AC/DC adaptor should be disconnected from the main supply when not in use.



NOTE: The battery cartridge is not charged by using AC/DC adaptor.

After using AC/DC adaptor, replace the dust-proof cover to protect the DC socket against dust, dirt or moisture.

POSITIONABLE FLEXIBLE FM ANTENNA

To decrease interference or static noise, rotate the FM antenna (1) or move the unit to a higher elevation. The antenna folds down and out of the way when not in use.



USE

01 INTENDED USE


This unit is intended:

- for reception and playback of FM and DAB radio stations
- for import audio sound from other products such as mobile phones, MP3 players, CD players etc. for playing music through Bluetooth® or AUX cable
- for USB charging function with power supply


02 OPERATION

ON / OFF SWITCH (C)


Switching on:

Briefly press the On/Off/Volume knob  and the unit switches on. The display will show “**Welcome Erbauer**” and after 1 second will shift to DAB operation mode.

Switching off:

Press the On/Off/ Volume knob  and hold for 2 seconds. The display will show “**Power Off**” and after 1 second will switch off.

STANDBY MODE (D)

When the unit is switch on, briefly press the On/Off/Volume knob , the unit switches to standby mode.

When the unit is in standby mode, all audio output will stop. Only the display will continue showing the time and date, but the display brightness will dim after 30 seconds.

Briefly press the On/Off/Volume knob  to return to full operating mode.



NOTICE: When in standby mode, the unit will turn off automatically after 1 hour of inactivity.

When in standby mode, USB charging is available.

SETTING THE TIME

In any mode, press the CLOCK button  for 2 seconds to set the time. The numbers blink in this order: hour> minute> date > month > year.

Press the  or  button to change each value.

Press the  button to switch to the next setting.




To save the time settings press the ►|| button again. If you don't press it again and don't press any other button for 10 seconds, the procedure is interrupted and the changes you have made are discarded.



NOTE: The unit default setting is 24 hour clock format.

SETTING THE VOLUME (E)

To increase the volume, rotate the On/Off/Volume knob  clockwise. To reduce it, turn the knob to the left.

Briefly press the  button to mute the sound. Briefly press the  button again or rotate the On/Off/Volume knob  to unmute the sound.

tone Adjustment (F)

The low frequency (bass) boost can be turned on or off:

Briefly press the BASS button. When the bass boost function is on, the Bass symbol lights up.

SELECTING THE OPERATING MODE (G)


Briefly press the MODE button for selecting the operating mode until the desired mode is displayed.

The following operating modes are available:

- DAB Radio reception
- FM Radio reception
- Playback of music sources connected via Bluetooth®
- Playback of music sources connected via AUX cable

The selection is shown by means of the corresponding symbol on the top of the display


BLUETOOTH® OPERATING MODE (H)

Activate the Bluetooth® operating mode with the MODE button or press the Bluetooth® button . Activate the Bluetooth® function on the device to be connected (smartphone or similar) and select "ERBAUER ERD18-Li" as the target of the Bluetooth® connection. For this purpose, follow the instructions in the operating manual of the paired device (smartphone or similar).

Press the ◀◀ or ▶▶ button to change to previous or next song.

Press ►|| button to pause or play.



NOTICE: To disconnect (forget) the Bluetooth® device after successful pairing, press the  button and hold for 2 seconds. The paired device is disconnected.

When in Bluetooth® operating mode, the unit will turn off automatically after 1 hour of inactivity.

AUX IN OPERATING MODE (J)

Select the AUX IN operating mode using the MODE button.

Open the dust-proof cover (12) and connect the external music source (MP3 player or similar) to the AUX input port (10) of the unit using the included AUX cable. Switch on the external music source and start the playback.

Set the volume with the regulator for the external music source or the volume knob of the unit.



NOTE: Batteries of the connected devices cannot be charged via the AUX input port.

When the unit is switched off, the connected devices are not switched off.

After using AUX input port, replace the dust-proof cover to protect the port against dust, dirt or moisture.

CHARGING EXTERNAL DEVICES VIA THE USB PORT (K)

Open the dust-proof cover (12), insert the USB plug of the device to be charged into the USB output port (9) of the unit.

The USB output port is a connection port for powering low power devices such as mobile phones, MP3 players, etc.

Immediately disconnect the USB device after charging.



NOTE: No music playback available via USB connection.

After using the USB output port, replace the dust-proof cover to protect the port against dust, dirt or moisture.

DAB OPERATION MODE

TUNING (DAB)

When the device is first switched on in DAB mode, the radio will auto scan to find broadcast stations in the local area.

Briefly press the MODE button or the  button to stop auto scanning.

Briefly Press the  or  button to scroll through the stations.

FINDING NEW STATIONS (DAB)(L)

From time to time, new DAB radio stations may become available. Or you may have moved to a different part of the country. In this case you may need to activate your radio to scan for new stations. Press the ►|| button for 2 seconds, your radio will perform a full scan of the DAB frequencies. You can also briefly press the MODE button or the ►|| Button to stop auto scanning. As new stations are found, the station counter on the right side in the display will increase and stations will be added to the list.

FM OPEARATION MODE

Press the MODE button until FM is highlighted.

Manual tuning:


Briefly Press the ◀◀ or ▶▶ button to set the desired frequency. Each press will increase or decrease the frequency by 0.05MHz. The frequency is shown on the display.

Scan Tuning:

Press the ◀◀ or ▶▶ button and hold for 2 seconds, the tuner frequency will increase to seek the first radio station with strong signal and stop at that station. The frequency is shown on the display. The right arrow button ▶▶ may be pressed for 2 seconds again to continue seeking a radio station at higher frequencies. The left arrow button ◀◀ may be pressed to seek radio stations at lower frequencies.

STORING STATIONS (DAB AND FM)

To store radio stations in preset list (M1)


- Tune to the current radio station and press the preset list button **PRESET** for 2 seconds to enter "Preset Store"
- Press the ◀◀ or ▶▶ button or rotate  knob to select the stored location, e.g.10
- Press the ►|| button to save it, P10 is shown on the display.



NOTE: You can store up to 10 radio stations.

If you select a stored location that is already filled, the station will be replaced by the station you are listening to.

To recall the selected stations

- Press the preset list button **PRESET** to enter "Preset Store"
- Press the ◀◀ or ▶▶ button or rotate  knob to find the selected radio station, e.g.10
- Press the ►|| button to confirm, P10 will be played.

To store and recall stations in preset memories quickly (M2)

Additionally, the unit also provides 5 memory presets (1-5) for each DAB/FM waveband to be stored and recalled quickly.

To store the current radio station, press and hold the selected preset button (1-5) until the preset number is shown on the display. The station is then stored in the selected preset button.

Repeat this procedure for the remaining presets. Stations stored in the preset memory can be overwritten by following the procedures described above.


To recall stations from the preset memories, briefly press the selected reset button while the unit is in radio mode. The preset number and station frequency will appear on the display.

SYSTEM MENU SETTING

In any mode, press the MODE button and hold on for 2 seconds to enter system menu setting. Briefly press the MODE button to return last function interface.


FACTORY RESET (N1)

If your radio fails to operate or some digits on the display are missing or incomplete, carry out the following procedure.

- Press the MODE button to enter “**System**”
- Press the ►|| button to enter “**Factory Reset**”
- Press the ►|| button to enter “**Yes or No**”
- Press the ◀◀ or ▶▶ button or rotate  knob to select Yes or No and press the ►|| button to confirm the setting. After selecting Factory Reset/Yes, your radio will be switched off automatically.

SW Version (N2)

The software display cannot be altered and is just for your reference.

- Press the MODE button to enter “**System**”
- Press the ►|| button to enter “**Factory Reset**”
- Press the ◀◀ or ▶▶ button or rotate  knob to find “**SW Version**” and press the ►|| button. The software version will show on the display.

Efficiency table for AC/DC Adaptor

	VALUE AND PRECISION	UNIT
Manufacturer's name or trade mark, commercial registration number and address	Shenzhen Mingxin Power Technologies Co.,Ltd. 4th floor of No. 3 Factory, No. 161, Xingye 1st Road, Fenghuang Community, Fuyong Street, Baoan District, Shenzhen , 518103 Guangdong P.R. China	-
Model identifier	MX24W1-1801200B	-
Input voltage	100-240	V
Input AC frequency	50-60	Hz
Output voltage	18.0	V
Output current	1.2	A
Output power	21.6	W
Average active efficiency	86.5 %	%
Efficiency at low load (10 %)	82.5 %	%
No-load power consumption	0.09	W



CARE & MAINTENANCE

MAINTENANCE

Your tool requires no additional lubrication or maintenance. There are no user serviceable parts in your tool. Never use water or chemical cleaners to clean your tool. Wipe clean with a dry cloth. Always store your tool in a dry place. Keep the ventilation slots clean. Keep all working controls free of dust.

RECYCLING AND DISPOSAL



Waste electrical products should not be disposed of with household waste.

Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.

For further information visit www.recycle-more.co.uk

DISPOSAL OF AN EXHAUSTED BATTERY PACK



To preserve natural resources, please recycle or dispose of the battery pack properly. This battery pack contains Li-Ion batteries. Consult your local waste authority for information regarding available recycling and/or disposal options. Discharge your battery pack by operating your tool, then remove the battery pack from the tool housing and cover the battery pack connections with heavy-duty adhesive tape to prevent short circuit and energy discharge. Do not attempt to open or remove any of the components.

REPAIR

This product does not contain any parts that can be repaired by the consumer. Contact an authorised service centre or a similarly qualified person to have it checked and repaired.

STORAGE

- Switch the product off and remove the battery pack.
- Clean the product as described above.
- Store the product and its accessories in a dark, dry, frost-free, well-ventilated place.
- Always store the product in a place that is inaccessible to children.
- We recommend using the original package for storage or covering the product with a suitable cloth or enclosure to protect it against dust.

TRANSPORTATION

- Switch the product off and remove the battery pack.
- Attach transportation guards, if applicable.
- Always carry the product by its handle.
- Protect the product from any heavy impact or strong vibrations which may occur during transportation in vehicles.
- Secure the product to prevent it from slipping or falling over.



GUARANTEE

We take special care to select high quality materials and use manufacturing techniques that allow us to create products incorporating design and durability. This product (**Erbauer** 18V Radio.) has a manufacturer's guarantee of 3 years against manufacturing defects, from the date of purchase (if bought in store) or date of delivery (if bought online), at no additional cost.

To make a claim under this guarantee, you must present your proof of purchase (such as a sales receipt, purchase invoice or other evidence admissible under applicable law), please keep your proof of purchase in a safe place. For this guarantee to apply, the product you purchased must be new, it will not apply to second hand or display products. Unless stated otherwise by applicable law, any replacement product issued under this guarantee will only be guaranteed until expiry of the original guarantee period.

This guarantee covers product failures and malfunctions provided the product was used for the purpose for which it is intended and subject to installation, cleaning, care and maintenance in accordance with the information contained in these terms and conditions, in the user manual and standard practice, provided that standard practice does not conflict with the user manual.

This guarantee does not cover defects and damage caused by normal wear and tear or damage that could be the result of improper use, faulty installation or assembly, neglect, accident, misuse, or modification of the product. Unless stated otherwise by applicable law, this guarantee will not cover, in any case, ancillary costs (shipping, movement, costs of uninstalling and reinstalling, labour etc), or direct and indirect damage.

This guarantee does not cover defects and damage caused by or resulting from:

Normal wear and tear

Overload, misuse or neglect

Repairs attempted by anyone other than an authorised agent

Cosmetic damage

Damage caused by foreign objects, substances or accidents

Accidental damage or modification

Failure to follow manufacturer's guidelines

Loss of use of the goods

Batteries and battery chargers are not covered under the Erbauer 3 Year Warranty and will have a guarantee period of 2 years from the date of purchase.

If the product is defective, we will, within a reasonable time, repair or replace it.

Rights under this guarantee are enforceable in the country in which you purchased this product. Guarantee related queries should be addressed to the store you purchased this product from.

The guarantee is in addition to and does not affect your statutory rights.



DECLARATION OF CONFORMITY

UK CA

(UK) DECLARATION OF CONFORMITY

Product

- Radio
- ERD18-Li
- Serial number 00001-99999

Name and address of the manufacturer or his authorised representative:

Kingfisher International Products Limited
3 Sheldon Square
London W2 6PX
United Kingdom

This declaration of conformity is issued under the sole responsibility of the manufacturer.

Object of the declaration

Product	Model	EAN
Radio	ERD18-Li	5059340253237

The object of the declaration described above is in conformity with the relevant legislation:

Radio Equipment Regulations 2017 as amended
The Restriction of the use of Certain Hazardous Substances in Electrical and Electronic Equipment Regulations 2012 as amended

References to the relevant designated standards used or references to the other technical specifications in relation to which conformity is declared:

EN 62368-1:2014+A11	EN 301 489-1 V2.2.3
BS EN 62368-1:2014+A11:2017	EN 301 489-17 V3.2.4
EN 62479:2010	EN 300 328 V2.2.2
EN 50663:2017	EN 303 345-1 V1.1.1
EN 55032:2015+A1:2020, Class B	EN 303 345-3 V1.1.1
EN 55035:2017+A11:2020	EN 303 345-4 V1.1.1

Signed for and on behalf of:

Kingfisher International Products Limited
3 Sheldon Square
London W2 6PX
United Kingdom

David Awe
Group Quality Director

On:29/03/2022



(EN) EU DECLARATION OF CONFORMITY
(FR) DÉCLARATION UE DE CONFORMITÉ
(PL) DEKLARACJA ZGODNOŚCI UE
(RO) DECLARAȚIA DE CONFORMITATE UE
(ES) DECLARACIÓN UE DE CONFORMIDAD
(PT) DECLARAÇÃO DE CONFORMIDADE UE

Product/ Produit/ Produkt/Produsul/Producto/Produto

- Radio
- ERD18-Li
- Serial number 00001-99999

Name and address of the manufacturer or his authorised representative:

Nom et adresse du fabricant ou de son mandataire:

Nazwa i adres producenta lub jego upoważnionego przedstawiciela:

Denumirea și adresa producătorului sau a reprezentantului său autorizat:

Nombre y dirección del fabricante o de su representante autorizado:

Nome e endereço do fabricante ou do respetivo mandatário:

Kingfisher International Products B.V.,
Rapenburgerstraat 175E,
1011 VM Amsterdam,
The Netherlands

This declaration of conformity is issued under the sole responsibility of the manufacturer.

La présente déclaration de conformité est établie sous la seule responsabilité du fabricant.

Niniejsza deklaracja zgodności wydana zostaje na wyłączną odpowiedzialność producenta.

Prezenta declarație de conformitate este emisă pe răspunderea exclusivă a producătorului.

La presente declaración de conformidad se expide bajo la exclusiva responsabilidad del fabricante.

A presente declaração de conformidade é emitida sob a exclusiva responsabilidade do fabricante.

Object of the declaration/ Objet de la déclaration/ Przedmiot deklaracji/ Obiectul declarației/ Objeto de la declaración/ Objeto da declaração

Product/ Produit/ Produkt/Produsul/
Producto/ Produto

Model/ Modèle/ Model/ Modelul/
Modelo/ Modelo

EAN

Radio

ERD18-Li

5059340253237

The object of the declaration described above is in conformity with the relevant Union harmonisation legislation:

L'objet de la déclaration décrit ci-dessus est conforme à la législation d'harmonisation de l'Union applicable:

Wymieniony powyżej przedmiot niniejszej deklaracji jest zgodny z odpowiednimi wymaganiami unijnego prawodawstwa harmonizacyjnego:

Obiectul declarației descris mai sus este în conformitate cu legislația relevantă de armonizare a Uniunii:

El objeto de la declaración descrita anteriormente es conforme con la legislación de armonización pertinente de la Unión:

O objeto da declaração acima descrito está em conformidade com a legislação de harmonização da União aplicável:

<p>2014/53/EU as amended Radio Equipment Directive</p> <p>2014/53/EU tel que modifié Directive relative aux équipements radio électriques</p> <p>2014/53/EU zgodnie z wprowadzonymi poprawkami Dyrektywa urządzeń radiowych</p> <p>2014/53/EU cum a fost modificată Directiva privind a echipamentelor radio</p> <p>2014/53/EU según enmendado Directiva relativa a los equipos radioeléctricos</p> <p>2014/53/EU conforme alterado Directiva relativa à equipamentos de radio</p> <p>2011/65/EU as amended Directive RoHS Restriction of the use of certain hazardous substances in electrical and electronic equipment</p> <p>Directive 2011/65/UE relative à la limitation de l'utilisation de certaines substances dangereuses dans les équipements électriques et électroniques</p> <p>2011/65/EU zgodnie z wprowadzonymi poprawkami Dyrektywa w sprawie ograniczenia stosowania niektórych niebezpiecznych substancji w sprzęcie elektrycznym i elektronicznym</p> <p>2011/65/EU cum a fost modificată Directiva Restricțiile de utilizare a anumitor substanțe periculoase în echipamentele electrice și electronice</p> <p>2011/65/UE según enmendado Directiva sobre restricciones a la utilización de determinadas sustancias peligrosas en aparatos eléctricos y electrónicos</p> <p>2011/65/EU conforme alterado Directiva Restrição do uso de determinadas substâncias perigosas em equipamentos elétricos e eletrônicos</p>
<p>References to the relevant harmonised standards used or references to the other technical specifications in relation to which conformity is declared:</p> <p>Références des normes harmonisées pertinentes appliquées, y compris la date de celles-ci, ou des autres caractéristiques techniques, y compris la date de celles-ci, par rapport auxquelles la conformité est déclarée:</p> <p>Odwolania do odnośnych norm zharmonizowanych, które zastosowano, wraz z datą normy, lub do innych specyfikacji technicznych, wraz z datą specyfikacji, w odniesieniu do których deklarowana jest zgodność:</p> <p>Trimiteri la standardele armonizate relevante folosite, inclusiv data standardului, sau trimeri la celelalte specificații tehnice, inclusiv data specificațiilor, în legătură cu care se declară conformitatea:</p> <p>Referencias a las normas armonizadas pertinentes utilizadas, incluidas las fechas de las normas, o referencias a las otras especificaciones técnicas, incluidas las fechas de las especificaciones, respecto a las cuales se declara la conformidad:</p> <p>Referências às normas harmonizadas aplicáveis utilizadas, incluindo a data da norma, ou às outras especificações técnicas, incluindo a data da especificação, em relação às quais é declarada a conformidade:</p>
<p>EN 62368-1:2014+A11:2017</p> <p>EN 62479:2010</p> <p>EN 50663:2017</p> <p>EN 55032:2015+A1:2020,Class B</p> <p>EN IEC 61000-3-2:2019</p> <p>EN 61000-3-3:2013+A1:2019</p> <p>EN 55035:2017+A11:2020</p> <p>EN 301 489-1 V2.2.3(2019-11)</p> <p>EN 301 489-17 V3.2.4(2020-09)</p> <p>EN 300 328 V2.2.2(2019-07)</p> <p>EN 303 345-1 V1.1.1(2019-06)</p> <p>EN 303 345-3 V1.1.1(2021-06)</p> <p>EN 303 345-4 V1.1.1(2021-06)</p>

Signed for and on behalf of/Signé par et au nom de/Podpisano w imieniu/Semnat pentru și în numele/Firmado en nombre de/Assinado por e em nome de:

Kingfisher International Products B.V.,
Rapenburgerstraat 175E,
1011 VM Amsterdam,
The Netherlands

A handwritten signature in black ink, appearing to read 'David Awe', with a long horizontal stroke extending to the right.

David Awe
Group Quality Director

29/03/2022

Manufacturer • Fabricant • Producent • Producător • Fabricante:

UK manufacturer:

Kingfisher International Products Limited
3 Sheldon Square London W2 6PX
United Kingdom
www.kingfisher.com/products

EU manufacturer:

Kingfisher International Products B.V.
Rapenburgerstraat 175E
1011 VM Amsterdam
The Netherlands

www.diy.com | www.screwfix.com | www.screwfix.ie

To view instruction manuals online,
visit www.kingfisher.com/products

Customer Helpline:

UK 03301248111 erbauer@powertoolservicing.co.uk

Eire 0035312479977 erbauer@powertoolservicing.co.uk