






Mini Wireless Alarm Kit

YSGA02-W

Instruction Manual

  
 
DE: Bedienungsanleitung
FR: Manuel d'instructions
ES: Manual de instrucciones
IT: Manuale di istruzioni

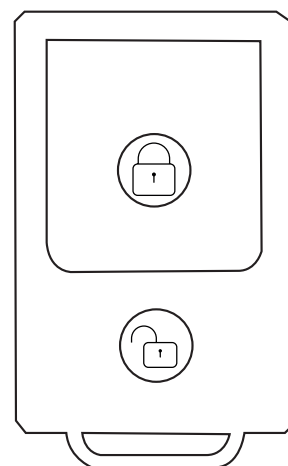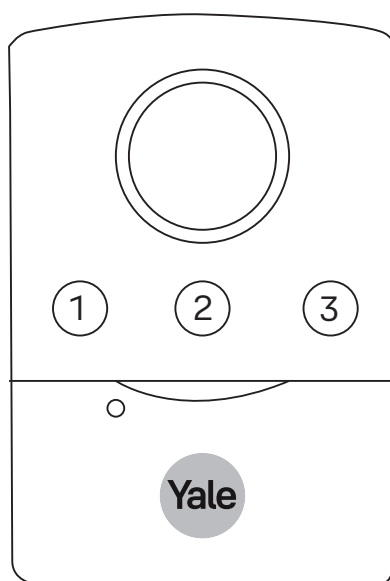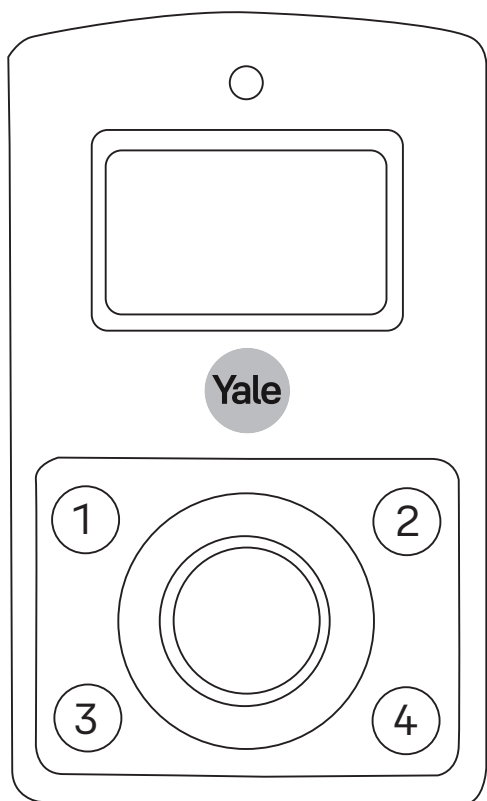

Part of ASSA ABLOY



Battery Installation

  Main alarm

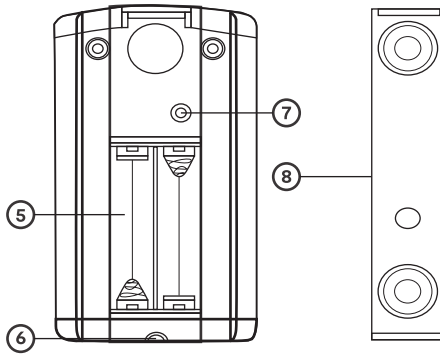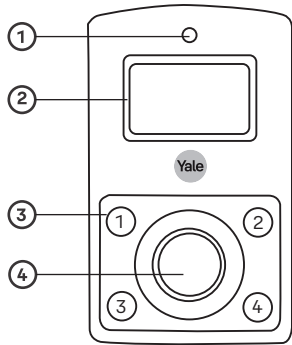


- ① LED
- ② PIR Motion Sensor
- ③ Keypad
- ④ Siren
- ⑤ Battery Compartment
- ⑥ Screw Fixing
- ⑦ Learn Button
- ⑧ Battery Cover

  Door contact

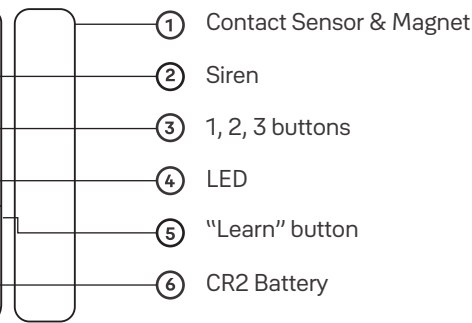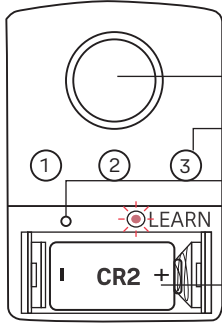


TIP:
The door contact can be fitted horizontally or vertically.


① To insert batteries, open the battery cover.

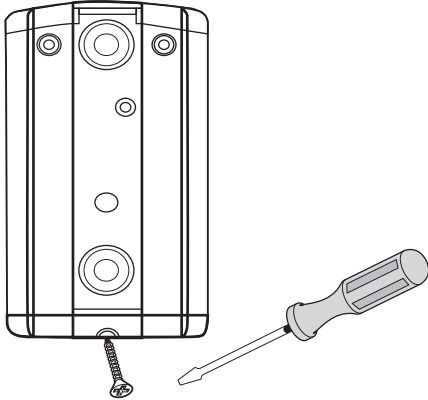


② Insert 2 x AAA batteries into the battery compartment. [Please ensure correct polarity.]

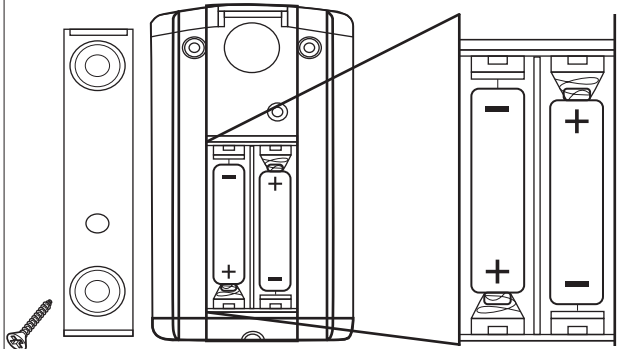


③ The unit will beep once to indicate that the product can now be operated.

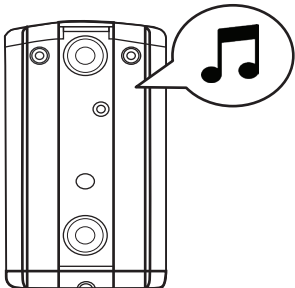

④ **Please note:** when the LED lights remain 'on', this indicates the battery charge is low and will require exchanging.

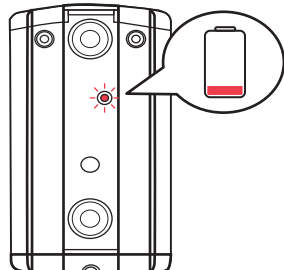


⑤ For the door contact - please remove battery insulation tab before first use. The device will beep and can now be used normally.

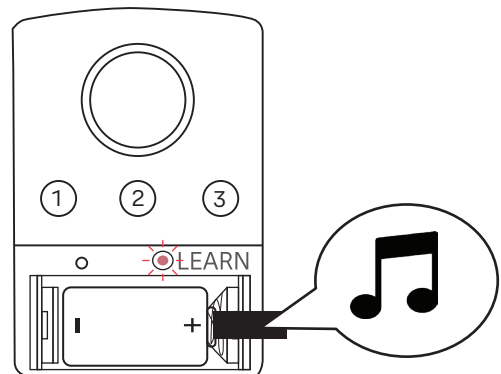


Setting the 3 Digit PIN code

PLEASE NOTE: If a delay of more than 5 seconds occurs between any of the below steps, the unit will return to standby mode.


- 1 Change alarm 3 digit pin code**
To change the Alarm PIN code, please enter the default PIN upon initial use: '1,2,3' and then press the 4 key to acknowledge.

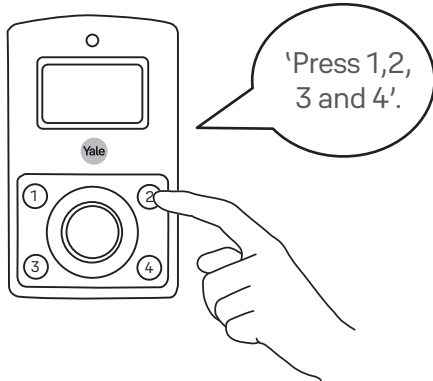

- 2 Set personal 3 digit pin code**
You can then proceed with entering your 3 digit pin code 'XXX'.

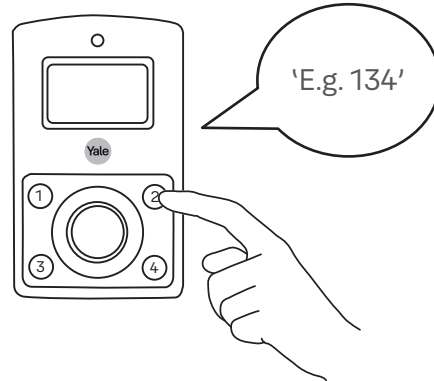

- 3 Save personal 3 digit pin code**
Enter 1,2,3, then press the 4 key to acknowledge.

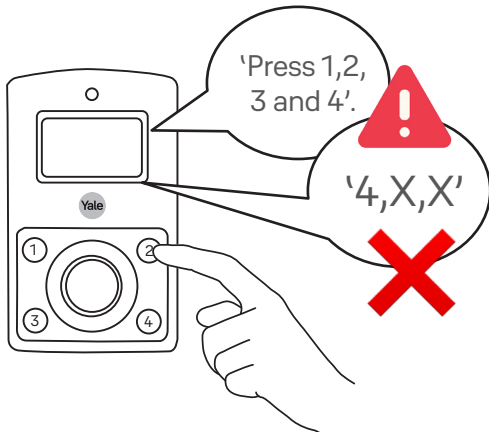


PLEASE NOTE: DO NOT USE the number '4' at the beginning of your unique PIN code.

- 4 PIN code success**
If the red light is OFF, the PIN code was successfully changed.




- 5 PIN code change failure:**
If the red light flashes 3 times, the PIN change has failed and the unit returns to default PIN code 1,2,3.

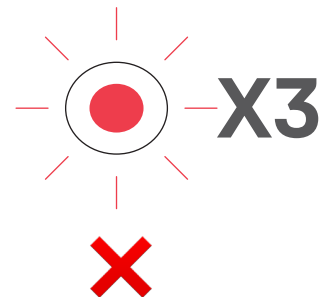


PLEASE NOTE: If the unique PIN code is entered incorrectly 5 times, the beep sound will be emitted every 2 seconds, ten times and the key bindings will be locked for 5 minutes. After this time, you can unlock the key bindings by remote control or restore to default settings.

Factory reset


- ① Open the battery cover.

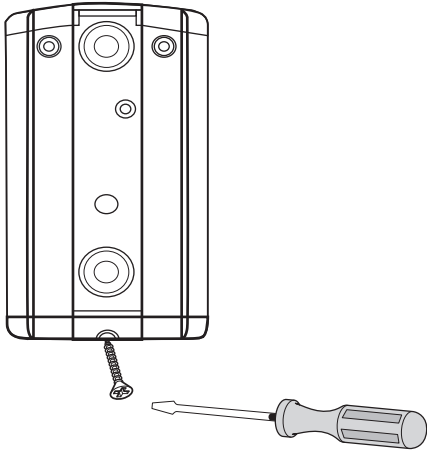

- ② Take out the battery.

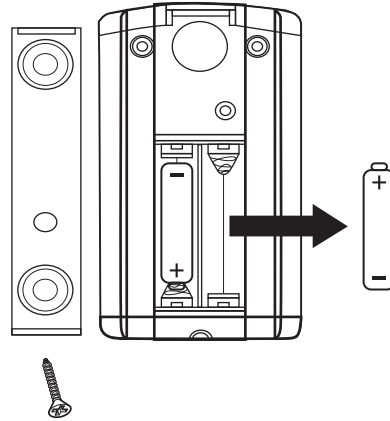


- ③ Press and hold "Learn" button and do not release, whilst re-installing the battery.

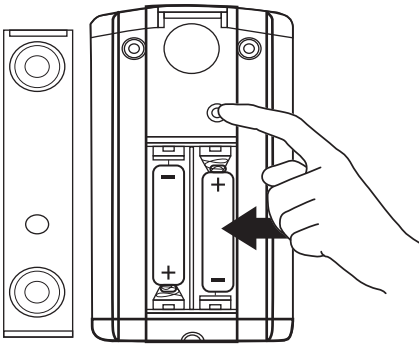


PLEASE NOTE: Do not release button whilst re-installing the battery.

- ④ After three beep sounds, the alarm will return to the default setting and the password will restore to default '1,2,3'.

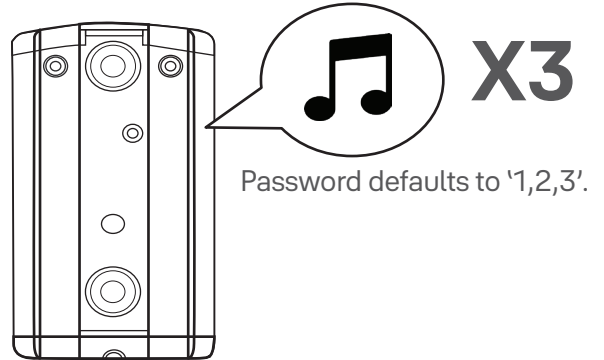


Pair with remote control


- 1 Ensure alarm is UNARMED, open the battery cover.

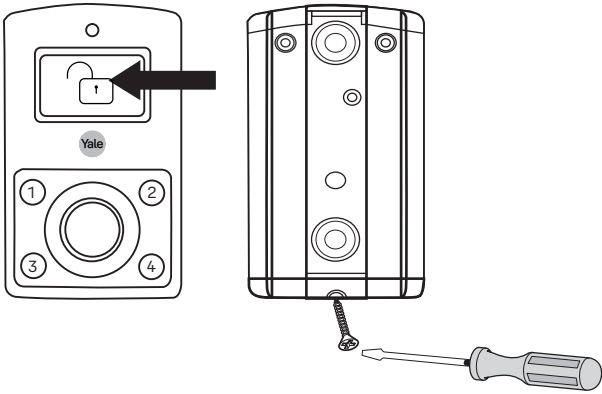


- 2 Take the remote control and open the battery cover.

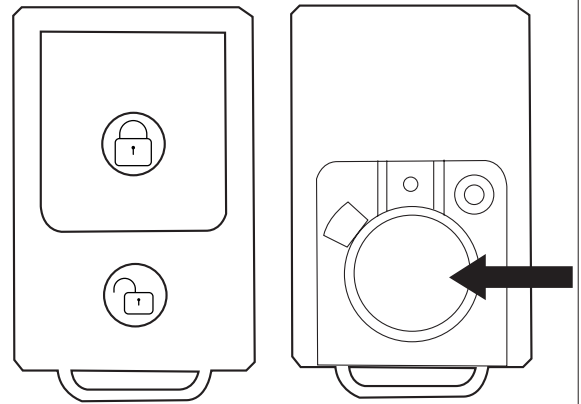


- 3 Press the "Learn" button and the red light will flash.

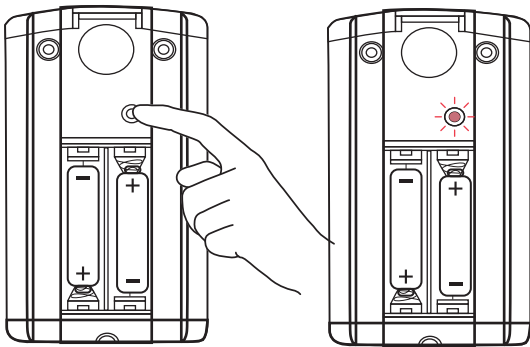


- 4 Press the "Learn" button on the remote control.

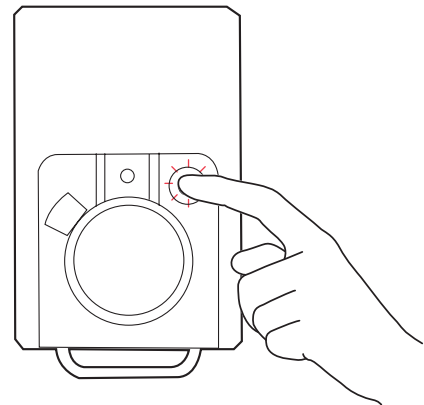

- 5 The red light will flash, and the remote control will send the code. At this time, you will hear the main alarm beep twice, indicating that the alarm has successfully learned the remote control communication code.

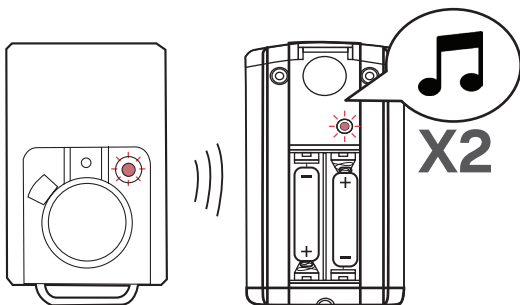


- 6 If the red lights keep flashing, the battery is low and requires replacing.

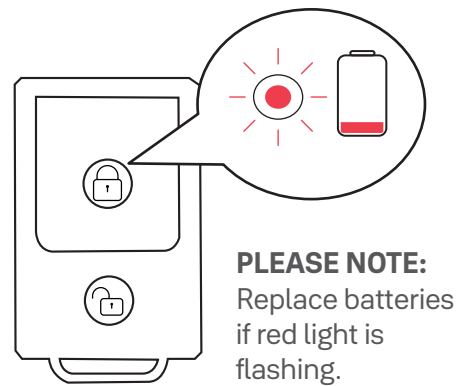


PLEASE NOTE: To allow the main alarm to learn the code of another device, release the learn button to exit the learning mode. The red light will stop flashing denoting that the operation is complete, and the main alarm will return to standby status. You can now add another device to the system using the relevant steps.

Pairing the main alarm with the Door Contact



- ① To pair the door contact please ensure the alarm is disarmed and then remove the cover of the main alarm unit.

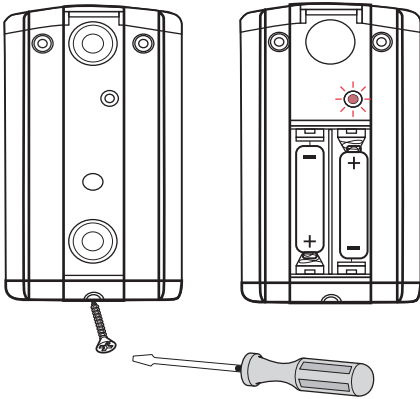

- ② Remove the front cover of the door contact.

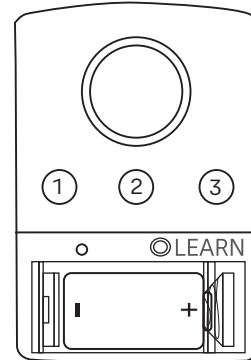


- ③ With the battery covers removed from the main alarm and the door contact, please press and hold the learn button on the main alarm unit, whilst pressing the learn button on the door contact.

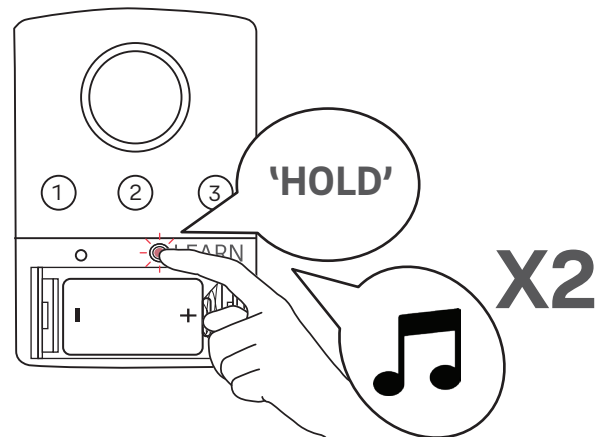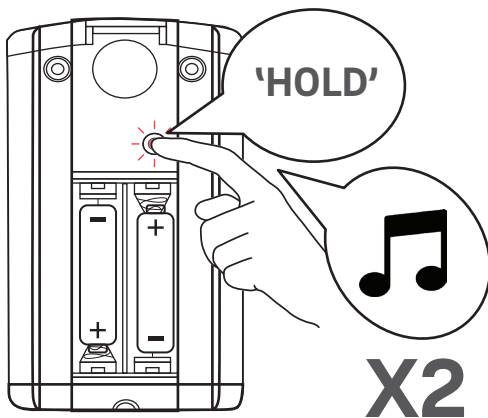


- ④ Release the "Learn" button whereby the red light will turn off indicating that the operation is complete and the main alarm will return to disarmed mode.

Please replace the battery cover to the main alarm unit and the door contact units.

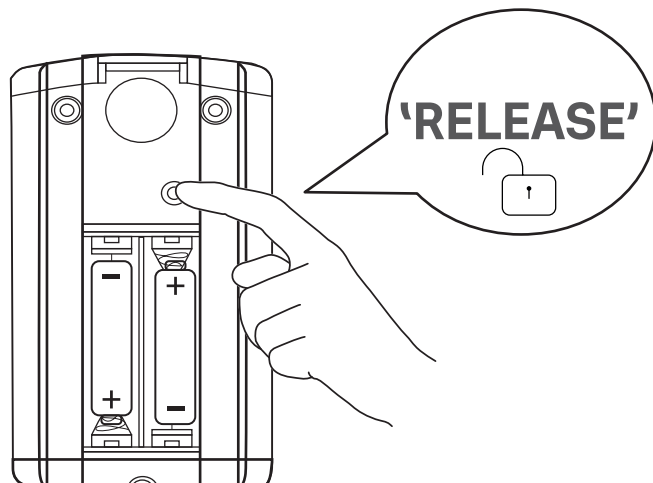


Unlinking a paired device

- 1 Open the battery cover. Take out the battery, press '3' and do not release whilst installing the battery.

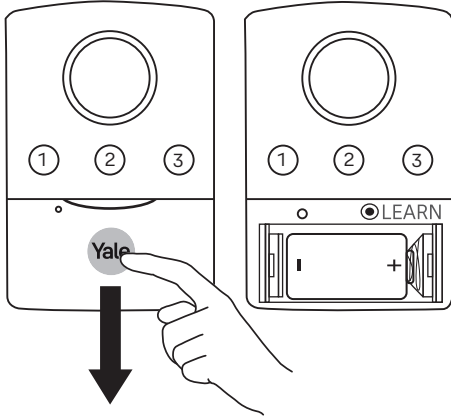

- 2 After three beep sounds, the Contact will return to the default setting and the password will restore to default '1,2,3'.

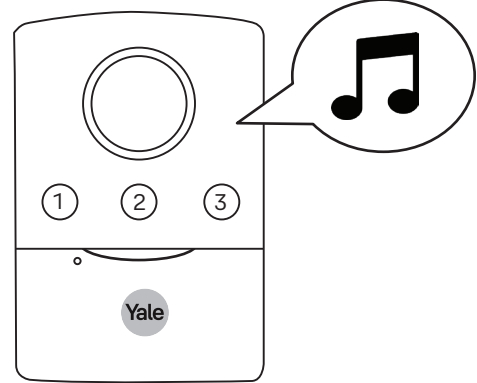


Installing the door contact


- 1 Remove the backing tape from the door magnet.



- 2 Use the 3M tape to fix the door contact onto the door/window frame.

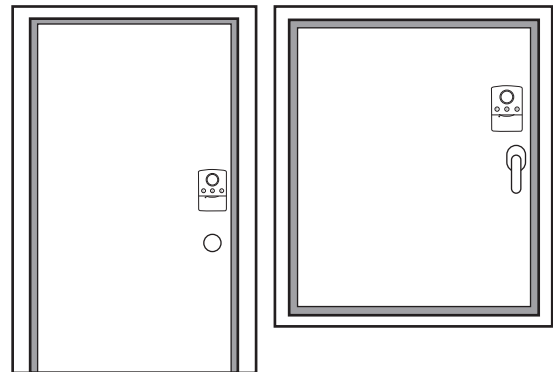


- 3 Align directly opposite the main alarm, not exceeding an 8mm gap when door/window is closed.

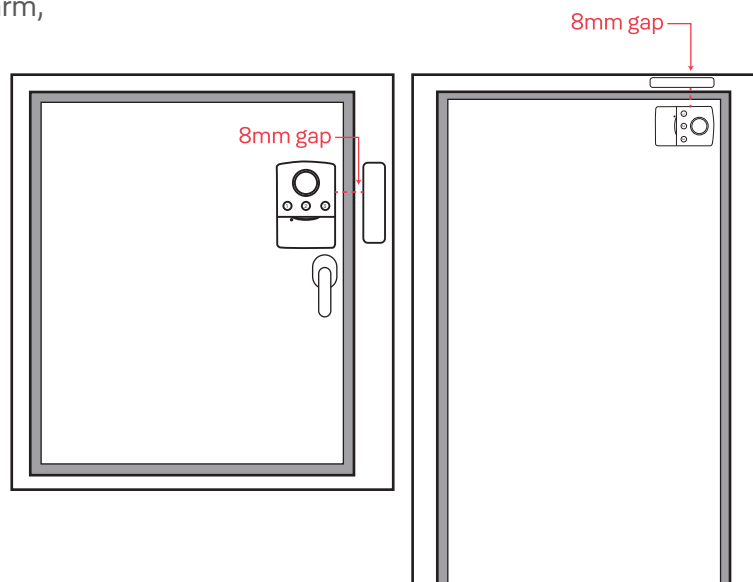


Operation Settings: Setting the PIN

- ① To change the Door Contact PIN code, please enter the default PIN, '1,2,3', upon initial use.

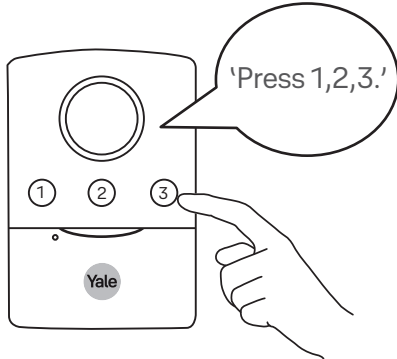


- ② Enter the default code a second time and the red light will flash. You can then proceed with entering your unique 3 digit PIN code.

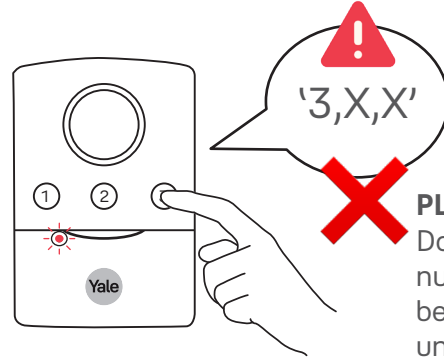


PLEASE NOTE:
Don't use the number '3' at the beginning of your unique PIN code.

- ③ If the red light is OFF, the PIN code was successfully changed.

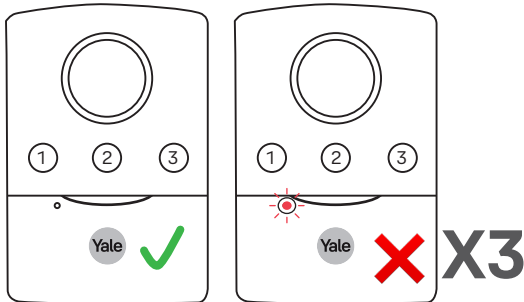

PLEASE NOTE: If the red light flashes three times, the PIN code change was not successful.


- ④ To arm your alarm simply press the "3" button, then to disarm your alarm enter your unique 3 digit PIN code.

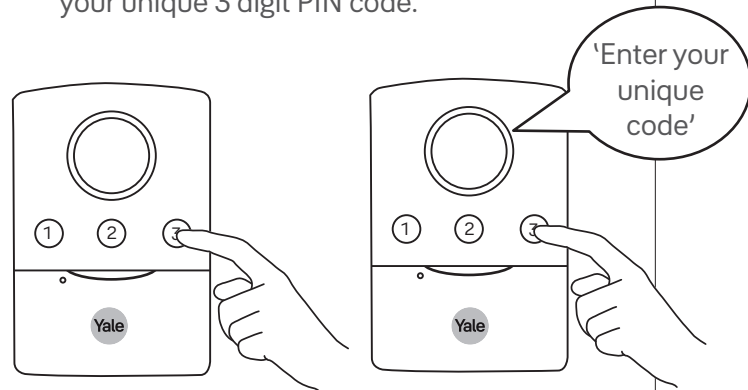


PLEASE NOTE: If the unique code is entered incorrectly five times, the alarm will beep every two seconds, 10 times and the key bindings will be locked for five minutes.

Factory Reset

- ① Open the battery cover and take out the battery, press and hold the learn button and do not release whilst reinserting the battery.

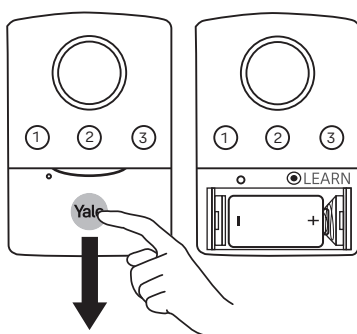


- ② After three beep sounds, the Door Contact will return to the default setting and the password will restore to default '1,2,3', the alarm will be put into an unarmed state.

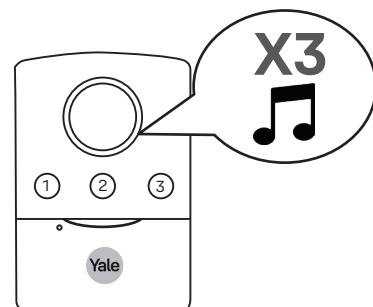


Alarm sound ON and OFF settings: Turn ON the alarm sound


- ① When the alarm is unarmed, enter your PIN followed by the '4' key.

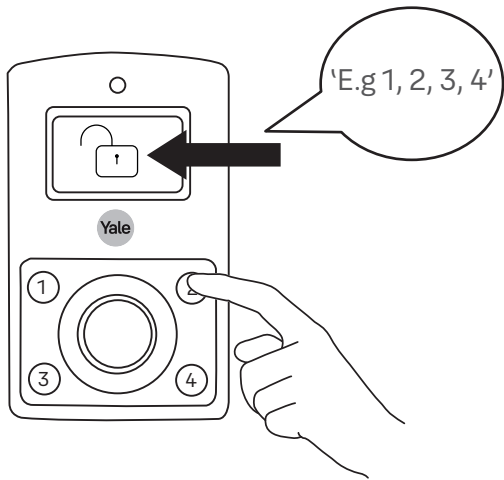


- ② Press 4 and then press 21.

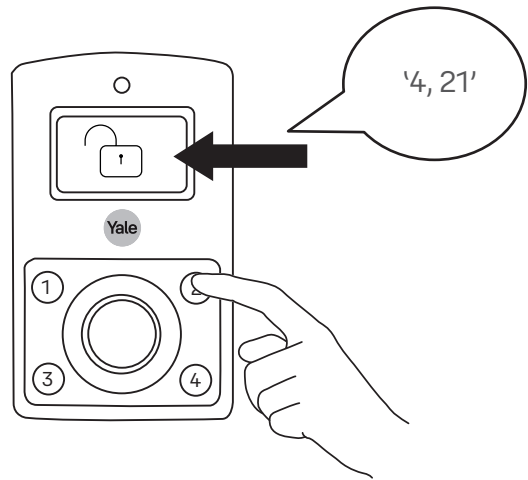

- ③ The red light will flash three times.

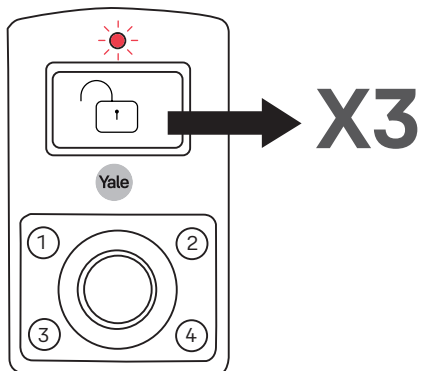


- ④ Once the main alarm is armed, if it is triggered it will automatically notify other paired devices connected to it.

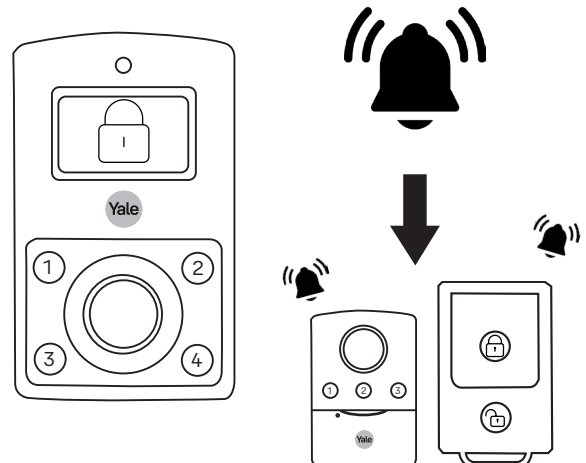


Alarm sound ON and OFF settings: Turn OFF the alarm sound


- 1 When the alarm is unarmed, enter your PIN followed by the '4' key.

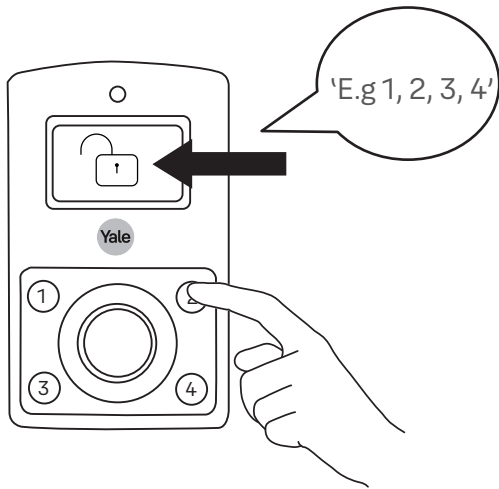


- 2 Press 4 and then press 22.

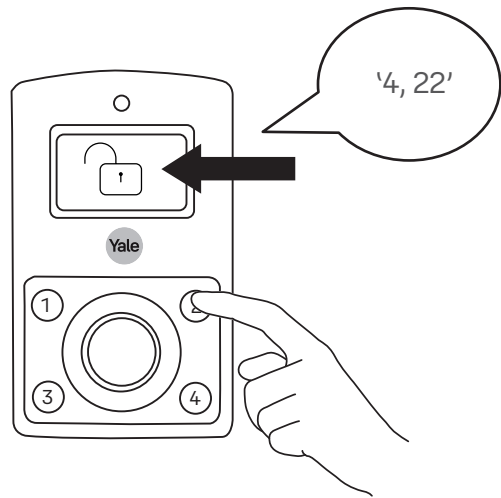

- 3 The red light will flash three times.

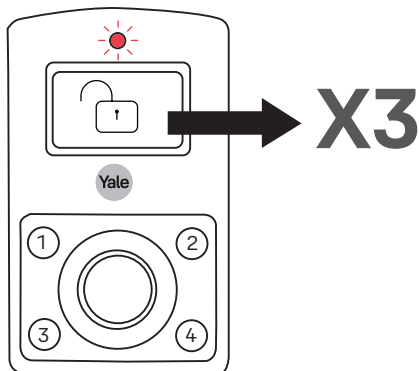


- 4 Once the device is armed, if this is triggered, the device will automatically notify other paired devices around and WILL NOT sound the alarm.

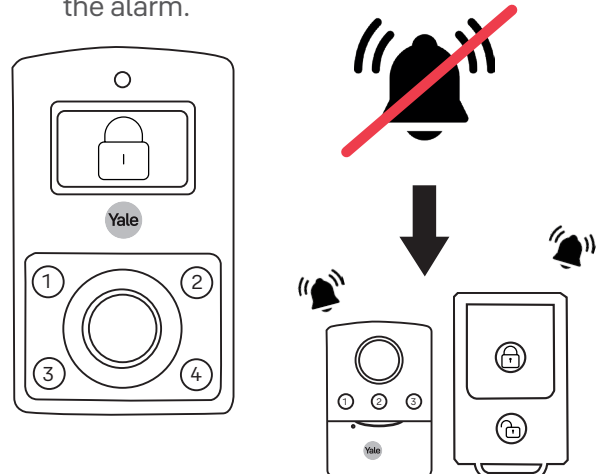


Enable and disable vibration sensor function


- ① **To enable the door contact vibration sensor:** When the door contact is unarmed enter your unique PIN (if not changed then enter the default) then press the number 3 and then press 3,1.

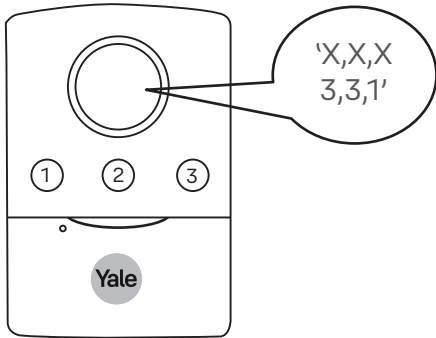


- ② The red light will flash 3 times to indicate the vibration function is ON. If the vibration sensor is triggered, the device will now sound and notify other paired devices.

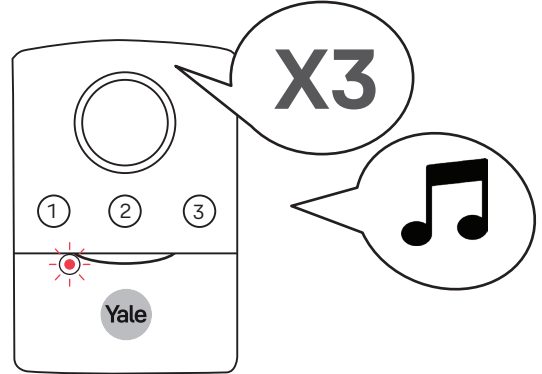

- ③ **To disable the door contact vibration sensor:** When the alarm is unarmed, enter '1,2,3' OFF PIN, press the number '3' and then press '23'.

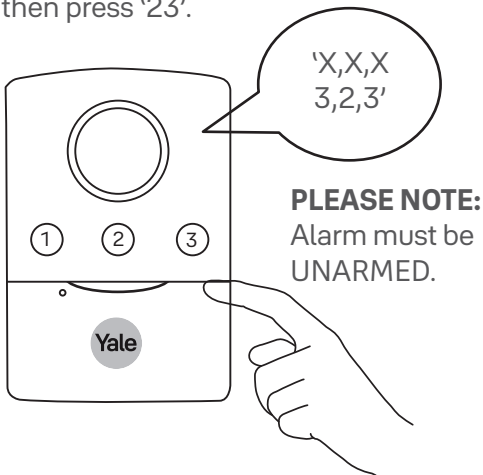


- ④ The red light will flash 3 times denoting that the door magnetic sensor is OFF and the door magnetic sensor function is cancelled.

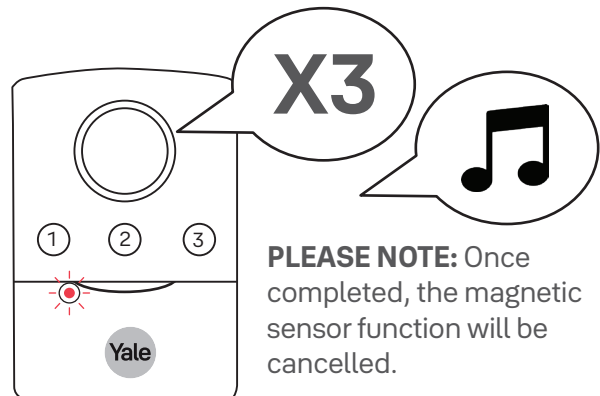


Installing the unit if required


- ① Take out the wall brackets in the package.

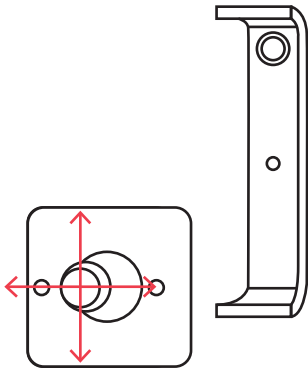

- ② Install the product on a wall or other suitable position at a maximum of 1.5 metres height.

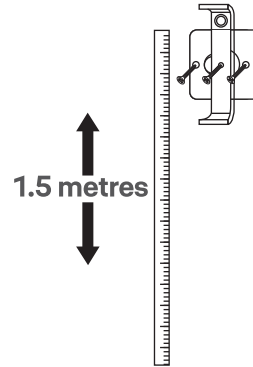


- ③

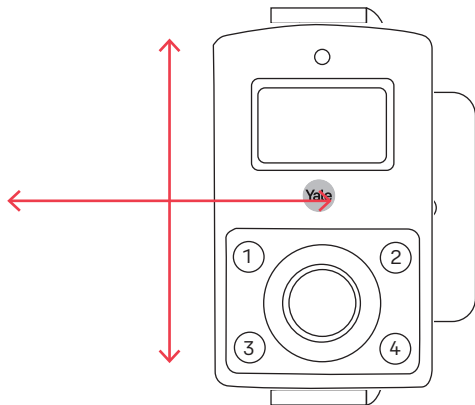


Select the area you would like to cover by positioning the alarm in the appropriate direction.

Operating instructions: Arming the main alarm

- 1 Press the '4' key on the main alarm to arm.

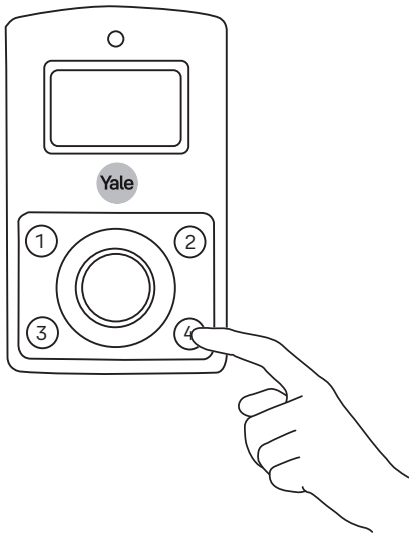

- 2 The alarm will turn on after 30 seconds.

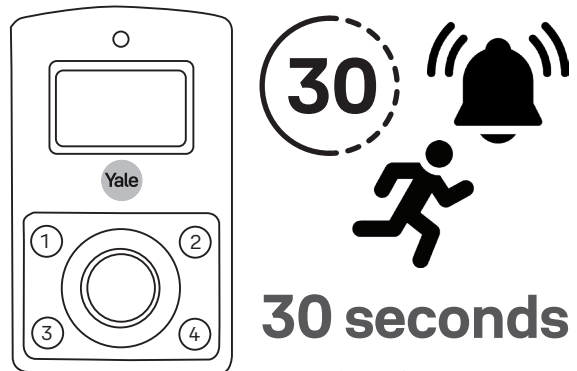

30 seconds

PLEASE NOTE: You have 30 seconds to vacate the monitored area.


Operating instructions: Disarming the main alarm

- 3 You will have 5 seconds upon detection to enter your 3 digit PIN followed by the 4 key to acknowledge, once this has been entered the red light will flash on the main alarm.




5 seconds

'E.g 1,3,4
then 4'

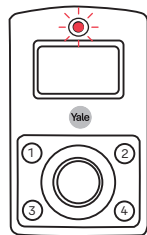

**Main alarm is
unarmed.**

- 4 If the main alarm is not disarmed within 5 seconds the siren will sound for 30 seconds, the main alarm will then automatically go back to its armed state.

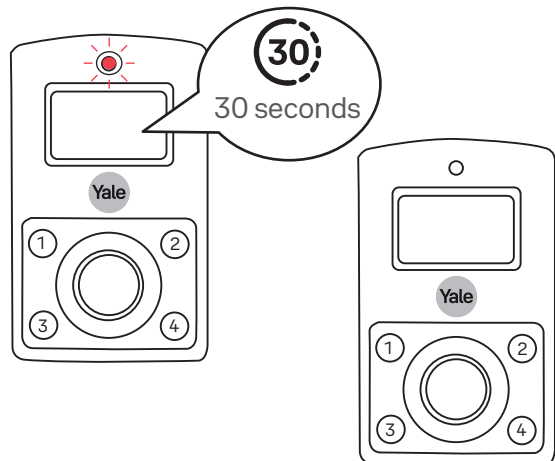


30
30 seconds

Wireless range



Please note: If using as part of the Mini Wireless Alarm Kit, the range of these parts is a minimum of 1 metre, up to a maximum of 70 metres.

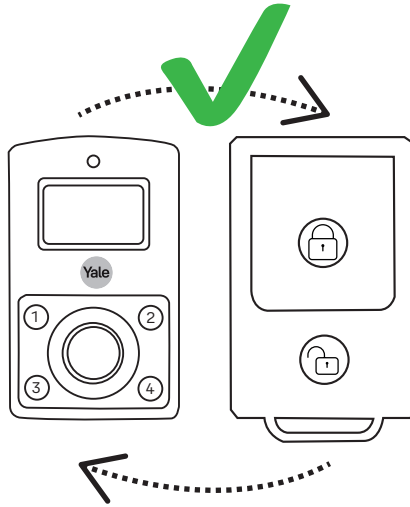


Operation


To pair the remote control to the main Mini Wireless Alarm, open the battery cover and press the "Learn" button. Take the Main Unit, remove the battery cover and also press the "Learn" button on this unit.

When the device beeps twice, the pairing has been successful and the alarm can be switched on and off via the remote.

1

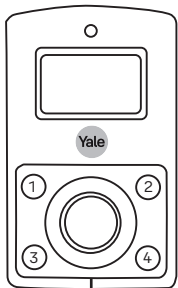


Mini Wireless Alarm

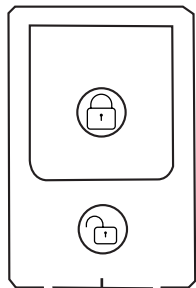


Remote Control

 
2

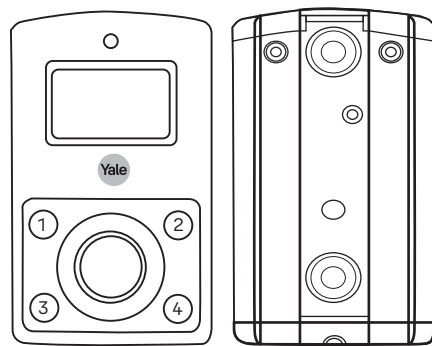

3

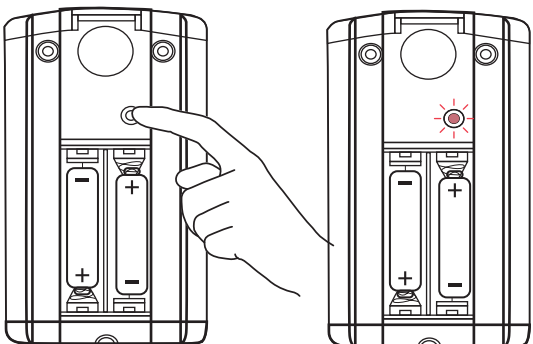 


4

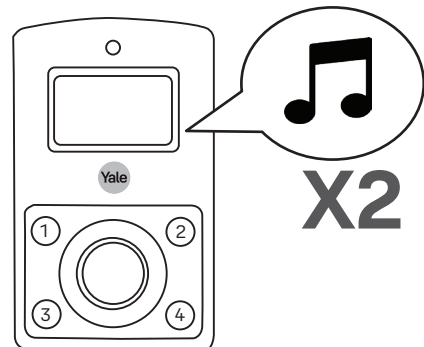


Remote control, arming the alarm

- 1 Press the locked padlock icon on the remote control to arm the main alarm.

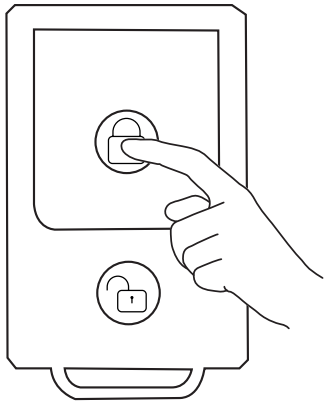


- 2 After hearing a beep sound, you have 30 seconds to leave the alarm area.

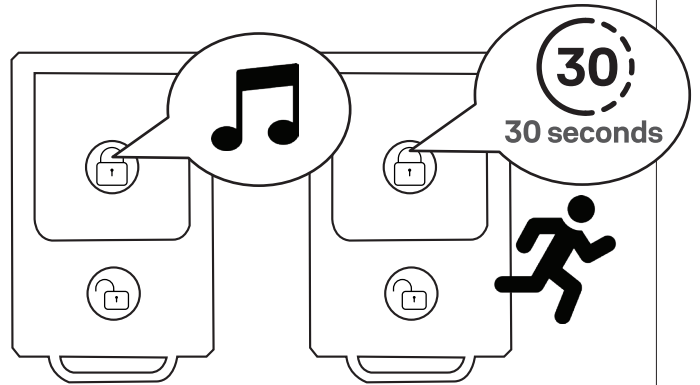


Remote control, disarming the alarm

- 3 You will have 5 seconds upon detection to disarm the alarm by using the unlocked padlock symbol, once this has been pressed and acknowledged the red light will flash on the main alarm.

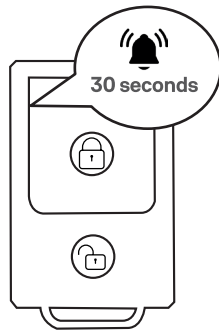


- 4 If the main alarm is not disarmed the siren will sound for 30 seconds upon detection, the main alarm will then automatically go back to its armed state.

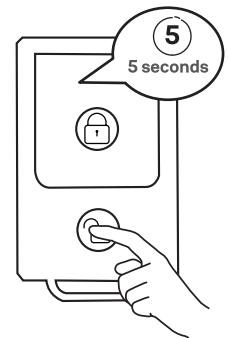


Low battery indicator function

- 1 When the light is on, it means the battery is low and needs to be changed.

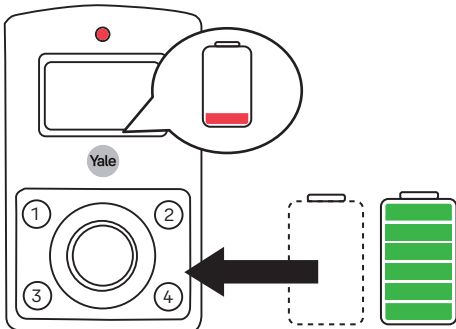

- 2 If the alarm is not going to be used for a long time, the battery should be removed.

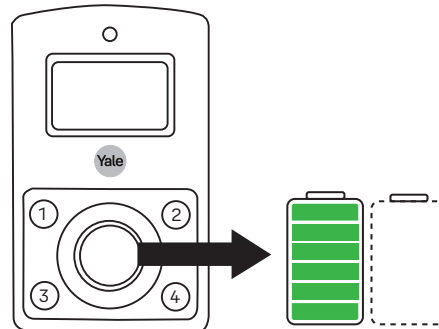

PLEASE NOTE:

- Every step of the operations listed above for each device must be completed within 5 seconds. Any longer than five seconds and the device will automatically revert to an unarmed state.
- You can learn up to 20 accessories.
- For two different accessories to pair with each other, both devices must be set to 'learn' mode.

Precautions

1 Please only use the correct batteries (as provided).

CR2032



Remove batteries before storage of device



Immediately seek medical advice if swallowed



Do not swallow



Do not dispose in fire




Do not mix used and new batteries



Do not mix different types of brands



Do not disassemble

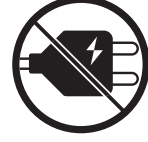

Do not recharge



Check for correct polarity (+/-)





Keep away from children



Battery can explode or leak if shorted

Operation: Low battery indicator function

1 When the red light is on, it means the battery is low and needs to be exchanged.

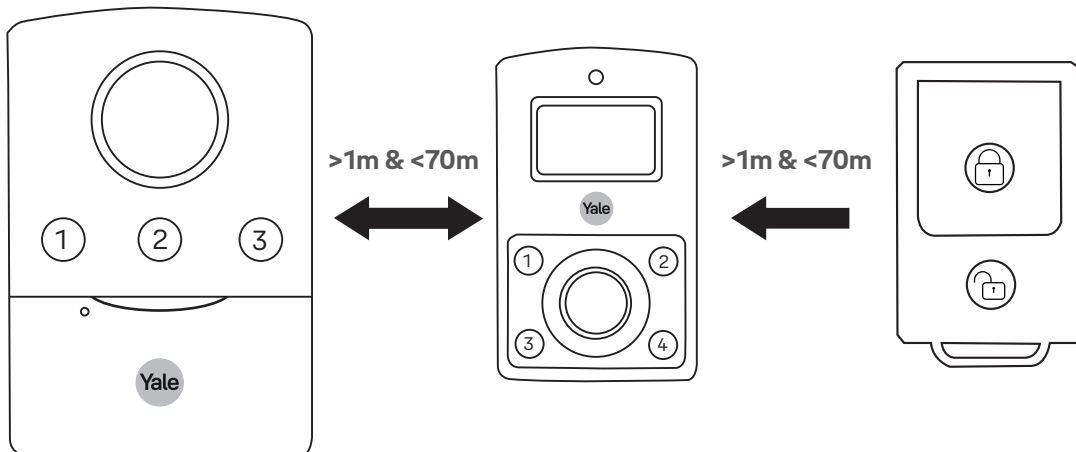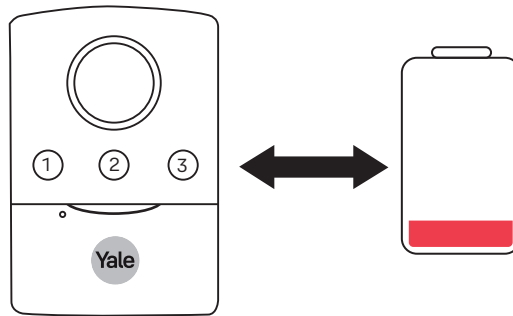

i Support

For further help & advice on how to set up your device please scan the QR code below, which will take you to the relevant Product Support Page, or please visit www.yalehome.co.uk/support.



Alternatively, you can contact our Customer Support Team directly. For more details, visit the website below.



UK: ASSA ABLOY Ltd., School Street, Willenhall,
West Midlands, England, WV13 3PW



THE YALE BRAND, with its unparalleled global reach and range of products, reassures more people in more countries than any other consumer locking solution.

THE ASSA ABLOY GROUP is the world's leading manufacturer and supplier of locking solutions, dedicated to satisfying end-user needs to security, safety and convenience.

Part of ASSA ABLOY