

Mechanical

CL100, CL200, CL400, CL500

Code Change Instructions

Anweisungen zur Codeänderung

Instrucciones para el cambio de código

Instructies voor codewijziging

Instructions pour le changement de code

Instruktioner för att ändra kod



About the Code Chamber

The locks code chamber consists of coloured code and silver non-code tumblers. The chamber also includes a 'C' tumbler which is unique to that position and can only be used to reset the chamber after an incorrect entry.



Coloured code tumblers define the code.



Silver non-code tumblers fill the other positions.

Note: The 'C' tumbler is also silver and must **always be used** as the first digit of a code.

Buttons may only be used **once** in a code. For example, 1212 is not possible.

A code, or combination, can be entered in any order or sequence, e.g. C1234 can be C4321 or C1342 or whichever sequence is most convenient to remember. The total number of codes available depends on how many buttons the lock has.

The lock is factory set with a randomly selected code starting with the 'C' button. This code can be found on the code card included in the box. The code is not recorded by the factory.

The code can be changed as often as required to any other code. Every new code **must** start with the 'C' button.

The code length can be increased/decreased by 1 digit using the spare tumblers.

Code Change Instructions

1. If already installed, remove the lock off the door by unscrewing the fixing bolts in the back plate.
2. Press the 'C' button to reset the chamber and place the lock case on a flat surface with the buttons down.
3. Remove the coloured screws and carefully lift off the code change plate. Check that all springs are held in place on the plate.
4. Hold the lock in your hand, press and hold the 'C' button. Keeping the 'C' button depressed use tweezers or a pair of long nosed pliers to reposition the tumblers to correspond with your new code. The square notches of **all** tumblers **must** face outwards, with the square tips **at the top**: See Fig.1, page 3. **Do not** force the tumblers in.

Note: Holding the 'C' button depressed whilst removing or replacing the tumblers is **ESSENTIAL** to avoid damaging the internal mechanism. **DO NOT** attempt to reposition the 'C' tumbler.

5. Replace the code change plate carefully with the coloured screws.
6. Check the operation of the new code and make a written note of it before reinstalling the lock.
7. Reinstall the lock according to its specific Installation Instructions. All instructions are available online at **codelockssupport.com**

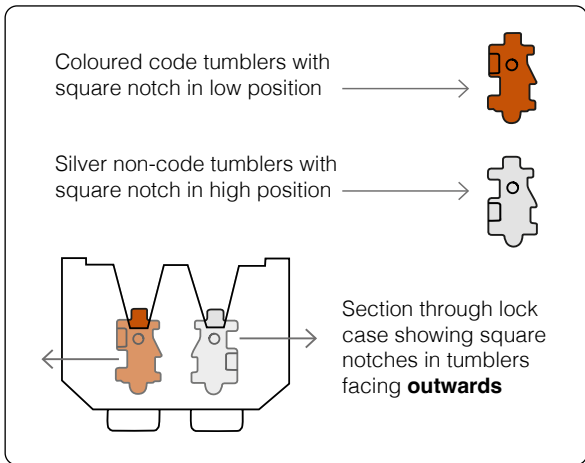


Fig.1

Code Free Mode

Applicable to the following models: CL405, CL415, CL425, CL465, CL475, CL505, CL515 and CL525.

Enter Code Free Mode

Press the 'C' button followed by your code, then press the bottom left • dot button. Turn the handle fully and let go. The code will now be retained in the lock and the handle is free to turn without having to enter the code.

Exit Code Free Mode

Press the bottom left • dot button, followed by a firm press of the 'C' button. The keypad will now require the correct code input for access.

Video Tutorials



Scan the QR Code to view the Codelocks Mechanical Code Changing video series on our YouTube channel at:
youtube.com/codelocks

Maintenance

No maintenance of the working parts is necessary. **DO NOT OIL.** To maintain the finish the lock should be cleaned regularly with a soft cloth. A silicone spray or similar should be used to provide a protective film against grit and grime.

Guarantee

A limited lifetime guarantee is offered on all Codelocks branded mechanical door locks. Any such lock developing a manufacturing fault shall be repaired, serviced, or replaced¹ during the lifetime of the product, contingent that the original end user continues to own or use the product.

¹ Repair, service or replacement shall be at the sole discretion of Codelocks. Faults caused by misuse, abuse and/or poor fitting are not covered by the guarantees. In the event of a product having been discontinued, an alternative product may be offered.

Codelocks Ltd. UK
sales@codelocks.com
www.codelocks.com
Helpline, service & spares
Freephone: 0800 393 405

Albury Way, Greenham Business Park,
Newbury, Berkshire, RG19 6HW

Codelocks EU B.V.
sales@codelocks.eu
www.codelocks.eu
Helpline, service & spares
Freephone: +31 53 80 80 118

Rijtersbleek-Aalten 4 (K1.01)
7521, RB Enschede, Nederland

Codelocks Inc. US
sales@codelocks.us
www.codelocks.us
Helpline, service & spares
Toll free: 1.877.codelock

10532 Acacia St. Suite B10 Rancho
Cucamonga CA 91730, USA

Codelocks (Australia) Pty. Ltd.
sales@codelocks.com.au
www.codelocks.com.au
Helpline, service & spares
Toll free: 1800 052 131

Unit 222/354 Eastern Valley Way
Chatswood NSW, 2067



CODELOCKS
control + convenience



codelockssupport.com