



# Replacement Door Handle Fitting Instructions

## Tools Required



Cross Head  
Screwdriver



Hacksaw

## Fitting Instructions

### 1. Remove your old door handle

- Open your door and remove the 2 screws on the internal side of the door handle.
- Pull the internal and external door handles apart, and remove the spindle (the metal bar which joins the 2 handles together).
- Keep the door open ready to fit your replacement door handles.

### 2. Check your spindle and screw length

- The spindle and screws supplied in this pack are for PVCu doors (60-70mm thick). If you are fitting this handle to a composite or wooden door (44mm thick) you will need a hacksaw to reduce the length of the spindle and screws supplied.

### 3. Fitting your new door handle

- Identify the external handle from the internal handle – the internal handle will have 2 screw holes in the back plate. It is important that the screw heads are on the internal side of the door so the handles cannot be removed from outside the property.
- Move the handle to the correct position (for a right handed or left handed door).
- Insert the spindle supplied in to the external handle, and place the spring cassette over the spindle so that it sits within the back plate of the handle.
- Position the external handle in place on the door, with the spindle fitted through the door. Place the second spring cassette over the spindle on the internal side of the door and push the internal back plate in to place.
- Place the 2 screws supplied through the screw holes on the back plate of the internal door handle, and secure in to place.
- Check the operation of the handle before closing the door.



The world's favourite lock since 1843

School Street, Willenhall, West Midlands WV13 3PW

[www.yale.co.uk](http://www.yale.co.uk) Tel: +44 (0) 1902 364647 E-mail: [info@yale.co.uk](mailto:info@yale.co.uk)

3188281001

Issue No: 01-2012