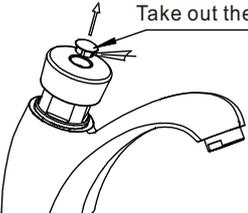
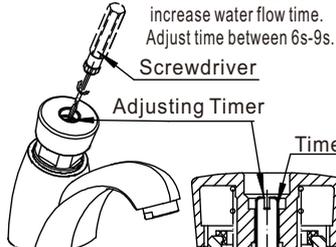
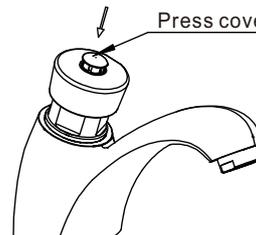



# Installation and Maintenance instruction

## Technical Information:




- Flow Rate: 0.14L/S in 10 Sec /2 Bar
- Max. Working Pressure: 6 Bar
- Min .Working Pressure: 0.3 Bar  
(Recommended working pressure 0.5bar) .
- Cut Off Time : 4-13 Sec / 2Bar
- Max Working Temperature: 60 degrees Celcius between Max. and Min. working pressure.

**Note :** Following the steps to adjust shut off time.

<p>①</p>  <p>Take out the cover</p>	<p>②</p>  <p>Turn timer anti-clockwise to reduce the water flow time. Turn timer clockwise to increase water flow time. Adjust time between 6s-9s.</p> <p>Screwdriver</p> <p>Adjusting Timer</p> <p>Timer</p>
<p>③</p>  <p>To adjust timer to approx 6-9seconds.</p>	<p>④</p>  <p>Press cover</p>

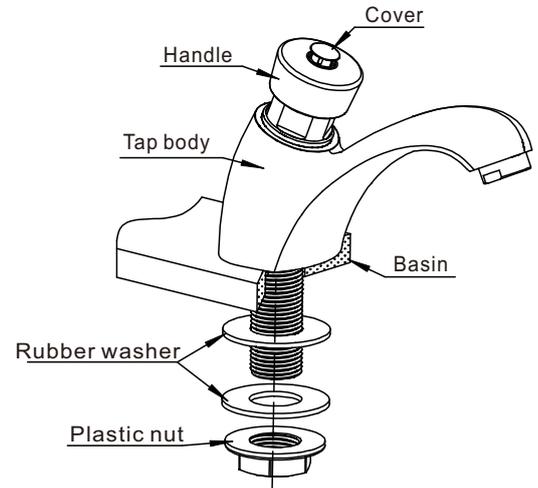

Follow the steps below for regular cleaning or maintenance !
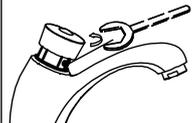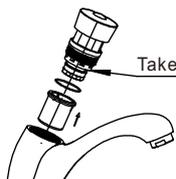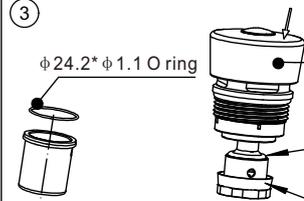
<p>①</p>  <p>Use wrench to screw out the valve</p>	<p>②</p>  <p>Take out barrel</p>
<p>③</p>  <p><math>\phi 24.2^* \phi 1.1</math> O ring</p> <p>Test the Push button, it should automatically Pop-up.</p> <p>Use water to wash the O ring.</p> <p>Check and clean the rubber washer</p>	