

## D-Line Fixing Instructions... Please read.

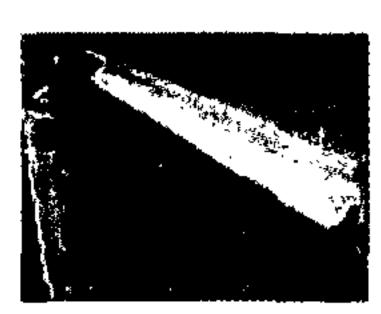


1. Measure length required. Hold cutting-guide over D-Line and cut where necessary using a Tenon Saw or Hacksaw with a line-tooth blade.

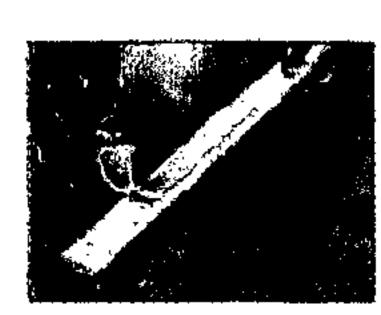

 For easier installation we advise horizontal runs (incl Quarter Sphere D-Line) are all fixed with dip-opening at top and the hinge at base.




3. For best results we recommend the lengths are fixed with screws. If using self-adhesive option only, please be advised a strong bond will be achieved with the surface.

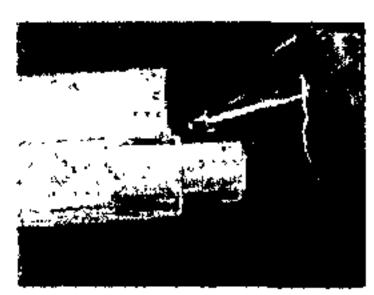

4a. Before fixing D-line lengths, remember the accessories!


When using accessories temporarily fit the relevant accessory part where required. Mark the surface to identify fixing point of next D-Line length.

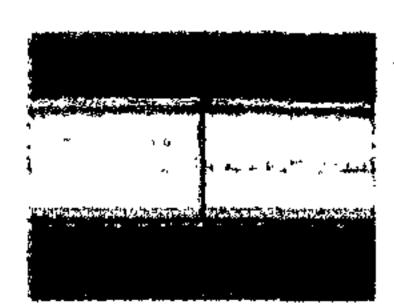

4b. Remove accessory to leave space. Position the next D-Line length. After fixing cables the accessory can be retrofitted into the space.




5a. When using flat or internal bends, first position the bend. Next mark the wall at shoulder of the bend (a & b) and cut the D-Line to suit.

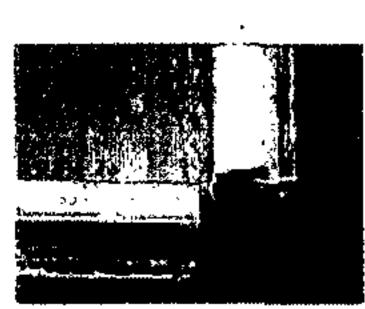


5b. Position trunking to enable wiring to be completed.

The bend can then be retro-fitted.

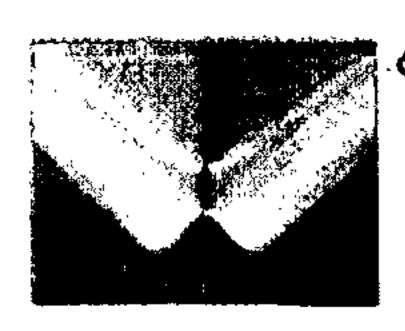

When litting external bends ensure corner sections are touching then later fit the bend over cables.

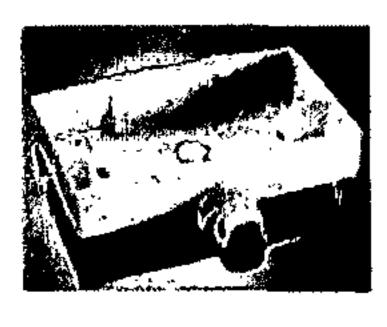

7. When fitting switch and socket boxes fix the D-Line 30mm x 15mm box adaptor (or tee adaptor) before the box is fitted to the surface. Enclose open ends with D-Line end caps.



3. To add (or remove) cables D-line should be opened by downward and outward pressure on the lid near the clip opening.

