

GATE SPRING FITTING GUIDE

To fit this Gate Spring use the following guide:

For right hand gates/doors fit the top bracket to the post and the bottom bracket to the door.

For left hand gates/doors fit the top bracket to the door and the bottom bracket to the post (see illustration below)

To adjust the spring tension:

- * Insert one of the metal pegs into the bottom adjuster (1)
- * Place the tensioning bar into the upper adjuster (2) and turn until correct tension is reached.
- * Lock the upper adjuster (2) with the remaining peg.

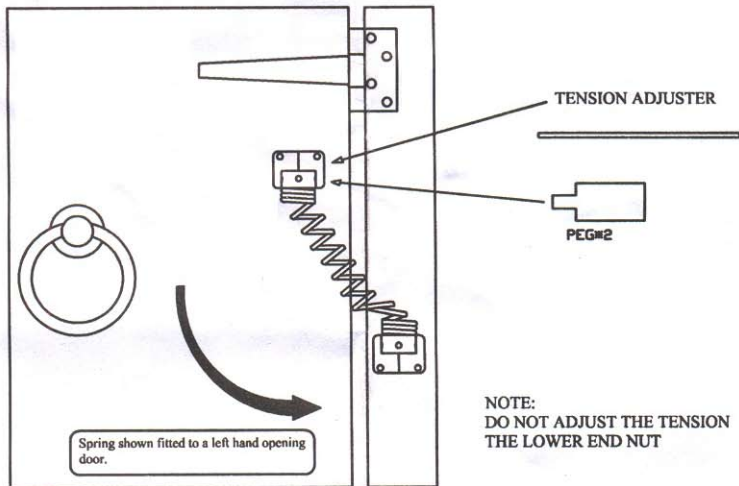


Diagram for illustration purposes only