

Monument Tools Ltd.
Restmor Way • off Hackbridge Road
Hackbridge • Wallington • Surrey
SM6 7AH • United Kingdom

Tel : +44 (0)20 8288 1100
Fax : +44 (0)20 8288 1108
Email : info@monument-tools.com

MONUMENT

www.monument-tools.com

Over 70 years of excellence as hand tool manufacturers and distributors of equipment for the plumbing and drainage industry
Registered in England at the above address, certificate no. 281817. VAT Registered No. GB 217 8102 81

SCREWFIX
DIRECT

INSTRUCTIONS

SCREWFIX
DIRECT

| Screwfix Cat No. | Monument Code | Description |
|------------------|---------------|-------------------|
| 12380 | 22PC | 22mm AUTO PIPECUT |


- ❑ **DO NOT INSERT FINGERS INTO PIPE CUTTER**
- ❑ Use pipe cutter only on pipe diameter as specified above.
- ❑ Open the gate of the tool and insert pipe; close the gate shut on the pipe.
- ❑ If the gate is held shut, the tool may be rotated around the pipe in either or both directions. When rotating in both directions, ensure whole circumference of pipe is cut.
- ❑ If the gate is **not** held shut, the arrow indicates the direction the tool must be rotated.
- ❑ The Ratchet Handle engages with outer ribbing of the pipe cutter and can be placed on either side of the pipe cutter for clockwise or anticlockwise rotation.
- ❑ The Ratchet Handle can be extended, by bolting a suitable length of material to the inside of the handle, using the two punched holes.
- ❑ Do **NOT** attempt to move the tool sideways before completing the cut or the cutter wheel will be damaged.

MAINTENANCE :

- ❑ Before using the Ratchet Handle the rivet may require light oiling.
- ❑ To ensure long life, occasionally dis-assemble the pipe cutter and clean away flux residues and other dirt.

REPLACING THE WHEEL :

1. Remove all 4 screws (A). Take care not to lose the 4 rollers (B).
2. Remove metal body (E) from plastic housing (F).
3. Using a suitable pin punch, remove pin (C). NB Do not drive pin (C) completely out of the metal body (E).
4. Insert the new cutter wheel (D) and insert wheel pin (C).
5. Assemble the tool.

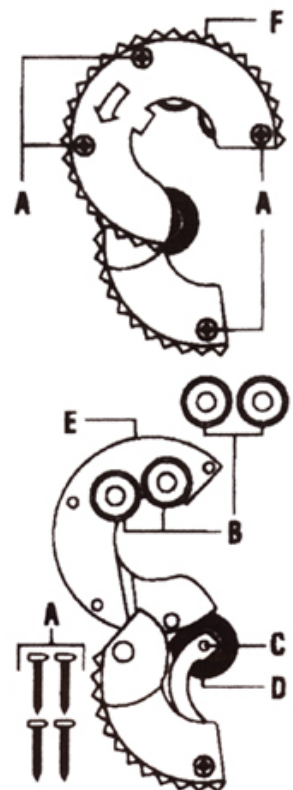

SPARE WHEEL :

To cut copper pipe **ONLY**, use : **W15PC**.

Reg. Des. Nos. 2044529 & 2055225
Patent Nos. 2288353



Member
COMITÉ EUROPÉEN DE L'OUTILLAGE
EUROPEAN TOOL COMMITTEE • EUROPÄISCHES WERKZEUGKOMITEE

