



User Guide



Contents

Welcome	3	My videos	20-22
Key features	4	Camera settings	23-24
Your camera	5	Location recording	25-28
Lets get started	6	TV Apps	29-32
Shelf mounting	7-8	Support	33
Wall or ceiling mounting	9-11	About	34
Power on your HUMAN EYE	12	Account settings	35
HUMAN EYE app	13	Reset	36
Sign up	14	Technical information	37
Add a camera	15-17	Safety information	38
My home	18	Warranty information	39
Watch live	19	Further support	40



Welcome to HUMAX EYE

A quick and easy to setup HD security camera, HUMAX EYE lets you see and hear what's happening at your home or business from anywhere using your smartphone or tablet.

It's perfect for watching entrances, pets and minding your loved ones anytime of the day or night.

HUMAX EYE instantly alerts you when motion is detected. Watch live or review your last 7 days' of recordings which are securely stored in your cloud account, safe from theft. Unlike other cloud cameras, storage is FREE. Add as many cameras as you like and manage them from one account.

It's easy, it's versatile, it's seeing your stuff – made simple.

Key features:



FREE Unlimited Cloud Recording

Every movement detected during the last 7 days is recorded and stored in your secure online cloud, ready to view free of charge, no monthly fees.



Safe and Secure

Even if your security camera is vandalised or stolen, your recordings are safe in the cloud and fully protected using Industry Standard Encryption.



Quick & Easy Set Up

No recording device required. No technical skills necessary, just set up from your mobile device and activate your online account.



Relevant Notifications

HUMAX EYE instantly alerts you on your mobile device when motion has been detected. Easily set up custom recording zones, on areas such as doorways and windows; to ensure you're only alerted when it matters.



Internet Friendly

HUMAX EYE only records when something happens so it doesn't need to constantly battle for the internet with other connected devices in your home. Enjoy minimal impact on your surfing and download speeds and stay within your data allowance.



Access on the go

Your Humax Eye uses Y-Cam technology inside. Download the Y-Cam FREE app from the App Store or Google Play. View your recorded videos and stream live from anywhere at any time as long as you are connected to the internet.



Location Recording

Automatically deactivates your camera's motion recording when you arrive home, and activates recording when you leave, based on the location of your mobile device.



On Demand Recording

Capture that moment; record what you want, when you want at the touch of a button. Just hit record when watching live to capture a moment in time up to five minutes long.

Requirements

- Android OS 4.4 & above
- iOS 8.1 & above
- Bluetooth: BT 4.1 - Bluetooth Low Energy (BLE)
- Wi-Fi: IEEE 802.11 b/g/n
- Frequency: 2.412 - 2.462 GHz
- Minimum upload speed 0.5 Mbps per camera




View Recordings on your TV

You will be able to see all your recordings and live view camera action on your TV by accessing the Humax Eye app on selected HUMAX Personal Video Recorders. *

* Compatible products are HDR-1100S, HB-1000S, FVP-4000T and H3 Espresso

What's in the box:



HUMAX EYE
Camera




Magnetic
Stand



3m Micro
USB cable



USB power
adapter



Wall mount



Screws &
Wall plugs

Your Camera



1 Lets get started

Pick your location and plug in your HUMAX EYE



Things to consider before camera set up:


1. Ensure you have a power socket within 3 metres * from where you would like the camera positioned.
2. Decide what you want to see in the field of view.
3. Avoid placing the camera in a position where the field of view is subject to multiple changes in light conditions. Sunlight, reflections and shadows may cause motion events to be missed or false motion recordings to occur.
4. Moving cars or headlights may cause unwanted motion recordings.
5. Night vision IR LED will reflect and distort image and video if the camera is pointed through a window or glass.
5. HUMAX EYE is not waterproof, therefore please do not use outside or in damp or moist environments.

* Please do not use a micro USB cable longer than 5 metres.

Shelf Mounting



Before placing camera on a shelf, attach it to the stand provided.

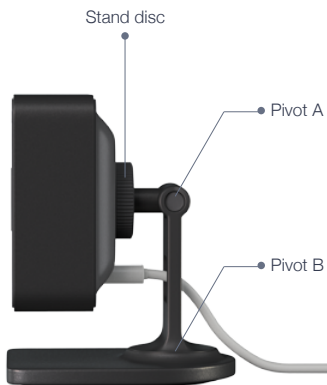

Remove camera and stand from the packaging.



1

Screw the stand to the stand mount located at the rear of the camera until fully secure.



2a

If your camera is misaligned as below:



2b

Hold the camera in one hand and loosen the camera slightly from the disc until correctly aligned.



3

Hold the camera in one hand and tighten the stand disc until secure.



4

Attach the supplied USB cable to the camera as shown below, passing the USB cable through the hole at the rear of the stand to ensure full movement of stand.



5

Using pivot 'A' you can adjust the camera view up and down*
Using pivot 'B' you can adjust the camera view side to side *

* Please note: Pivot fixings are intentionally tight in order to ensure the camera view is maintained.

Wall or Ceiling Mounting

To mount your camera on the wall or ceiling, please use the stand, wall mount, screws and wall plugs provided.

Please attach the stand before mounting.



Remove camera and stand from the packaging.



1

Screw the stand to the stand mount located at the rear of the camera until fully secure.



2a

If your camera is misaligned as below:



2b

Hold the camera in one hand and loosen the camera slightly from the disc until correctly aligned.



3

Hold the camera in one hand and tighten the white disc until secure.



4

Attach the supplied USB cable to the camera as below.




5


Using pivot 'A' you can adjust the camera view up and down*
Using pivot 'B' you can adjust the camera view side to side *

* Please note: Pivot fixings are intentionally tight in order to ensure the camera view is maintained.

To install the wall mount
please follow steps below:

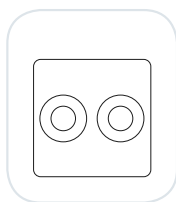


Wall mount plate

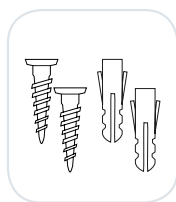


Screw & wall plugs

Screws & wall plugs

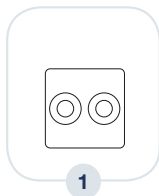

1

Decide where you would like to place the wall mount

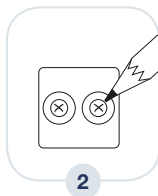


2

Mark the two drill holes using the mount




3

Drill two holes, use wall plugs if required

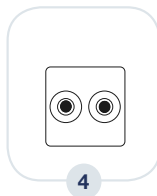

4

Position wall mount over holes and screw into place

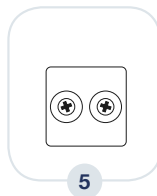

5


Screw until mount is secured and screws sit flush within their grooves

Appropriate strength double-sided tape can also be used to fix the wall plate. Tape not provided.

Power on your HUMAX EYE



USB power adapter

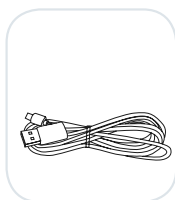

USB cable

Only use the supplied USB power adapter and cable provided.
Using unauthorised equipment will invalidate your warranty.
The maximum power output for the power adapter is $5V = 2A$.


- Ensure the Micro USB cable is plugged into the rear of your HUMAX EYE.

UK / EU




1a

UK / EU - choose appropriate fitting

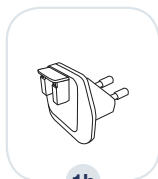


1b

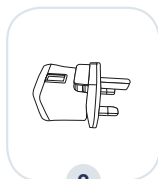

2

Insert fitting from the top
and push down

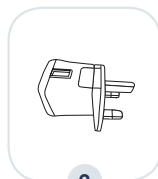

3

When fully inserted you
will hear a click

- Plug the other end of the USB cable into the power adapter.
- Plug the power adapter into socket and switch power on.
- You should now see a solid blue light on camera status LED.

HUMAX EYE App






Download on the
App Store



GET IT ON
Google Play



Your HUMAX EYE uses Y-Cam Technology inside. Search for Y-Cam in the relevant App Store to download the Y-Cam mobile app to your device and follow the step by step instructions to get your camera up and running.

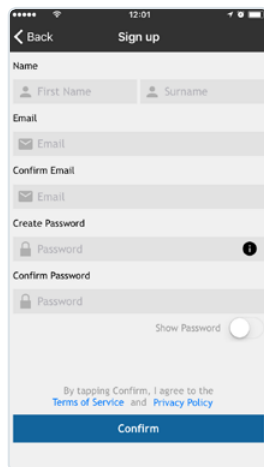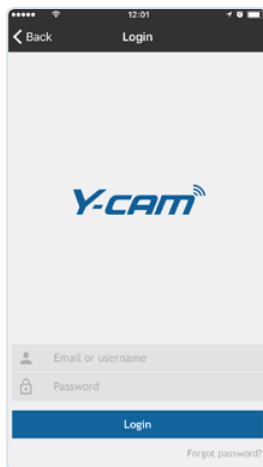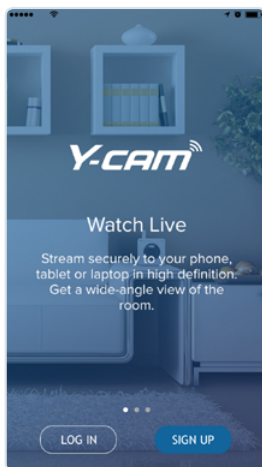


If you already have a HUMAX EYE account please login and go to page 15 of this guide.


No account? Then please select 'sign up'.

Sign Up

Please provide the details requested.

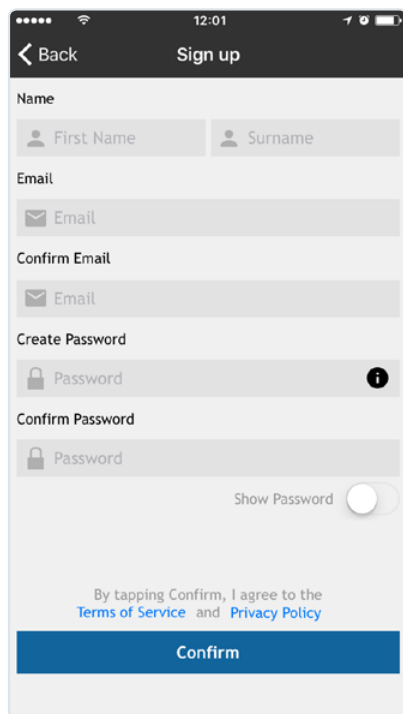

The 'Sign up' form is displayed on a mobile device screen. It features a dark header with a back arrow and the title 'Sign up'. The form is divided into several sections: 'Name' with fields for 'First Name' and 'Surname'; 'Email' with an 'Email' field; 'Confirm Email' with an 'Email' field; 'Create Password' with a 'Password' field and an information icon; and 'Confirm Password' with a 'Password' field. A 'Show Password' toggle switch is located below the password fields. At the bottom, there is a blue 'Confirm' button. Above the button, a line of text states: 'By tapping Confirm, I agree to the [Terms of Service](#) and [Privacy Policy](#)'.

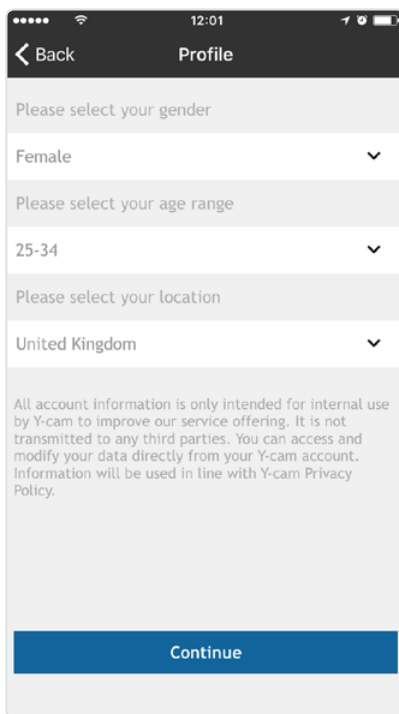


The 'Profile' form is displayed on a mobile device screen. It features a dark header with a back arrow and the title 'Profile'. The form contains three dropdown menus: 'Please select your gender' with 'Female' selected, 'Please select your age range' with '25-34' selected, and 'Please select your location' with 'United Kingdom' selected. Below these, a paragraph of text reads: 'All account information is only intended for internal use by Y-cam to improve our service offering. It is not transmitted to any third parties. You can access and modify your data directly from your Y-cam account. Information will be used in line with Y-cam Privacy Policy.' At the bottom, there is a blue 'Continue' button.




Note: Your password must contain a minimum of eight characters including at least one number, one upper case and one lower case letter.


Add camera

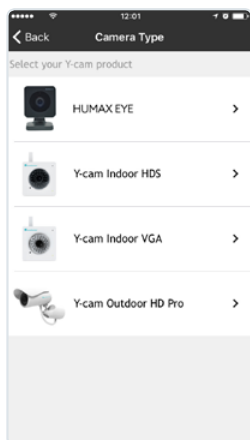


Select HUMAX EYE (Note: If you already have an account, you will first need to select 'add new camera' from your home screen.

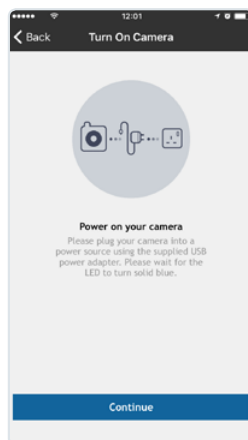


Plug in camera, please wait for the status LED to turn solid blue and select continue.

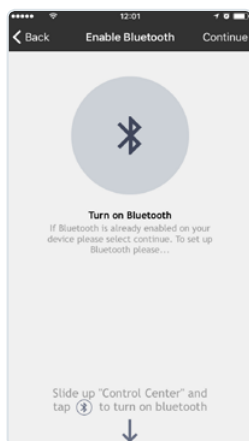


If your devices' Bluetooth is not enabled, the app will ask you for permission to enable, (Android) or show you how to enable (iOS). Camera LED will still be solid blue.

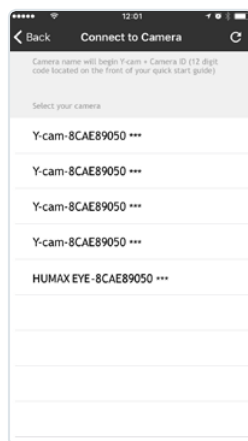


Select your camera from the Bluetooth list, your camera's unique ID is located on the front of your Quick Start Guide. Status LED will now be blinking blue.

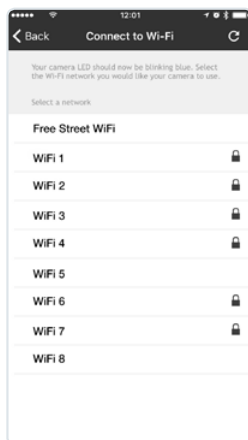


Select the Wi-Fi network you would like the camera to use.

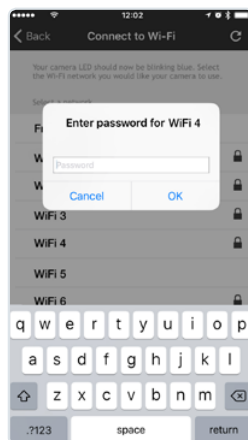

Enter your Wi-Fi network password. The camera will now connect to your Wi-Fi. This may take a few minutes*.

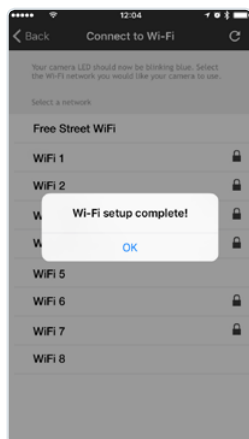


Once connected you will see the message “Wi-Fi set up complete!”. Select OK. Status LED will now be solid blue.

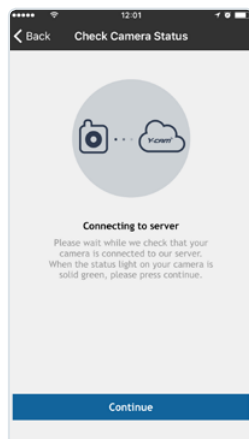


Your camera will then connect to the service. When connected the Status LED will turn solid green then press continue.


* Your Wi-Fi network password must have a maximum of 19 characters

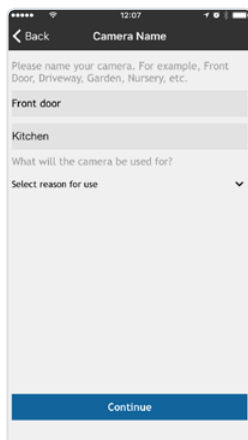


Name your camera and select what the camera will be used for. Then press continue.

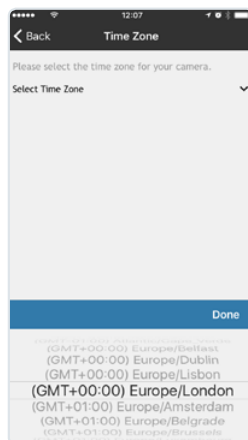

Select the required time zone and select continue.

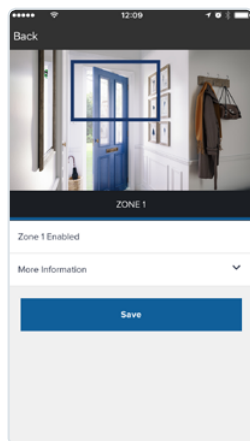

Set up your motion zone. Position the camera as required to capture the area you wish to monitor. Use pivot 'A' and 'B' on the stand to position your camera.

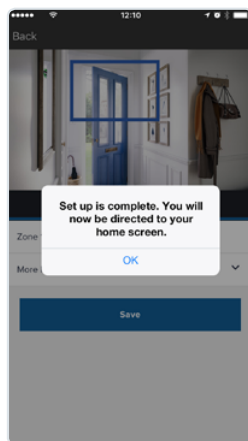


Press save to keep your changes, you will receive a message confirming your zones are saved. You will now be taken to your 'Home screen'.

My Home

Displays images of all the cameras in your account. Choose which camera to view.

App menu, provides quick access to all main features – available in all main screens of the app

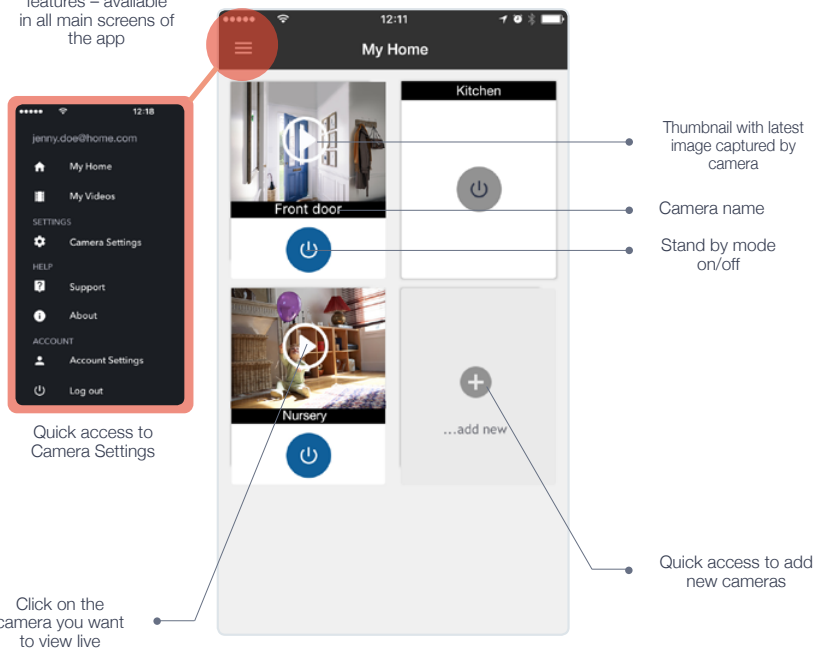

Note: Cameras displayed in alphabetical order.

Watch Live

Watch Live and get quick access to the last 10 camera events.

Camera name

Record on Demand, clip saved in the cloud, accessible via 'My Videos'

Snapshot icon – takes a picture and saves it to your phone's gallery

Swipe event list down to refresh events

Click on event to play

"LIVE" icon shows when the stream is live

Last 10 events shown below live feed

Swipe right to left on live view to quickly switch to other cameras in your account



Turn device to landscape mode to see full screen

My Videos

Watch your video history or take a look at recordings you have saved to your favourites.

Choose your view – List or calendar view.

Select which tab to view, History or Favourites

Select the date to see videos for that day

Number of videos recorded that day

Switch to Calendar view – for 'Video History' tab only


The main screenshot shows the 'My Videos' app interface. At the top, there is a status bar with the time 12:22 and various icons. Below the status bar is a header with the title 'My Videos' and a hamburger menu icon on the left. Below the header is a navigation bar with two tabs: 'HISTORY' (selected) and 'FAVOURITES'. The 'HISTORY' tab displays a list of dates from March 8th to 15th, each with the number of videos recorded on that day. A red circle highlights a calendar icon in the top right corner of the app. A smaller inset screenshot to the right shows the app in 'Calendar view', displaying a calendar grid with the same data. A red box highlights the 'HISTORY' tab in the inset screenshot.

Date	Number of Videos
15 MAR	4 VIDEOS
14 MAR	59 VIDEOS
13 MAR	195 VIDEOS
12 MAR	81 VIDEOS
11 MAR	448 VIDEOS
10 MAR	66 VIDEOS
09 MAR	826 VIDEOS
08 MAR	225 VIDEOS


My Videos – History tab

Day view:


- Select any video to play.
- Use the filter to access particular clips.
- Save, download or delete any clip you want.

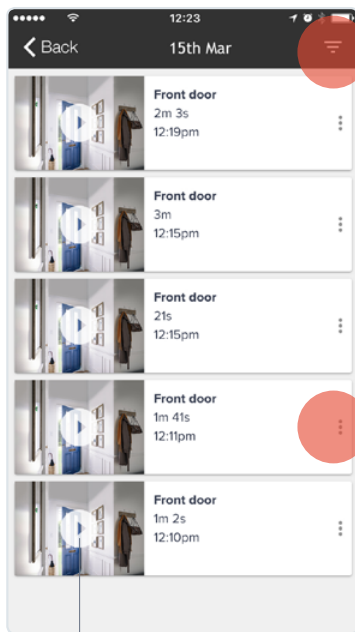

Filter menu:
Filter by Camera,
Favourites or
On Demand videos

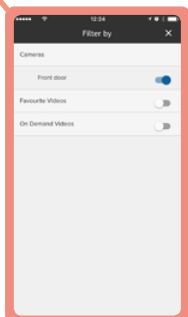

Click on a video to play. Video will open in a new screen. To view in full screen, rotate device to landscape mode

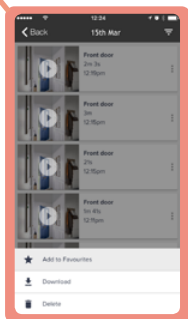


Click on options icon to choose what to do with the video – save to favourites, download or delete

My Videos – Favourites tab

- All videos saved as Favourites can be viewed in date order.


Click on a video to play. The video will open in a new screen. To view in full screen, rotate phone to landscape mode

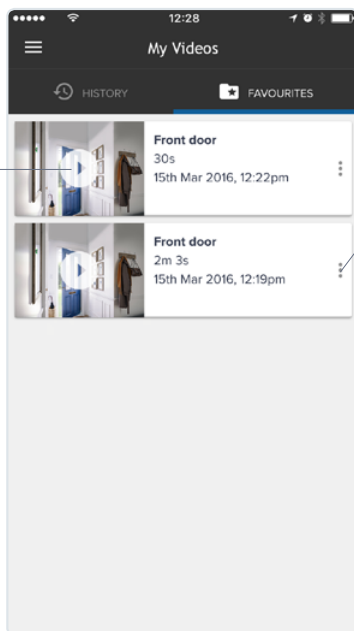


Click on options icon to choose what to do with the video – Remove from favourites, download or delete

Camera Settings


Tailor your camera to your needs.

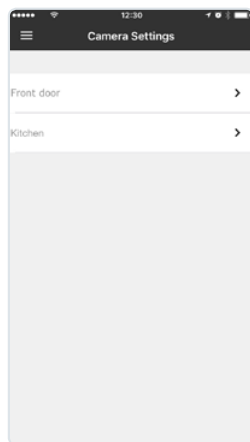

Select the camera you would like to view

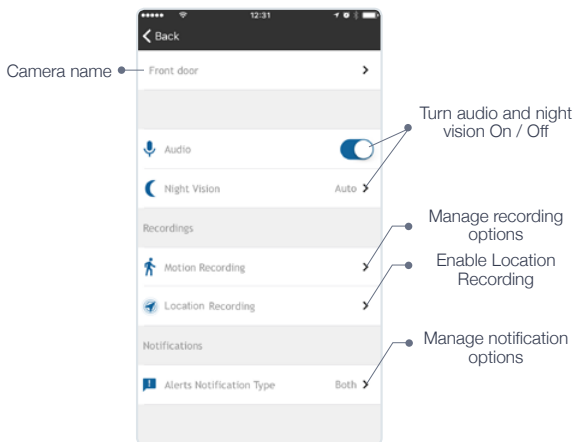


Camera Settings

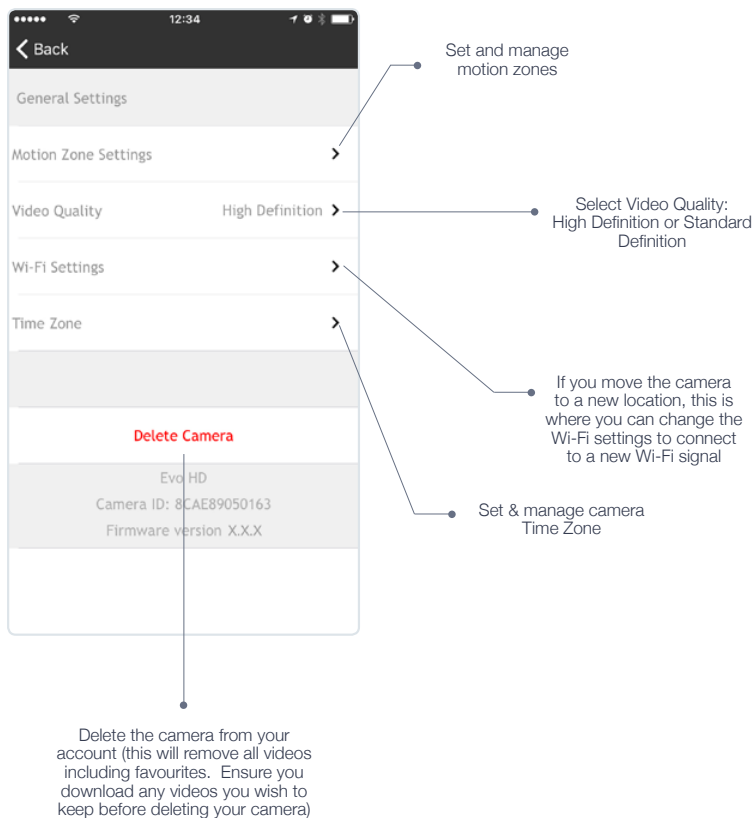


Location Recording

Automatically disables your camera's motion recording when you arrive home and enables recording when you leave, based on the location of your mobile device.



Set Location Recording:

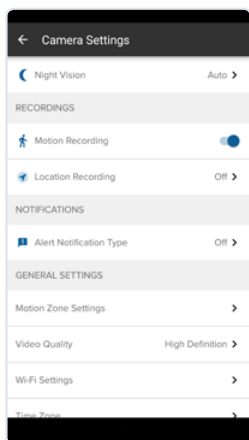



Select Location Recording from the recordings menu. As default this is set to off. Please note if Motion Recording is set to off, this option will not be displayed.

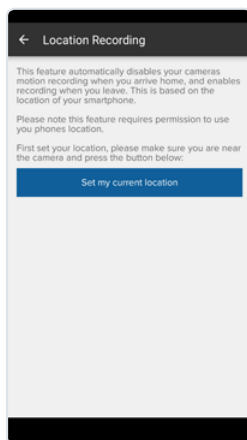

Save your current location. This will be the location used to automatically enable and disable Location Recording.

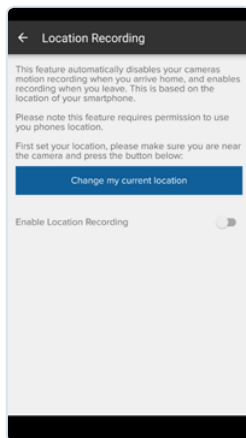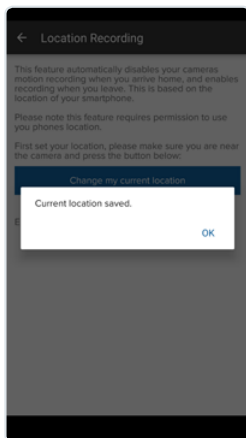


Slide the toggle to the right 'Enable Location Recording'.

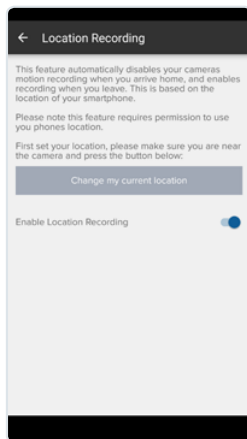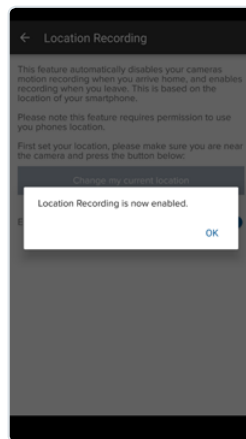


Location Recording is now enabled.

Location Recording


When you want to take over Location Recording.

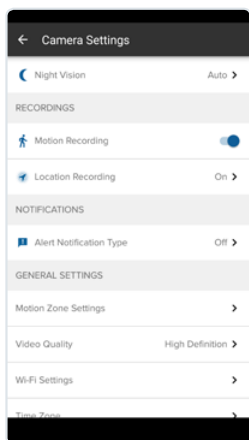


Select Location Recording from the recordings menu, please note it will already be switched On.

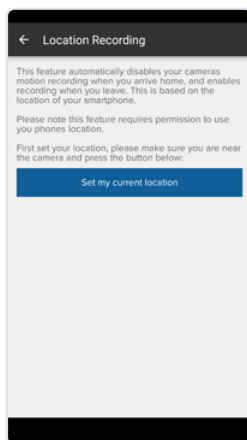


Save your current location.

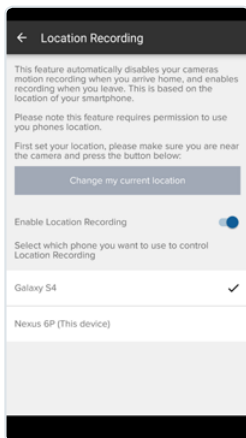


Once the location is saved, please select your device from the device list. The device used to set up Location Recording originally will be ticked.

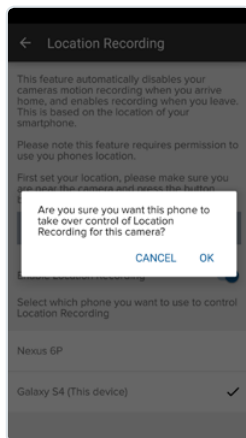

Please confirm you would like to take over Location Recording on your device.

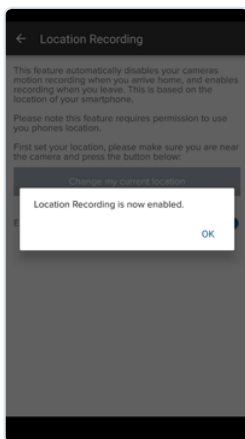

Location recording is now enabled.

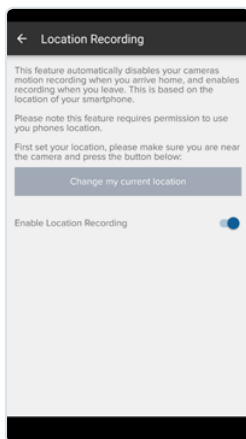

You have now taken over Location Recording.



The original user will get a notification to tell them they no longer control Location Recording on this camera.

TV Apps

The HUMAX EYE app, which is available on selected HUMAX products*, allows you to watch your recordings and view live video from your HUMAX EYE camera.

Finding the HUMAX EYE app

For Freeview Play FVP-4000T customers Go into the 'On Demand' menu and click on the HUMAX EYE app to launch the service.


For Freesat HDR-1100S and HB-1000S customers Go into the 'Humax - Portal' menu and click on the HUMAX EYE app to launch the service.

For H3 Espresso customers Go into the 'HUMAX Plus+' menu and click on the HUMAX EYE app to launch the service.

Login

Before launching the HUMAX EYE app, you need to create an account via the Y-Cam app on your mobile device, as described on the page 14.

Once created, launch the HUMAX EYE app on your PVR/STB.

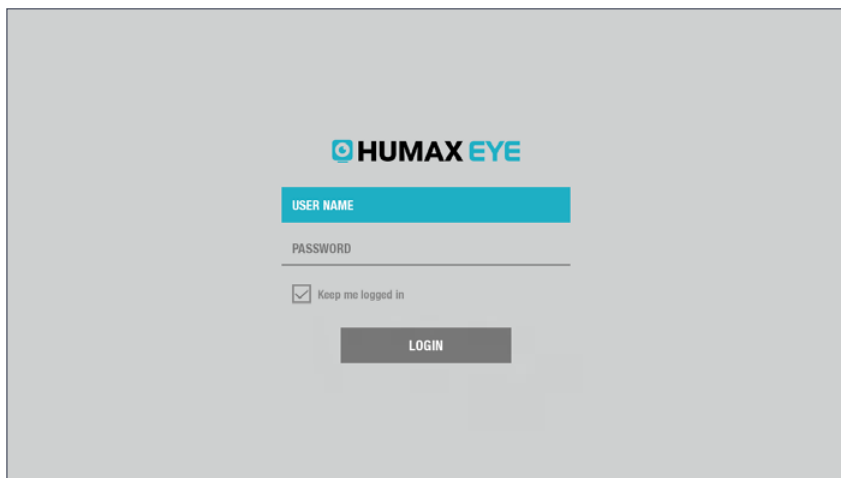The image shows the login interface of the HUMAX EYE app. At the top center is the HUMAX EYE logo, consisting of a blue circle with a white 'e' inside, followed by the text 'HUMAX EYE' in blue. Below the logo are two input fields: the first is labeled 'USER NAME' in white text on a blue background, and the second is labeled 'PASSWORD' in grey text on a light grey background. Below the password field is a checkbox with a checkmark inside, followed by the text 'Keep me logged in'. At the bottom center is a dark grey button with the word 'LOGIN' in white capital letters.

1. Launch HUMAX EYE app.
2. Enter **USER NAME** and **PASSWORD** and select **LOGIN**.


* Current compatible products are HDR-1100S, HB-1000S, FVP-4000T and H3 Espresso.

Check www.humaxdigital.com/uk for the latest information.

TV Apps

Live View

You can watch a live video from the camera.

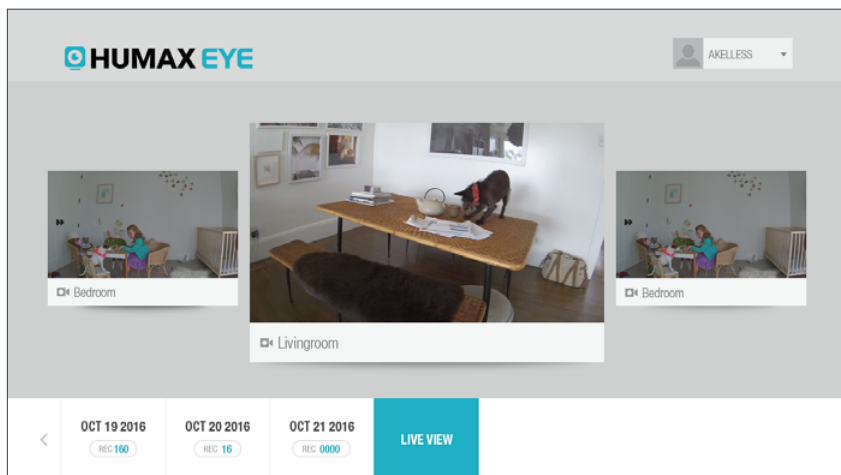


1. Select a camera to view.
You can link more than 3 cameras to your account, but only 3 cameras will be displayed on the screen at any one time.
To see more cameras, select a time stamp at the bottom of the screen.
2. Select **View** to watch a live video of the selected camera in full screen.
3. Select **Back** to go back to the previous screen.

TV Apps

Recording View


You can watch recorded videos from the camera.

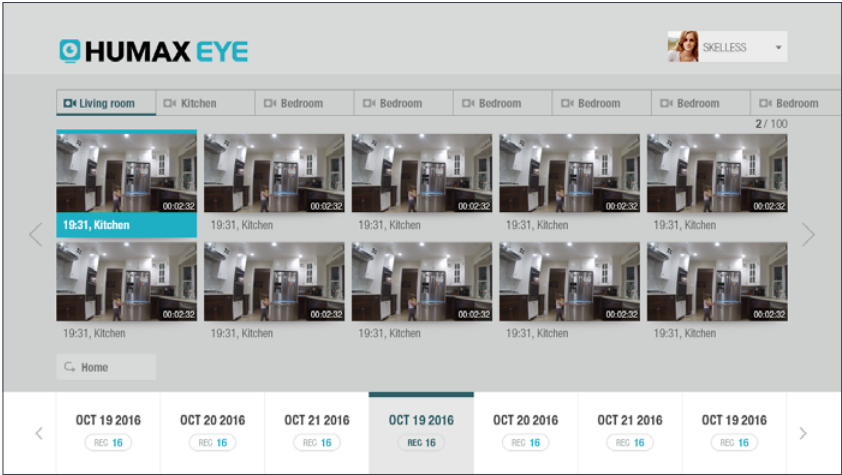

1. Select the time stamp at the bottom of the screen.
The number of recorded videos is displayed on the time stamp.
2. Select a camera from the camera list at the top of the screen.
3. Select a recorded video to play.
You can skip forward or backward by 10 or 20 seconds during playback.

TV Apps


Changing Password

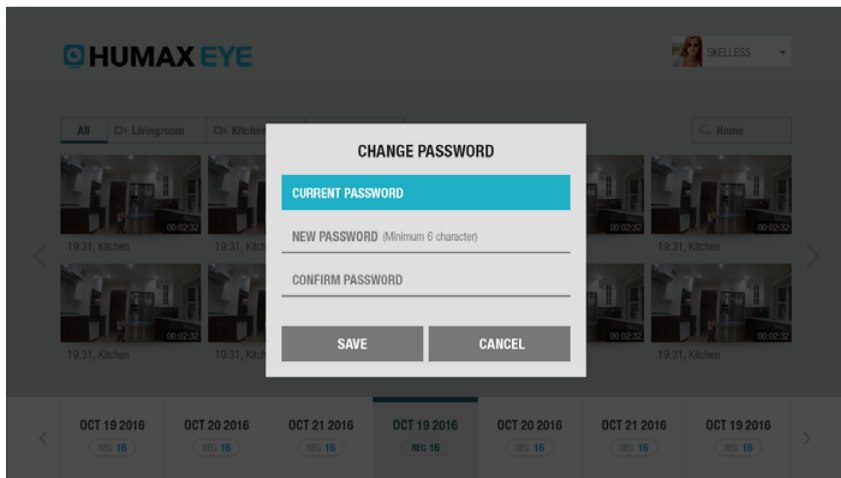

1. Select your user profile in the upper right part of the screen.
2. Select **Change Password**.
3. Enter current password and new password. The password must have at least 6 characters.
4. Enter confirm password and select **Save**.


Support

Contact us directly, visit our support centre or download your camera's quick start guide.

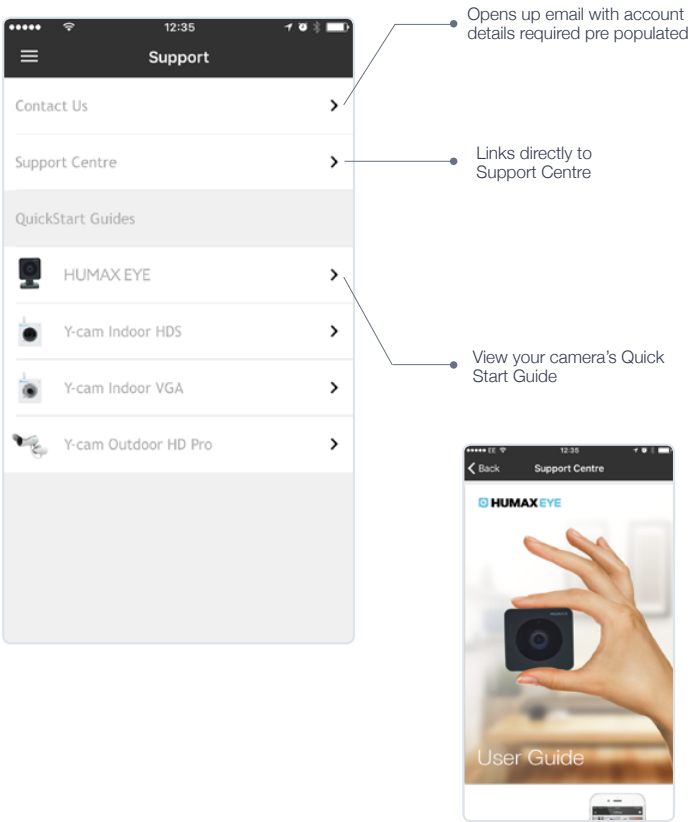


About

All about the app.

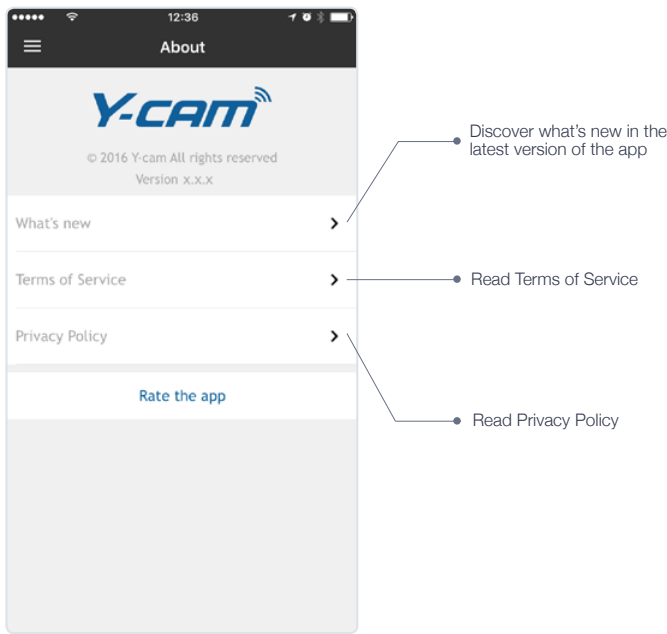

Account Settings

Manage your HUMAX EYE account.

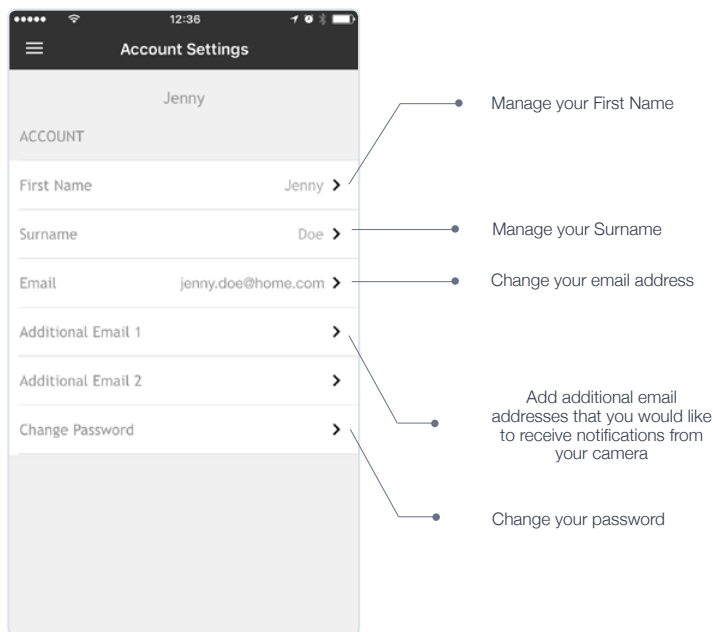

Reset

If your camera is already connected to an account, first delete it from your account via the app. Please ensure you have saved all videos required as these will also be deleted.



To reset the camera, place a pin or similar object in the reset hole on the side of the camera as shown and hold for 5 seconds.



After 5 seconds the camera LED will flash red for a few seconds and then go off. The camera will restart itself and a solid blue light will be shown. The camera is now reset to factory settings.

Now add the camera to your account in the normal way. Please refer to pages 15 - 17 for help on adding a camera.

Technical Information

Camera

Image resolution: 1 megapixel (1280 x 720), HD 720p

Field of view (Diagonal): 100°

Focal length: 2.78

Night vision: High Power IR, up to 8m illumination

Maximum frame rate: 15 FPS

Audio: Built-in microphone

Infrared LEDs: Yes

Operating temperature: 0 - 40°C

Interfaces

Bluetooth: BT 4.1 - Bluetooth Low Energy (BLE)

Ethernet: No

Wi-Fi: IEEE 802.11 b/g/n

Frequency: 2.412 - 2.462 GHz

Power






Power requirements: 5V / 2A, Micro USB

Dimensions & Weight

Camera only (W x H x D): 52.2 x 52.2 x 28mm, 49g

Camera & stand (W x H x D): 52.2 x 70.4 x 57.3mm, 95.8g

LED Status Light

				
Camera Booting up: BLUE	Camera connecting to Bluetooth and Wi-Fi: Blinking BLUE	Camera connected to HUMAX EYE servers: GREEN	Camera recording: Blinking GREEN	Camera disconnected from HUMAX EYE servers or Wi-Fi: Blinking RED



Please note the infrared night vision LED is separate to the status LED. Both LED are both next to each other but should not be confused.

Safety Information

- **Do not** try to disassemble the camera or power supply
- Keep the power supply dry and avoid contact with liquid
- Small parts may be a **choking hazard**, keep away from children
- Only use approved accessories and power supplies
- **Do not** cover the camera, infrared lights produce heat, which may create a fire hazard
- Ensure the camera is properly attached to the supplied stand before final installation and positioning
- Compliance is only assured by using the included power supply



CAUTION

When the infrared night vision LED is on, or has recently been on for a period of time, the camera will be hot to touch. This is normal. Please keep the camera out of reach of young children and infants.



Double insulated Class II equipment (IEC 60417-5172).
Do not require an earth connection.



For indoor use only (IEC 60417-5957).



Direct current (IEC 60417-5031).

Warranty Information

Hardware Limited Warranty

HUMAX warrants to the original purchaser, with this limited hardware warranty, that the enclosed HUMAX security camera, will be free from defects in material, workmanship and design for 24 months (2 years) from the date of purchase.

This warranty does not cover any damage attributable to normal wear and tear, deterioration, faulty maintenance, erroneous installation or faulty repair. This warranty does not cover damage caused by wilful or accidental mishandling, improper installation or environmental conditions. This warranty is void if the product is tampered with or altered in any way.

Except for the exclusive remedy set forth above, in no event shall HUMAX have any liability to the purchaser or any third party for any claim, loss or damage of any kind. In no event shall HUMAX's liability for damages, whether arising out of contract, negligence, warranty or infringement of any intellectual property right, exceed the purchase price paid by purchaser for the products.

HUMAX specially disclaims any liability whatsoever for loss of data or loss of information caused by the product. This warranty does not cover HUMAX's products if purchased from an unauthorized auction house.

This warranty is void if the product is tampered with or altered in any way.

Recycling and disposal

<http://www.humaxdigital.com/uk/recycle>

Dispose in accordance with applicable legislation. The WEEE symbol means that your HUMAX EYE must be disposed of separately from general household waste. When the HUMAX EYE reaches its end of life, take it to a designated waste collection point in your area for safe disposal or recycling.

EU Declaration of Conformity

HUMAX hereby declares that this device is in compliance with the essential requirements and other relevant provisions of RTTE Directive 1999/5/EC.

A copy of the EU Declaration of Conformity is available at <http://www.humaxdigital.com/uk/eu-declarations>

© 2016 HUMAX Corporation. All rights reserved. All trade names are registered trademarks of respective manufacturers listed. App Store is a service mark of Apple Inc. Android and the "Google Play" logo are trademarks of Google Inc. Phone not included.

This device is restricted to indoor use only.



Created by HUMAX. Made in China.



Need support?

Your HUMAX EYE should be up and running in minutes.
You can contact us for assistance or support.

Visit **<http://www.humaxdigital.com/uk>**
or phone us:

+44 (0)34 4318 8800

E-mail: uksupport@humaxonline.co.uk