EN Friction stay hinge

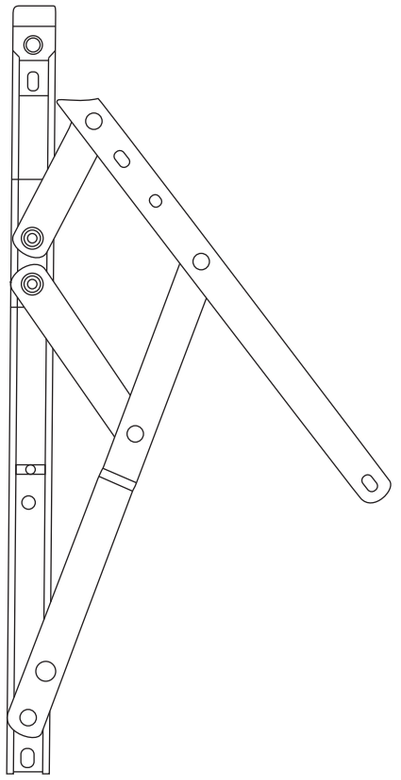

EN IMPORTANT - These instructions are for your safety. Please read through them thoroughly prior to handling the product and retain them for future reference.

5063022549440 / 5063022549563 / 5063022550392 / 5063022549730 / 5063022549747 / 5063022549860 / 5063022550088

V11124_5063022549440_MAND2_2324

EN Parts

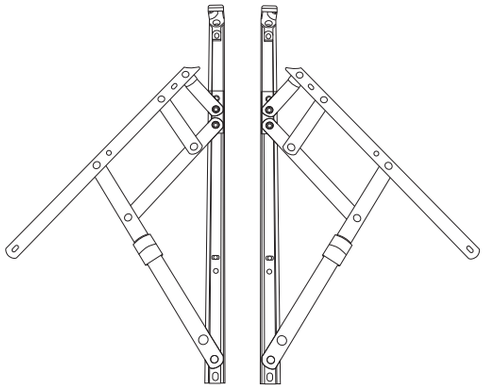

01. x2

02. x6

EN You will need

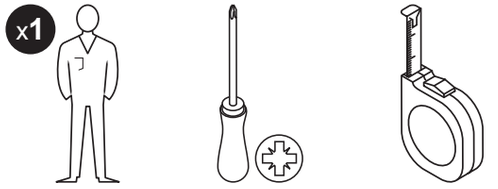

EN Care & maintenance

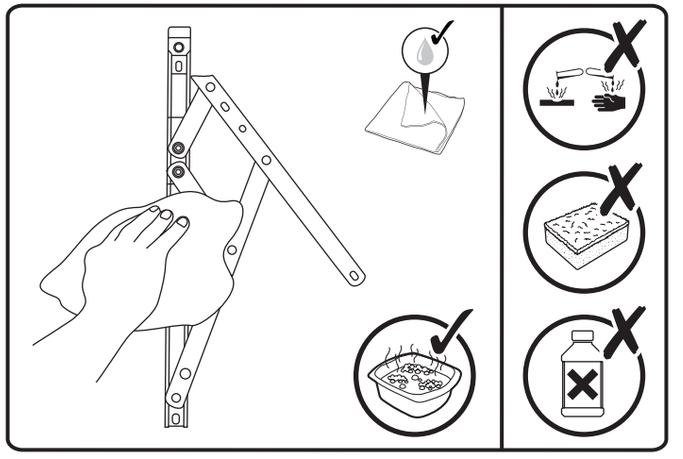

EN
Before you start

- Ensure you have the correct size hinge for the window being fitted/ repaired.
- Clear access to the window, ensuring a clear workspace
- Check for sash size compatibility both width and weight.

Safety

- Please ensure that appropriate PPE is worn and care is taken when handling moving parts and heavy sashes and glasses.

Guarantee

We take special care to select high quality materials and use manufacturing techniques that allow us to create products incorporating design and durability. This product has a manufacturer's guarantee of 2 years against manufacturing defects, from the date of purchase (if bought in store) or date of delivery (if bought online), at no additional cost for normal (non-professional or commercial) household use.

To make a claim under this guarantee, you must present your proof of purchase (such as a sales receipt, purchase invoice or other evidence admissible under applicable law), please keep your proof of purchase in a safe place. For this guarantee to apply, the product you purchased must be new, it will not apply to second hand or display products. Unless stated otherwise by applicable law, any replacement product issued under this guarantee will only be guaranteed until expiry of the original period guarantee period.

This guarantee covers product failures and malfunctions provided the product was used for the purpose for which it is intended and subject to installation, cleaning, care and maintenance in accordance with the information contained in these terms and conditions, in the user manual and standard practice, provided that standard practice does not conflict with the user manual.

This guarantee does not cover defects and damage caused by normal wear and tear or damage that could be the result of improper use, faulty installation or assembly, neglect, accident, misuse, or modification of the product. Unless stated otherwise by applicable law, this guarantee will not cover, in any case, ancillary costs (shipping, movement, costs of uninstalling and reinstalling, labour etc), or direct and indirect damage.

If the product is defective, we will, within a reasonable time, replace or refund.

Rights under this guarantee are enforceable in the country in which you purchased this product. Guarantee related queries should be addressed to the store you purchased this product from.

The guarantee is in addition to and does not affect your statutory rights.

IMPORTANT - RETAIN THIS INFORMATION FOR FUTURE REFERENCE: READ CAREFULLY.

01

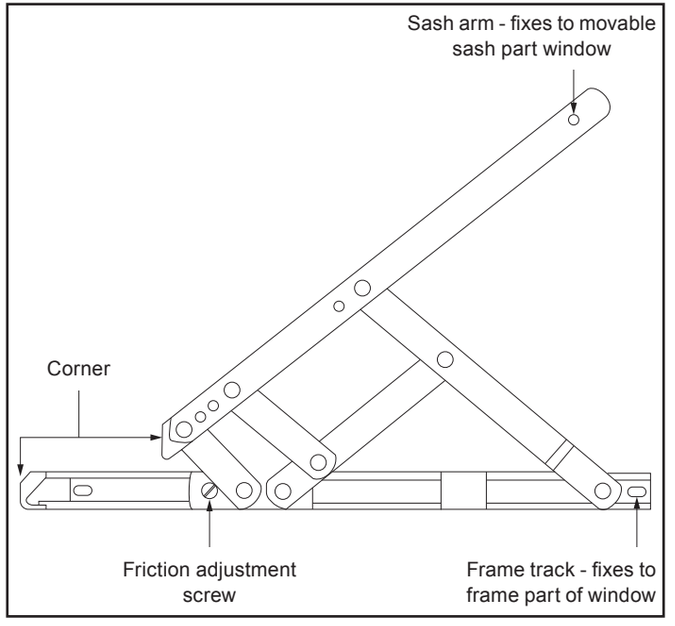

EN To remove the old friction stay from the window

Open the window and remove the screw from the frame tracks.

Slightly bending the top friction stay out of the frame and carefully lift out the window and remove all the other screws in the sash arms.

02

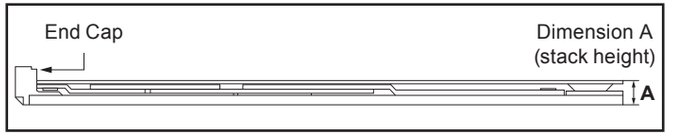

EN Fitting the Friction Stay

Establish the required stack height of the replacement friction stay. To do this fully close the friction stay so that all of the arms are stacked on top of each other.

Measure from the bottom arm of the stay to the top arm. This measurement is the stack height.

The standard stack heights for friction stays are 13 mm & 17 mm. This friction stay stack height is 13 mm, to install for a 17 mm stack height use the adjustment clips provided.

03

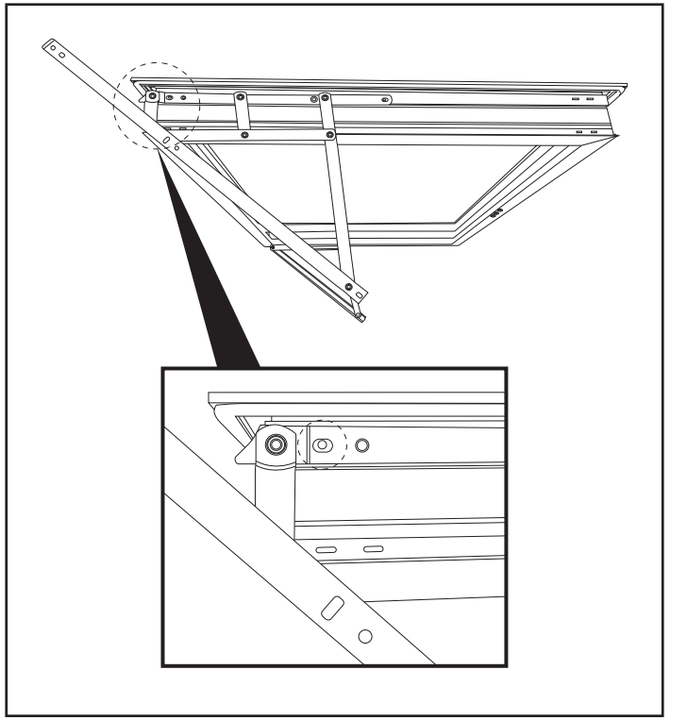

EN Select either the left of right hand friction stay (indicated with ‘R’ or ‘L’) depending on the opening direction of your window.

On the window sash, align the original screw hole closest to the corner, with the first hole in the friction hinge sash arm.

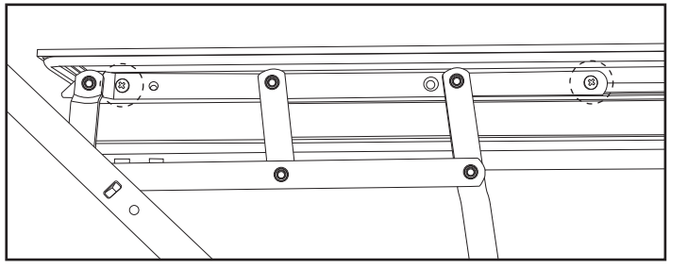

EN Screw the sash arm of the friction hinge to the window sash using only the oval holes. This will allow the window to be adjusted later if necessary. The other screw holes may not align with the holes in the new friction stay so may require pilot holes to fit.

04

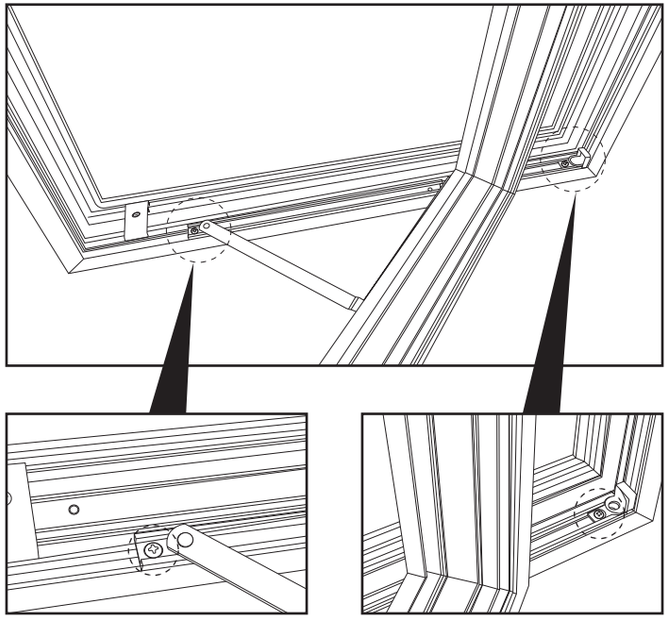

EN Once the pair of friction stays have been fitted to the window sash, ensure that both are in the open position.

Locate the frame track part of the friction stays into the corner of the window frame and secure with suitable fixings. Use only the oval holes so the window can be adjusted if necessary later.

Chek the operation by opening and closing the window.

05

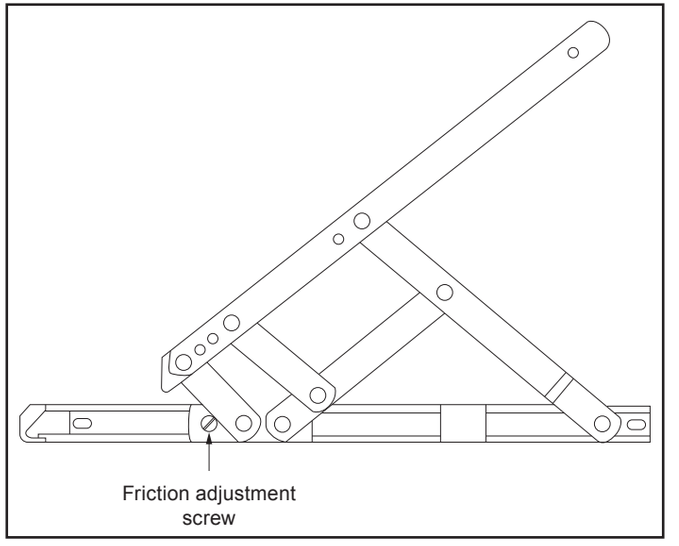

EN Adjustment

If you need to adjust simply loosen the screws in the oval holes and move the window sash.

Adjust the friction during opening by turning the screw in the plastic slide in the frame track.

Once the window is operating correctly the friction stay can be secured by fixing screws through the round holes in the frame track and the sash arms.

Manufacturer:

UK Manufacturer:
Kingfisher International Products Limited,
1 Paddington Square, London, W2 1GG,
United Kingdom

EN www.diy.com / www.screwfix.com / www.screwfix.ie
To view instruction manuals online,
visit www.kingfisher.com/products