



Garage Door Locks

Easy fitting guide

Please read all the instructions and notes carefully before fitting the ERA Garage Door Locks.

A Open the garage door. Position the lock along the edge of the door, at a height that avoids contact with the original door mechanism. (See figure A on front of card).

B Attach the template **E** as close to the front face of the door as possible. Check the template does not protrude in front of the door frame when the door is in the closed position. Mark off the position of the slot and the 2 fixing holes. Drill holes and remove cut-out.

C Insert lock into cut-out, ensuring keyhole is at the bottom of the lock. Using the lock keyhole as a guide, mark the position of the centre of the key. Remove lock, drill and cut out the door keyhole.

Fit the lock and loose forend. Check the locking operation. Modify the door keyhole if necessary.

Locate escutcheon assembly over keyhole. Insert key into lock, centralise escutcheon and mark off fixing holes. Drill holes and attach.

To establish the location of the striker plate, close the garage door and turn the key until the bolt makes contact with the frame. Mark clearly the position of the bolt on the frame. Retract bolt and open garage door.

Locate striker plate over the markings on the door frame, with the vertical marking in line with the slot in the striking plate. Mark off the area for the bolt recess and the 2 elongated holes.

Remove bolt recess to a depth that accepts the bolt. Attach the striker plate using the screws provided, in the elongated holes only.




Close door and check the locking operation. Adjust the position of the striker plate if necessary. Screw in remaining fixing screws provided.

Repeat the process for the other side of the door.

Note: The above instructions are suitable when there is sufficient gap between the door and frame to allow the lock and striker to be faced mounted, i.e. not recessed.

D When closing the door, if the fitted lock fouls the STRIKER PLATE, it is recommended that the striker plate be recessed into the frame.

When closing the door, if the fitted lock makes contact with the OUTER FRAME, the frame can be cut away to alleviate the problem.

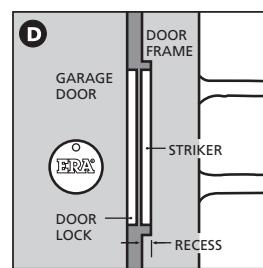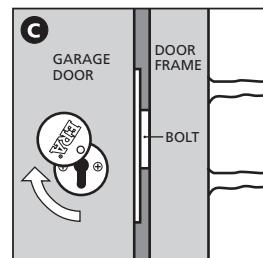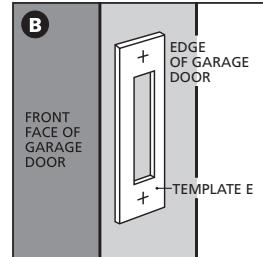

Reduce the risk with ERA PRODUCTS LTD

**TECHNICAL HELPLINE
01922 490 050**

Call 01922 490000 for your FREE brochure
www.era-security.com

