


FRANKE

Franke Sissons Ltd., Carrwood Road, Sheepbridge, Chesterfield, S41 9QB
Telephone: 01246 450255 Fax: 01246 451276 E-mail: ws-info.uk@franke.com

Fixing instructions for Wall Hung Slab Urinals G20117N, G20118N, G20119N, G20120N, G20121N, G20122N, G20123N, G20124N

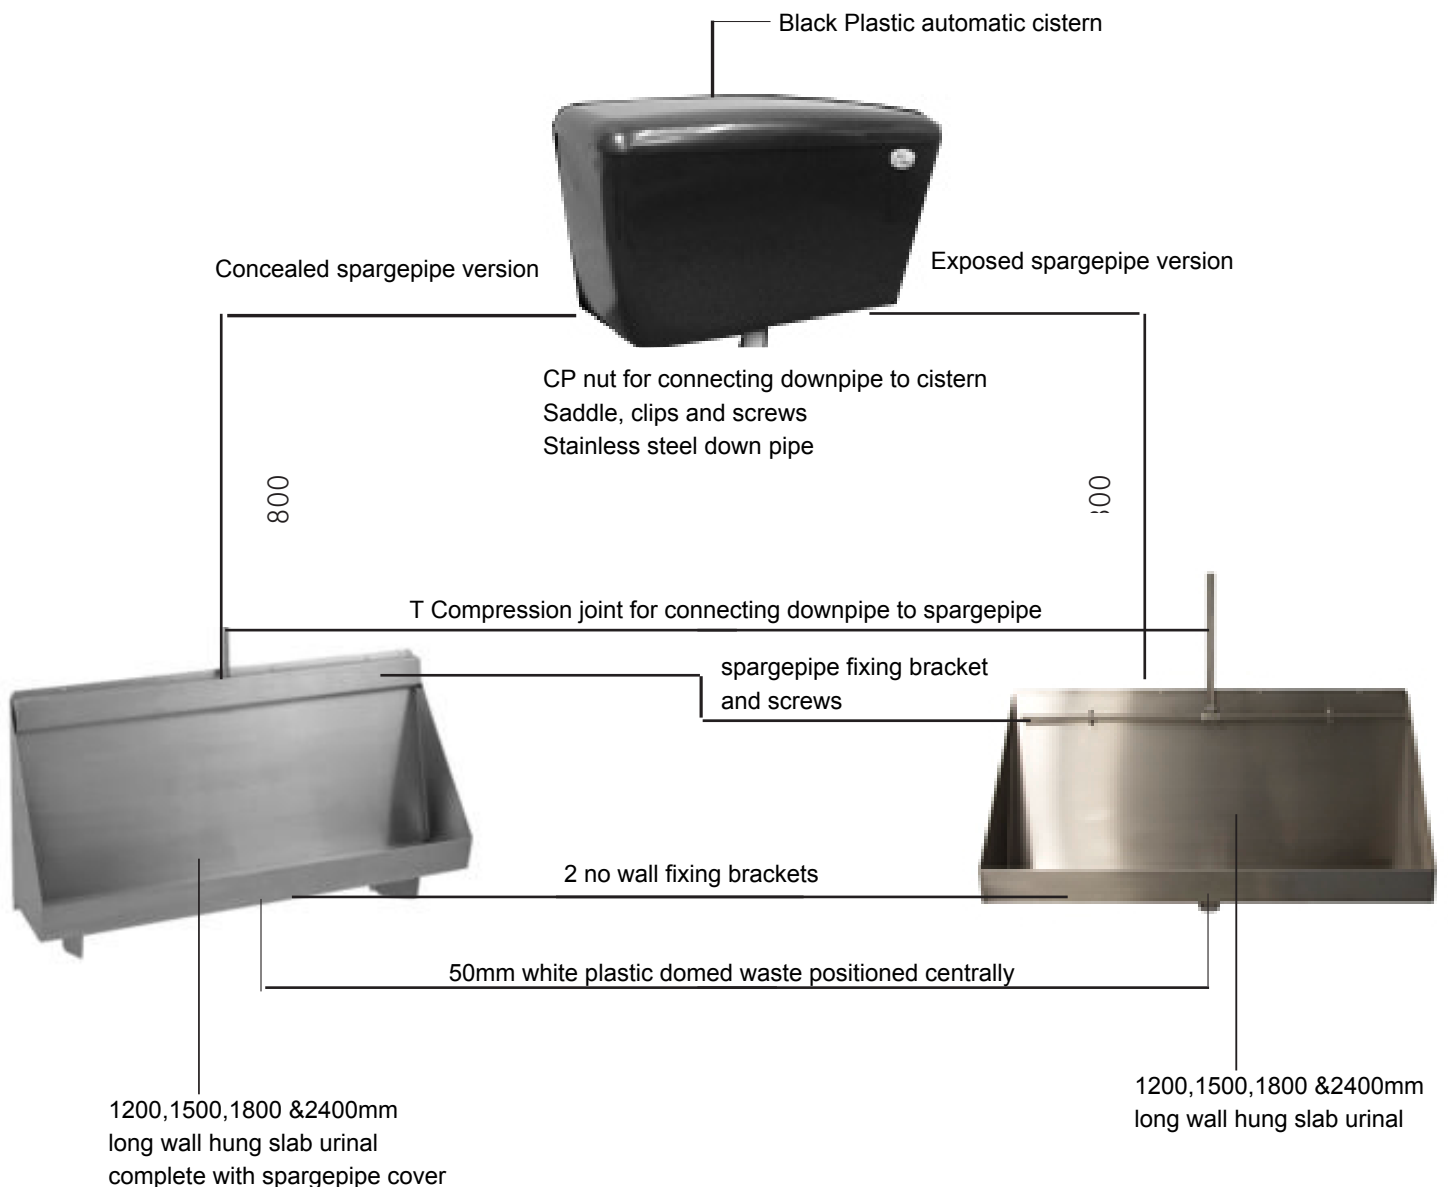

Fixing instructions for Wall Hung Slab Urinals

.....
Before installation please check the contents and read through the fixing instructions thoroughly.
.....

1. Concealed spargepipe

Remove the stainless steel cover using an alien key (not supplied). Cut the sparge pipe centrally and fit the T' compression joint. Using the fixing brackets and screws supplied, fit the sparge pipe and T' connection to the fixing hole nutserts provided in the slab wall. (Ensure that the holes in the spargepipe face the slab wall approximately 45° from the horizontal (see fig. 1)

2. Exposed spargepipe

Fit generally as described in para 1 above but with an exposed arrangement the downpipe can be fitted anywhere along the length of the slab urinal (and not fixed centrally as in the concealed version).

Note: The slab urinals supplied allow for an exposed cistern but a concealed duct arrangement can be accommodated by removing a blanking plate at the rear of the slab.

3. Fit the plastic domed waste outlet

4. Mark the required position of the slab urinal so that the 2 No. wall brackets can be fixed. Using 6mm rawlbolts (or similar) fasten the brackets to the rear wall, approximately 250mm in from each end.

5. Once the brackets are in position offer the slab urinal up to the wall and using the brackets to support the slab urinal mark the fixing holes, both along the top edge and the two integral brackets at each end of the slab base.

6. Drill and plug the wall. Fix the slab urinal in position (no fixings supplied).

7. Position the downpipe up to the wall ensuring a connection to the spargepipe T' compression joint is achieved. The position of the saddle clips can then be marked. Remove the downpipe and drill the fixing holes to suit the rawlplugs and screws supplied.

Do not fix the downpipe in position at this stage.

8. Fit the syphon in the black plastic cistern, following the separate instructions provided by the cistern manufacturer.

9. Offer the cistern up to the wall and mark the fixing holes. Drill the wall and fit rawlplugs (not supplied). Connect the cistern to the downpipe and screw fix the cistern to the wall (screws not supplied). Once the cistern is in position the saddle clips can be fitted.

10. For concealed spargepipe version only - Refit the stainless steel cover using the alien head screws previously removed, ensuring that the knock out plate is removed where the downpipe occurs.

11. Connect the water inlet to the cistern and the discharge pipework to the waste outlet.

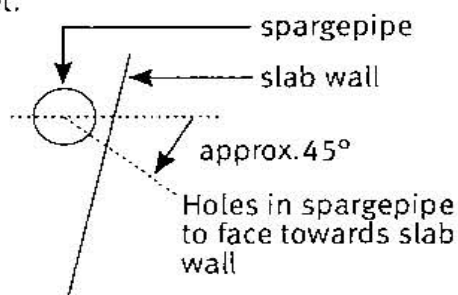


Fig 1.