


Fitting Instructions

Shower Kit

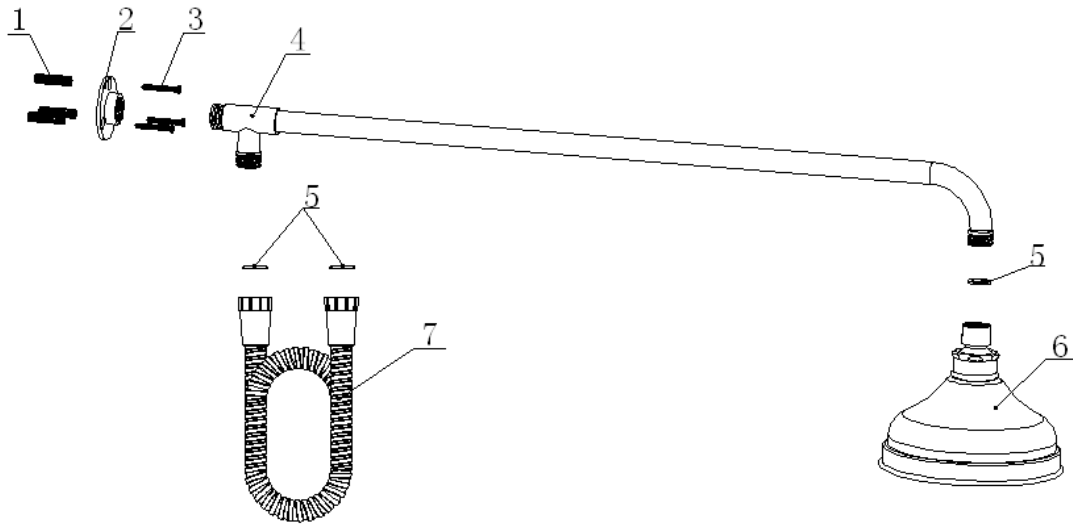

PARTS SUPPLIED

ITEM	DESCRIPTION	QTY
1	wall plug	3
2	shower arm bracket	1
3	wall screw (Ø 4 X25)	3
4	shower arm	1
5	rubber washer	3
6	shower head	1
7	stainless steel hose	1

TOOLS REQUIRED

power drill
drill bit
Cross head screw driver
pencil
wrench

BEFORE YOU START

- a) Identify all components and check pack contents.
- b) The screws and wall plugs supplied are only suitable for use in solid walls.
- c) Ensure there are no hidden service pipes or cables where you intend to drill.
- d) If drilling into ceramic tiles, please use a ceramic drill bit.
- e) Please be careful of your safety while drilling.
- f) **TURN OFF WATER MAINS SUPPLY.** The mains stopcock is usually situated where the supply enters the building.
- g) It is also recommended that the water heating arrangements are turned off.
- h) Isolate the hot and cold water supply.

INSTALLATION

- 1) Screw the shower arm (4) onto shower arm bracket (2) make sure the elbow points downward. Mark the positions of three drill holes. Drill the wall in marked positions by using the power drill. Then insert the wall plugs (1).
- 2) Unscrew the shower arm (2) from the shower arm bracket (4). Fix the shower arm bracket (2) on the wall with wall screws (3) by cross head screw driver.
- 3) Rotate the shower arm (4) onto the shower arm bracket (2) and tighten. Keep the elbow pointing downward.
- 4) Insert the rubber washers (5) into shower head (6) and stainless steel hose (7).
- 5) Install the shower head (6) onto the shower arm (4).
- 6) Connect one end of the stainless steel hose (7) to the shower arm (4) connect the other end of the stainless steel hose (7) to shower outlet.

AFTER CARE

- a) To maintain the appearance of this fitting, ensure it is cleaned only using a clean soft damp cloth.
- b) A solution of warm water and mild liquid detergent may be used where necessary and then rinsed thoroughly. Abrasive cleaners or acidic cleaners **MUST NOT BE USED** under any circumstances. Avoid contact with solvents.
- c) Please use non-return valves on your shower system.
- d) Please retain these instructions for future reference.