


SPACE PLUG


Professional Simplicity for Everyone

One Space-Plug is required centred on any single base unit and two evenly spaced in any double unit. Depending if you have Space-Plug Reg or XL You'll want 150mm or 200mm drill bits suitable for your choice of wall fixing and appropriate screws.

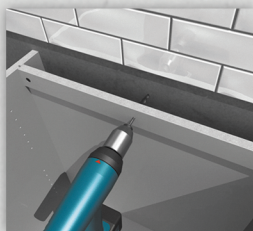


Step 1 Drill

With the cabinet in place, drill a pilot hole through the cross-brace, then drill directly into the wall behind and insert your wall-plug.

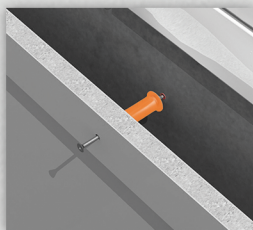


Step 2 Thread a Screw

Pass a screw through the cross brace, through the **Space-Plug** and locate it into the still visible wall-plug.

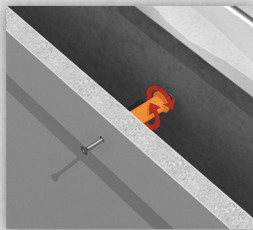

Step 3 Bridge The Gap

The clever bit! Just unwind the **Space-Plug** until it firmly contacts both surfaces.

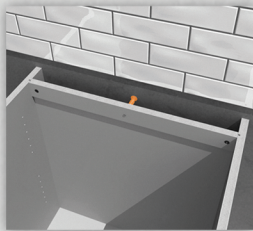

Step 4 Just Tighten The Screw

And it's fixed! With

SPACE  PLUG



Designed & Made
in Britain



Watch The Video
NOW!

www.space-plug.com