




INSTALLATION INSTRUCTIONS

Residual Current Device with Overcurrent Protection (RCBO)

Single module device suitable for use in Wylex NH distribution boards.

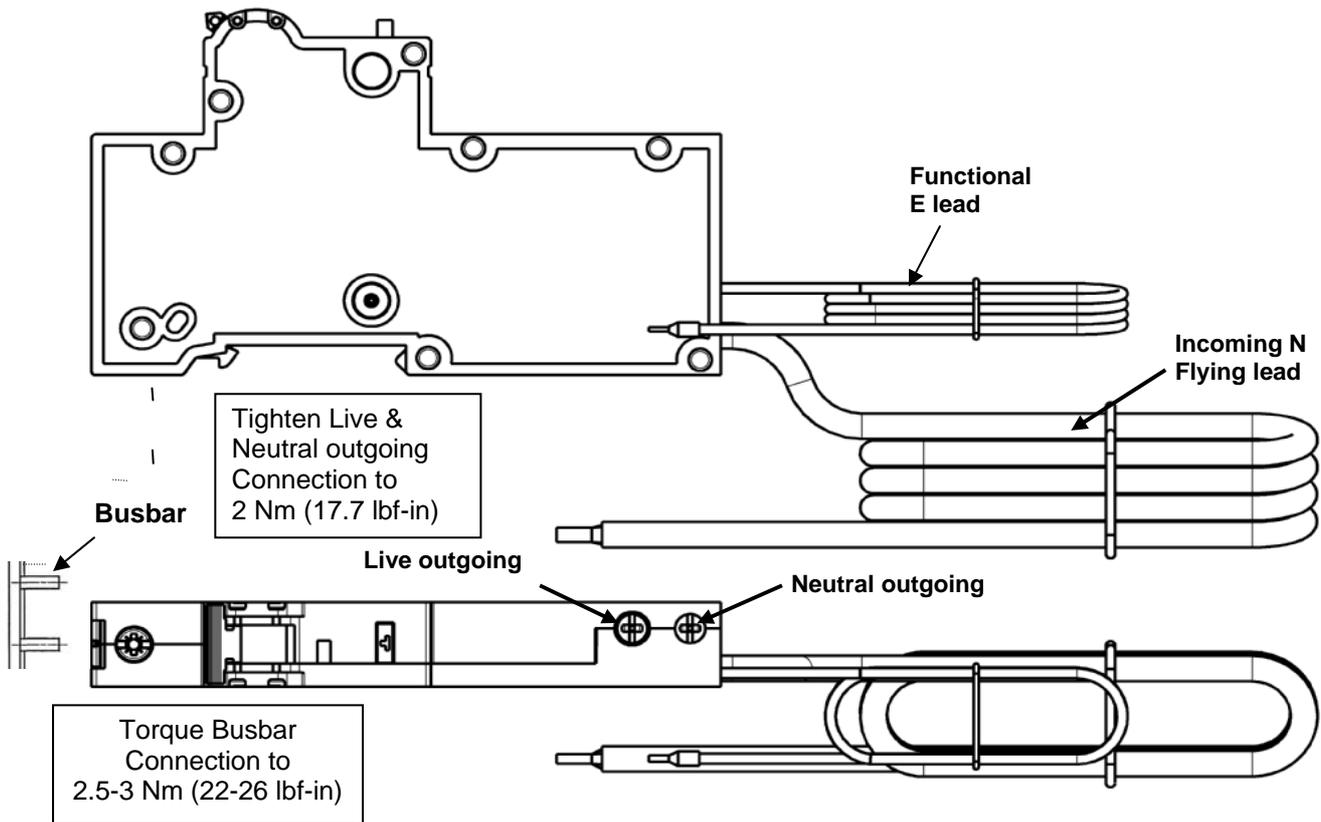

- 1) Fit to appropriate L busbar connection, using high level connection.
- 2) Route N flying lead to chosen N bar connection.
- 3) Route functional E flying lead to chosen E bar connection.
- 4) Connect L&N outgoing cables to top L and N terminals.
- 5) Check tightness of all connection and tighten to the required torque (see above)
- 6) DO NOT connect using power driven screwdrivers.
- 7) Test after installation. **(DO NOT INSULATION RESISTANCE TEST THIS RCBO)**

