




## Fitting Instructions for 17mm Groove Runners


1. On the inside of your cabinet, mark the location of the position for your groove runners - these should be level with the bottom of the drawer and should be positioned so that there will be 3mm gap between the drawers.



2. To mount the runner, insert the 3 of the supplied screws along the length, as per the diagram below.

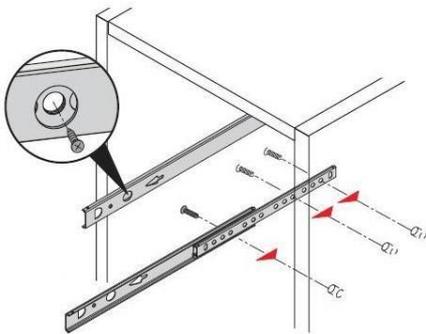

3. Select the other runner & repeat the same process on the other side of the cabinet.
4. Fully extend the runners. Locate the drawer between the 2 runners, with the runners within the grooves on the sides of the drawers.

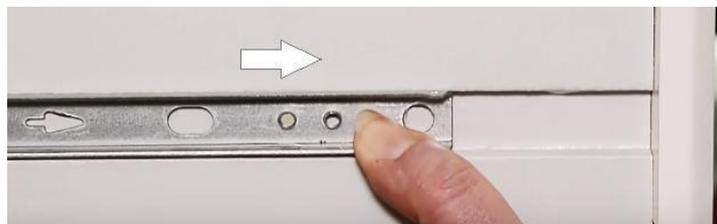



5. Secure the runner to the drawer from inside using the supplied M4 screws, through the holes within the drawers, as per the diagram below.

