



Fitting Instructions: Soft Close for Metal Drawer Systems

- The product has two assembly parts for their respective location:



White Metal Bracket – Drawer
Grey Plastic Soft Close Unit - Cabinet

The distance between the side of the drawer and the inside of the cabinet must be between 15- 16mm

- Check the size of your drawer runner to determine lengths L1 & L2 using the table below.

Runner Size	Distance L1	Distance L2
300mm	70mm	123.5mm
350mm	102mm	155.5mm
400mm	134mm	187.5mm
450mm	166mm	219.5mm
500mm	198mm	251.5mm
550mm	262mm	315.5mm

- On the inside of your cabinet, mark the location of the position of your soft close unit – as per the below diagram – L1 is the distance of the screw hole from cabinet front.

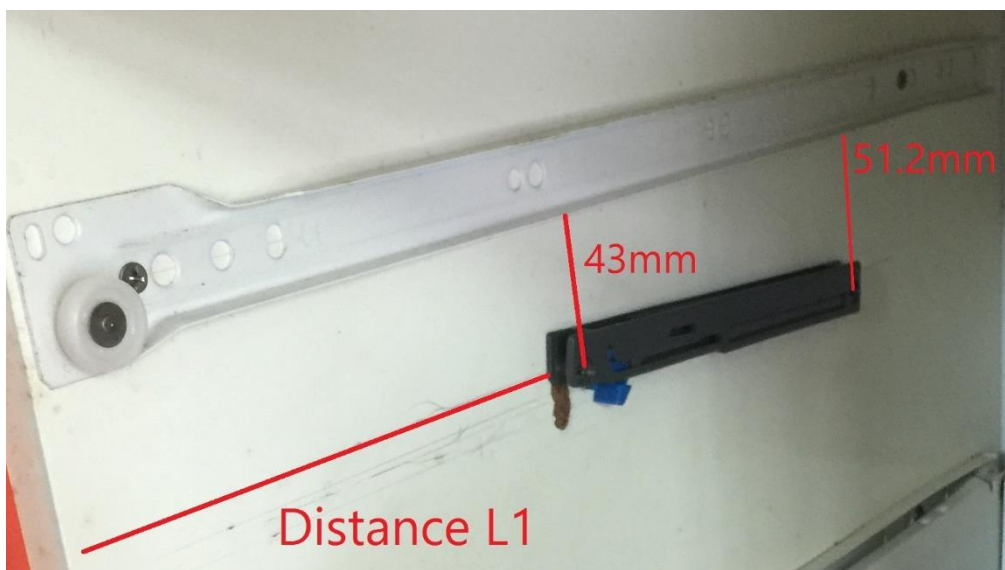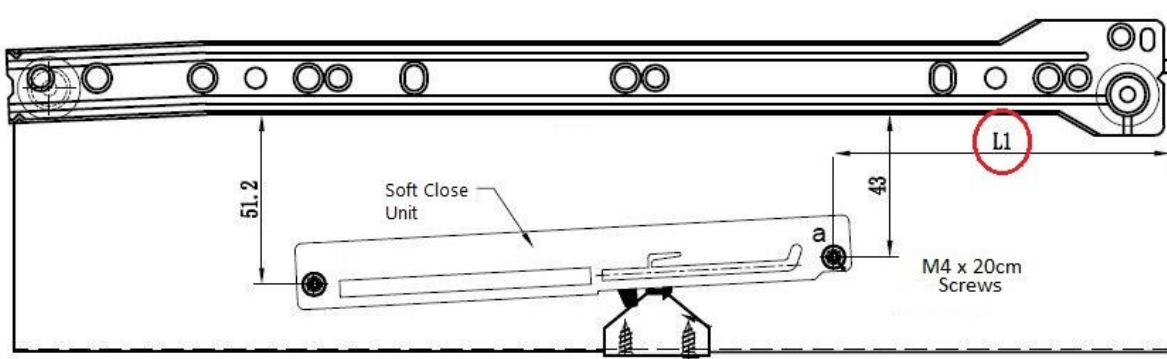



4. Once confirmed insert the given M4 screws in the two holes along the length of the soft close unit.



5. Install the metal bracket at the centre of 'L2' using the given screws - with the 90° bend wrapping around the bottom of the drawer.

