

---

## **Coving Fixing Instructions**

Please read all the fixing instructions carefully before commencing/ fixing.

The tools you will need:

- ◆ Mitre Block/Box
- ◆ Clean Damp Cloth
- ◆ Pencil
- ◆ Hammer
- ◆ Coving Adhesive
- ◆ Woodworking Saw
- ◆ Tape Measure

### **Preparation**

Ensure the ceiling and wall surfaces are clean, sound, flat, dry and free from grease and loose particles. New or bare surfaces should be primed.

### **Marking out**

Hold a length of coving in position and trace the bottom line underneath around the room in pencil.

**ALL MEASUREMENTS ARE TAKEN ALONG THIS LINE.**

### **Using the Mitre Block**

Place the moulding in the mitre block with the pattern upside down. Have the horizontal side of the mitre block nearest to you. Secure the cornice at right angles with the moveable stops.

Remember, the upright side of the mitre block represents the Wall and the flat side the ceiling!



THEN:

To mitre the LEFT SIDE of a corner, cut through:

- THE LEFT FOR INSIDE MITRE
- THE RIGHT FOR OUTSIDE MITRE

To mitre the RIGHT SIDE of a corner, cut through:

- THE RIGHT FOR INSIDE MITRE.
- THE LEFT FOR OUTSIDE MITRE.

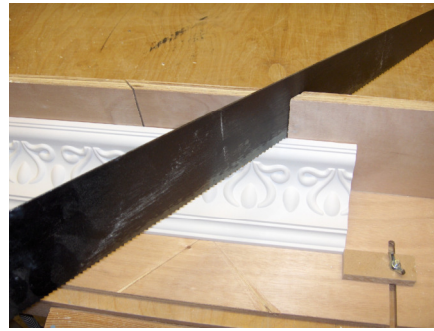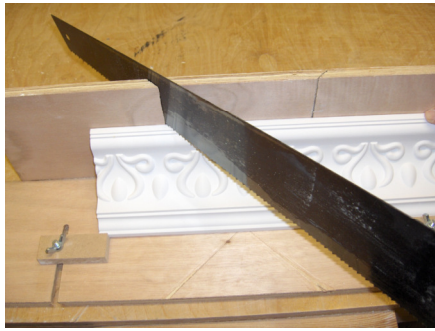

## **Fixing**

- Start in a corner of the room and work round.
- Be sure to apply plenty of adhesive at joints, ensuring a good bond is achieved.
- Push firmly into position.
- When the first corner is reached, measure back from this corner to a point in the pattern repeat.
- Equalise this distance to the same point on the pattern repeat for the adjoining length.
- Continue fixing lengths, mitring and cutting to size as required.

## **Finishing the job**

- Fill any gaps using adhesive or proprietary filler.
- Wipe off any surplus adhesive with a clean damp cloth.
- Check that no detail is clogged with adhesive or filler.
- The white finish of the product acts as an undercoat for most decorative paints.