



DESIGN
ELEMENTS

Coving Fixing Instructions

Please read all the fixing instructions carefully before commencing fixing.

The tools you will need:

- ◆ Mitre Block/Box
- ◆ Clean Damp Cloth
- ◆ Pencil
- ◆ Hammer
- ◆ Non Solvent Instant Grab Adhesive
- ◆ Woodworking Saw
- ◆ Tape Measure
- ◆ Panel Pins

We recommend that an adhesive suitable for Polymer products is used

Preparation

Products should be stored at normal room temperature for 24hrs before installation

Ensure the ceiling and wall surfaces are clean, sound, flat, dry and free from grease and loose particles. New or bare surfaces should be primed with a PVA sealer

Marking out

Hold a length of coving in position and trace the bottom line underneath around the room in pencil.

ALL MEASUREMENTS ARE TAKEN ALONG THIS LINE.

Using the Mitre Block

Place the moulding in the mitre block with the pattern upside down. Have the horizontal side of the mitre block nearest to you. Secure the cornice at right angles with the moveable stops.

Remember, the upright side of the mitre block represents the Wall and the flat side the ceiling!


THEN:

To mitre the LEFT SIDE of a corner, cut through:

- THE LEFT FOR INSIDE MITRE
- THE RIGHT FOR OUTSIDE MITRE

To mitre the RIGHT SIDE of a corner, cut through:

- THE RIGHT FOR INSIDE MITRE.
- THE LEFT FOR OUTSIDE MITRE.

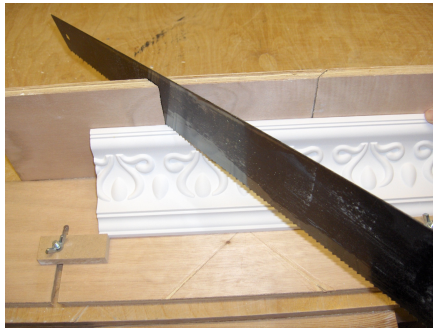

Fixing

Start in a corner of the room and work round.

Be sure to apply plenty of adhesive at joints, ensuring a good bond is achieved. **Use a true Polymer based adhesive for all joints.**

Rest the coving on the panel pins and push firmly into position.

Put panel pins vertically into the ceiling to hold the coving in position.

Put panel pins through the top and bottom edges of the coving at the end of each length. Punch into the face of the coving and fill over the heads.

When the first corner is reached, measure back from this corner to a point in the pattern repeat. Equalise this distance to the same point on the pattern repeat for the adjoining length.

Continue fixing lengths, mitring and cutting to size as required.

Finishing the job

Fill any gaps using adhesive or proprietary filler. Wipe off any surplus adhesive with a clean damp cloth.

Check that no detail is clogged with adhesive or filler.

The white finish of the product acts as an undercoat for most decorative paints.

IMPORTANT:

NMC UK Ltd cannot accept any responsibility for mouldings that have not been fixed in accordance with these instructions.

This does not affect your statutory rights.