






The Shower Tray Company

## Sonic Bath Panel Fitting Instructions

There are no fixings supplied with the panels. The instruction below shows a typical installation.

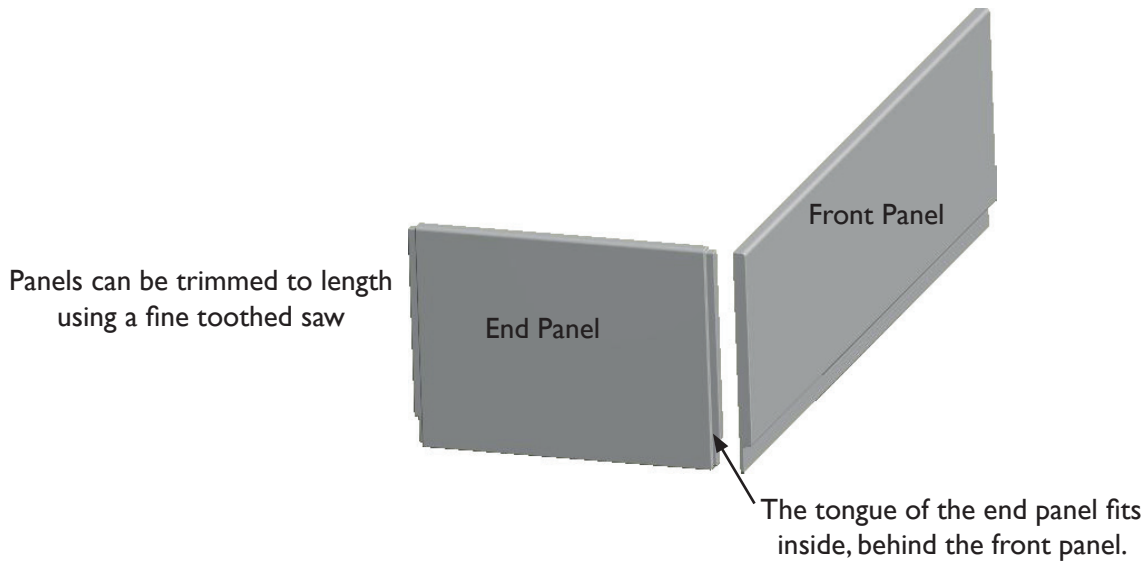


Install the bath according to the manufacturers' instructions.

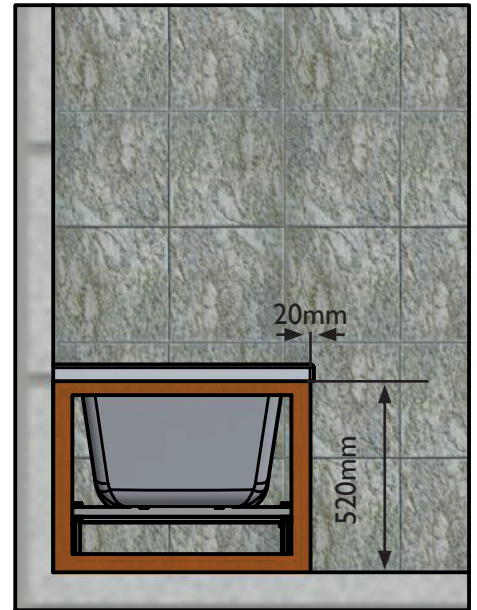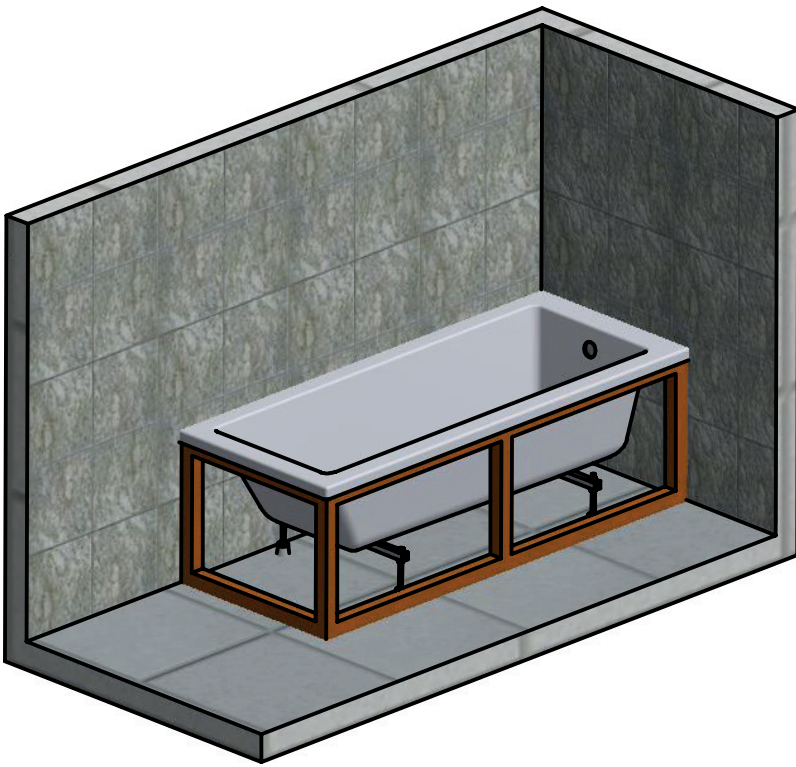

Set the bath height at 520mm from the floor to the underside of the bath rim.  
Build a support frame from 2" x 1" timber. The frame needs to be recessed in 20mm from both the front and end bath edges where the panels are to be fitted, as shown above.

**NB:** For a recessed bath, only the front panel needs to be framed.

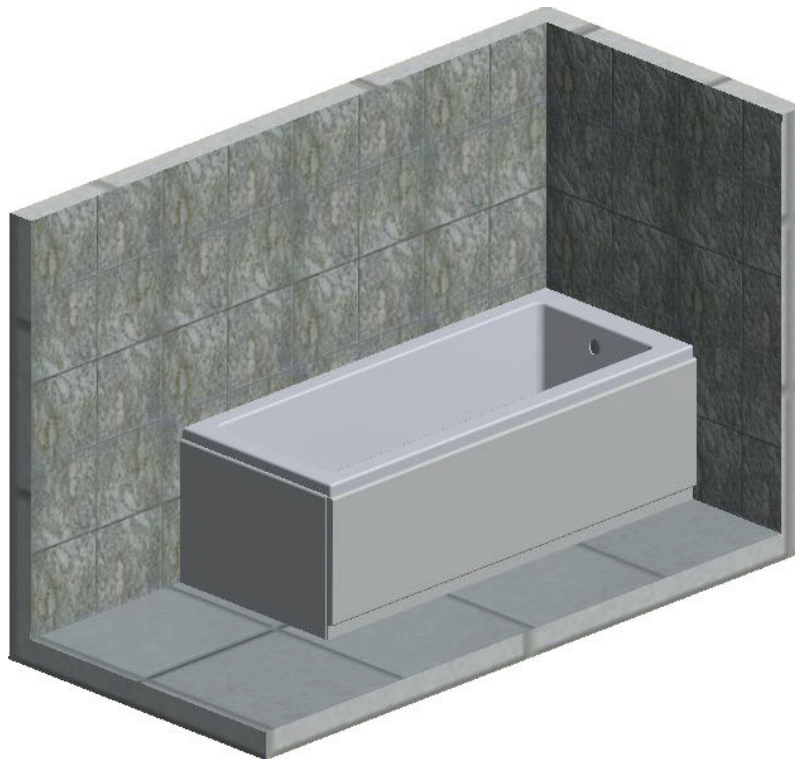

The bath panels can be trimmed to length and around skirting boards using a fine toothed saw.  
The bath panels can then be fixed into position by using either dabs of no nails cement or mirror screws.

Customer Services: 0330 808 5048