


OxBox™

Model Numbers OX05, OX1,
OX2, OX3, OX4, OX6

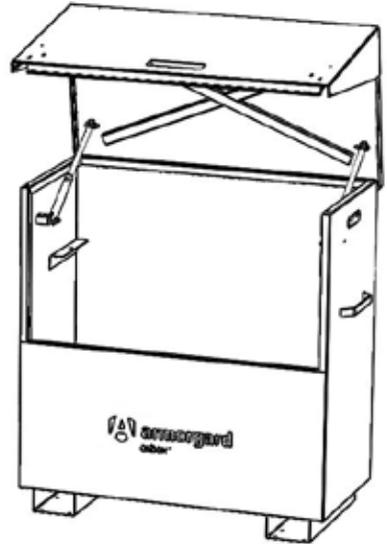

User manual for your
Armorgard OxBox

»» Welcome...

to your Armorgard OxBox, our entry level security boxes to help safeguard your tools, equipment, and livelihood. The OxBox comes ready to use, but please consult this manual for instructions on how to get the most from it.

**Please read this user manual carefully
prior to using the OxBox**

Contents

Welcome.....	2
Safety Information.....	3
Getting to know your OxBox.....	4
Installing in a vehicle or fixing to a floor.....	6
Fitting the optional Castor Kit.....	7
General Information	7

Please call 023 9238 0280 if you have any questions on your OxBox.




Safety Information


-  The OxBox range is too heavy to be safely lifted by one person. Carry out a risk assessment before lifting or lowering any OxBox to ensure there is no risk of injury.
-  Before using an OxBox, ensure any relevant risk assessments are carried out. Armorgard cannot be responsible for accidents that occur due to negligence.
-  When fitting an OxBox to a vehicle, our guidelines **MUST** be followed. An empty OxBox can more than triple its weight in an emergency stop, and could come loose if fitted insecurely or incorrectly.
-  If castor wheels are fitted, these must be installed according to our specification, and should be checked regularly to ensure they are still fit for purpose.
-  If a gas strut or lid stay becomes damaged, contact Armorgard or your reseller for a replacement.
-  Register your product on our website for additional support and for easy access to spare or replacement parts: www.armorgard.co.uk/product-registration

Getting to know your OxBox

Van box range: OX05, OX1, OX2 & OX6

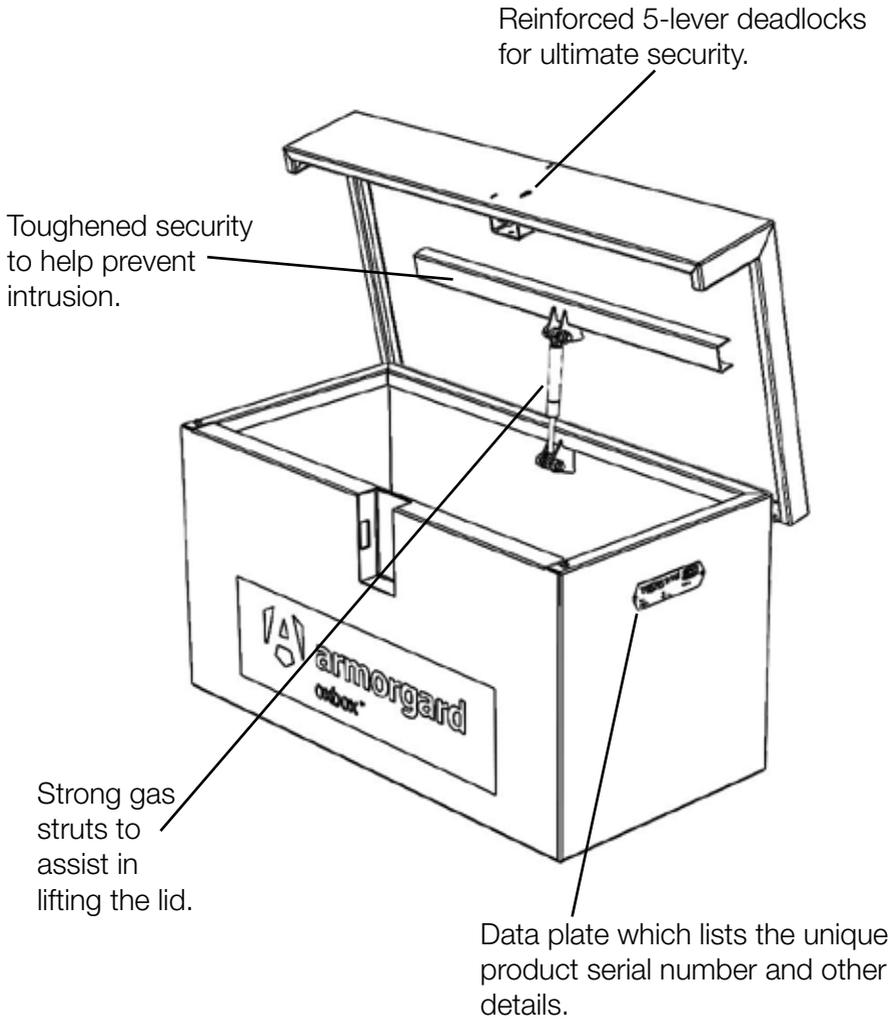


Site box range: OX3 & OX4

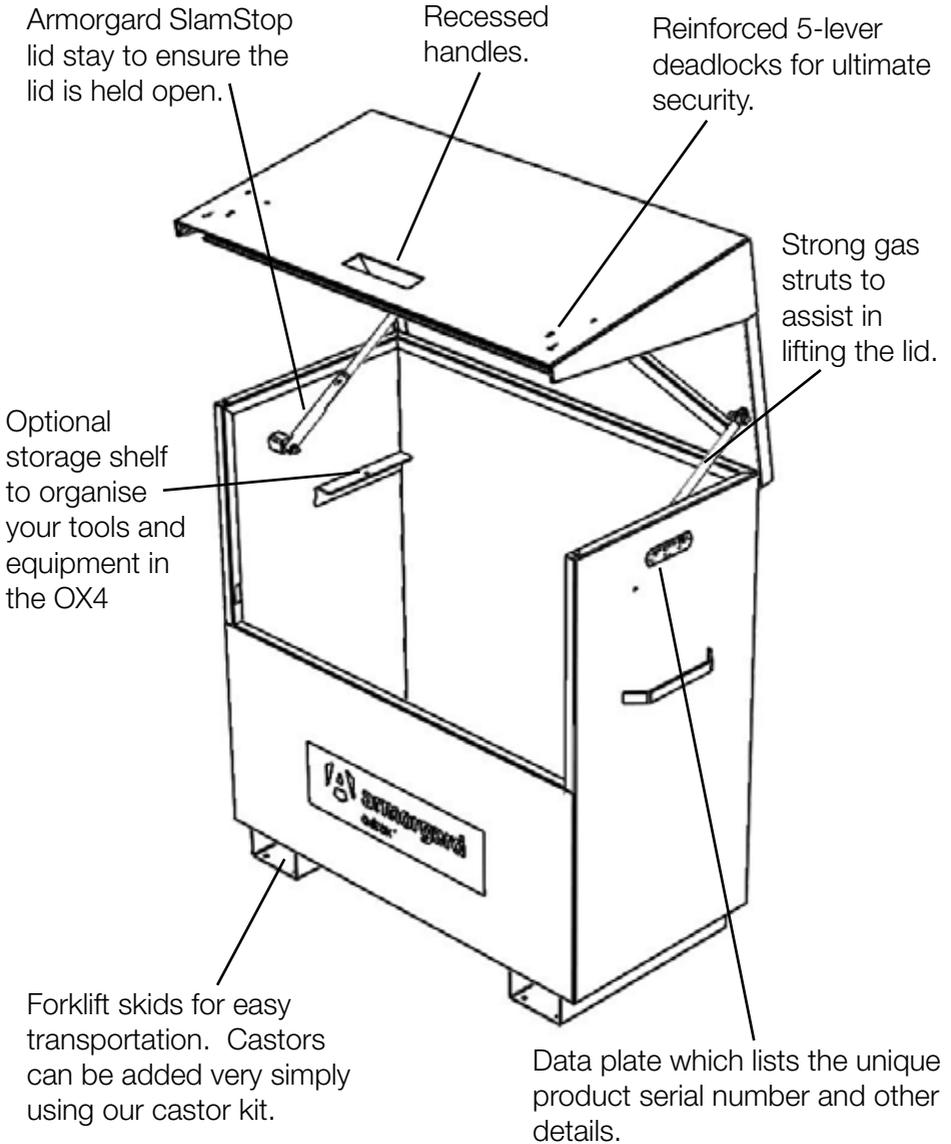


Installing in a vehicle or fixing to a floor




To install an OxBox in a vehicle, these instructions **MUST** be followed. The van boxes come with coach bolt holes predrilled in the floor of the box for fixing them down.

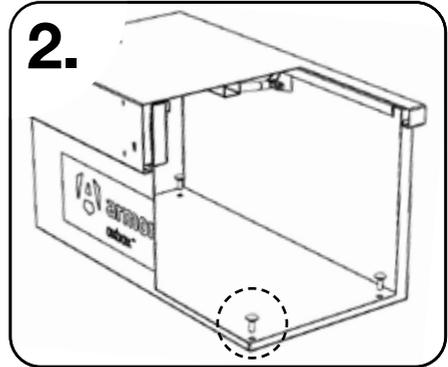

The OxBox should then be fixed down using four M10 bolts, washers, and shear nuts. The OxBox needs to have a bolt in each of it's four corners fixing it securely to the floor.

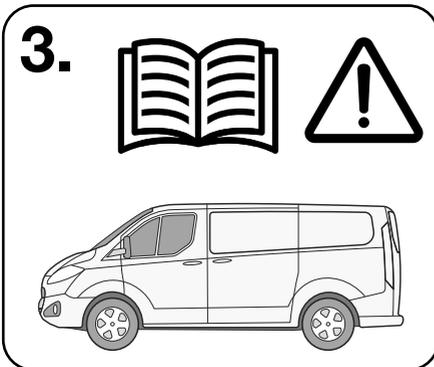


If you are installing the OxBox in a vehicle, you may need to adapt the vehicle. Armorgard can not be held liable for any damage to the vehicle. The vehicle manufacturer should always be consulted to ensure any proposed works will not damage the vehicle.

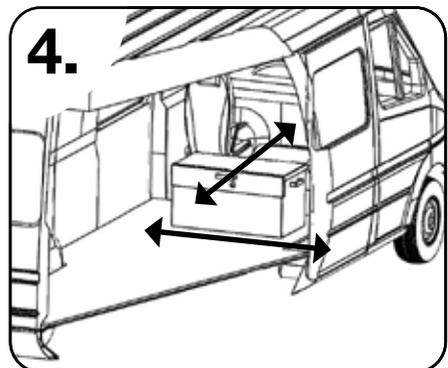


Once installed, test by pulling and pushing the box vigorously in various directions. Bear in mind that an empty box can more than triple its weight in the event of an emergency stop, so it is imperative to ensure it is firmly fixed down.

Fitting the optional Castor Kit

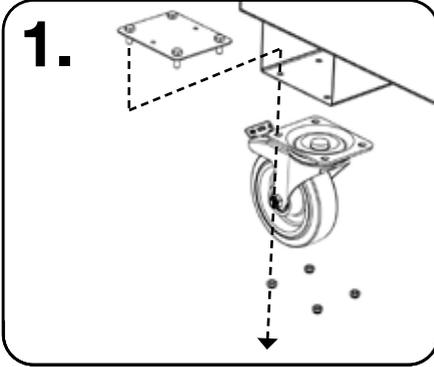

1. Only the OX3 and OX4 can be fitted with castors. Lift the box onto a stable platform, and then insert castor plates into the forklift skids. Put the castor wheel in place and use a 13mm socket to tighten the M8 nylocks.

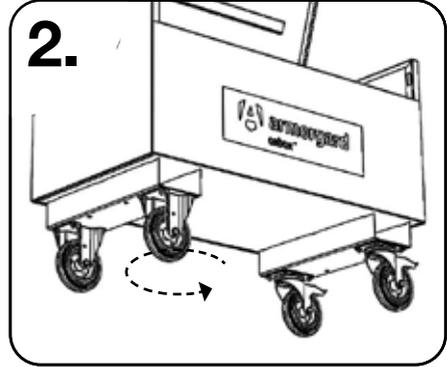

2. Repeat for the other 3 wheels. Once complete, check all nuts are tight, and then ensure the two braked castors can swivel 360° before lowering the OxBox.

» General Information

Lost Keys?


Replacement keys can be purchased from Armorgard, using the serial number on the product.

Spare Parts and Optional Extras

The following items are available to order separately:

- SlamStop safety stay
- Castor kit
- Gas strut
- Storage shelf (for OX4 only)

View our full range of products online at
www.armorgard.co.uk

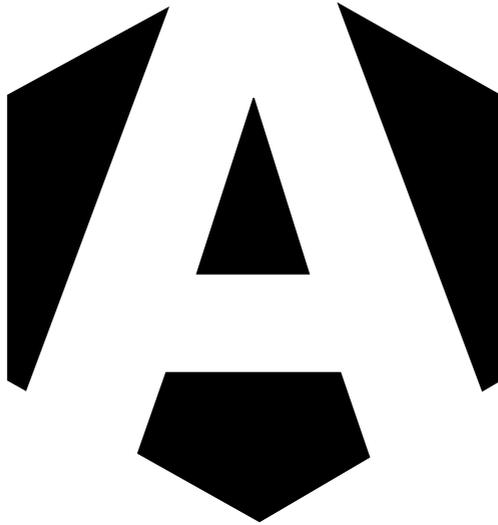

 **armorgard**
ticking every box.

Unit 14-16, Standard Way, Fareham Industrial Park, Fareham, Hampshire PO16 8XB
t: 023 9238 0280 e: sales@armorgard.co.uk w: www.armorgard.co.uk

