


Fitting Instructions

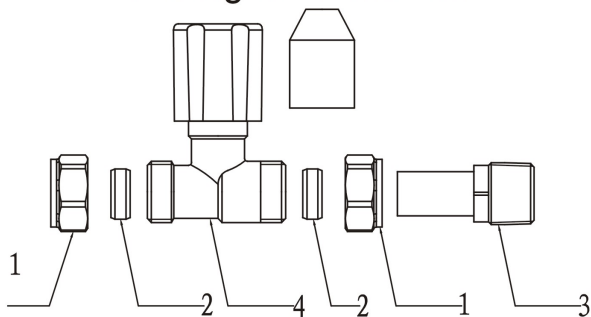

- 1.Hexagonal screw cap(1/2)
- 2.Olive
- 3.Valve tail
- 4.Valve body

- (1)Remove 1, 2, 3 from 4
- (2)Wrap approximately 10 turns of PTFE tape tightly around the male thread (R1/2) of the valve tail, and screw the thread into the radiator
- (3)Fit 2 into 1
- (4)Connect 1 to pipe(not supplied)
- (5)Insert 3 into 1, 2, and tightened them together with 4
- (6)Insert the pipe into 4 and tighten securely

43146带接管暖气阀

10x10cm