


10x10cm 43354 暖气阀组合

Fitting Instructions

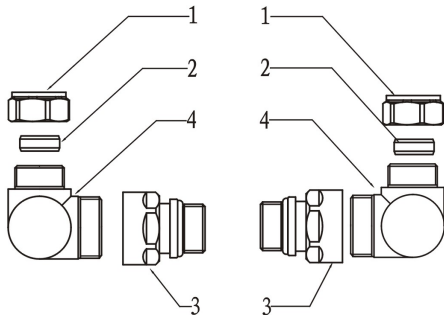

- 1.Hexagonal screw cap(1/2)
- 2.Olive
- 3.Hexagonal screw cap(3/4)
- 4.Valve/Lockshield body

- (1)Remove 3 from 4
- (2)Remove 1, 2 from 4
- (3)Wrap approximately 10 turns of PTFE tape tightly around the male thread (R1/2), and screw the thread into the radiator
- (4)Fit 2 into 1
- (5)Connect 1 to pipe(not supplied)
- (6)Screw 3 into 4
- (7)Insert the pipe into 4 and tighten securely

Remark: Install the valve to the inlet side of the radiator, and lockshield to the outlet side of the radiator.