
VG310-2 / VG311-2 2 Heavy duty aluminium roof bars - Ford Transit 2014 onwards



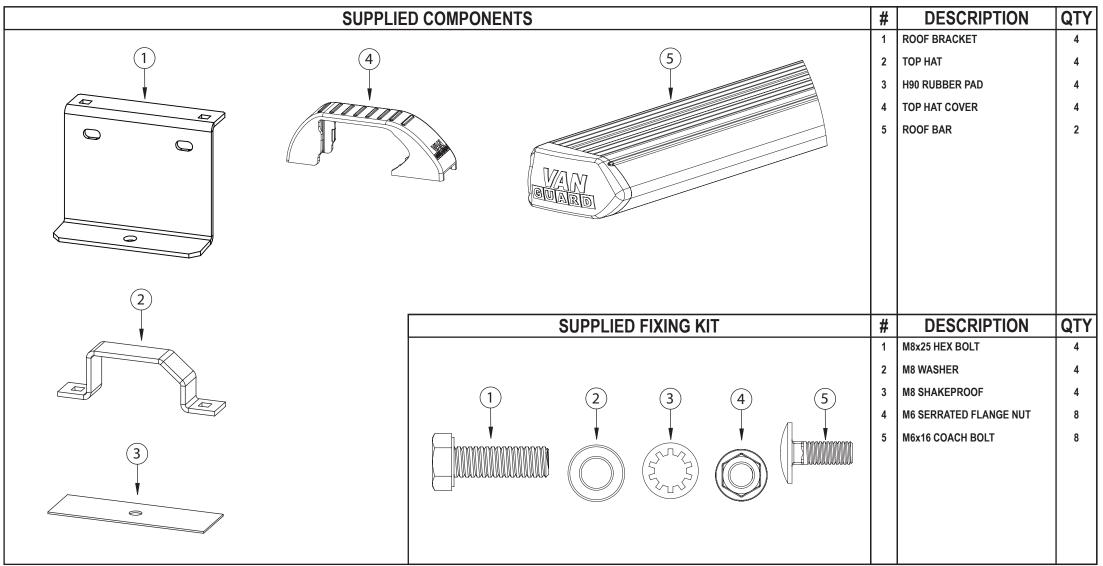


TOOLS REQUIRED: 10mm & 13mm SPANNER / RATCHET

This FITTING INSTRUCTION is the property of VAN GUARD ACCESSORIES LTD. and must not be used for manufacturing purposes, copied nor communicated in any way to third parties without written permission from VAN GUARD ACCESSORIES LTD. IN8115 A - IW - 07/07/2015

Van Guard Accessories Ltd Fair Oak Close, Exeter Airport Business Park, Exeter, Devon, EX5 2UL www.van-guard.co.uk

VG310-2 / VG311-2 - PAGE 1 OF 3

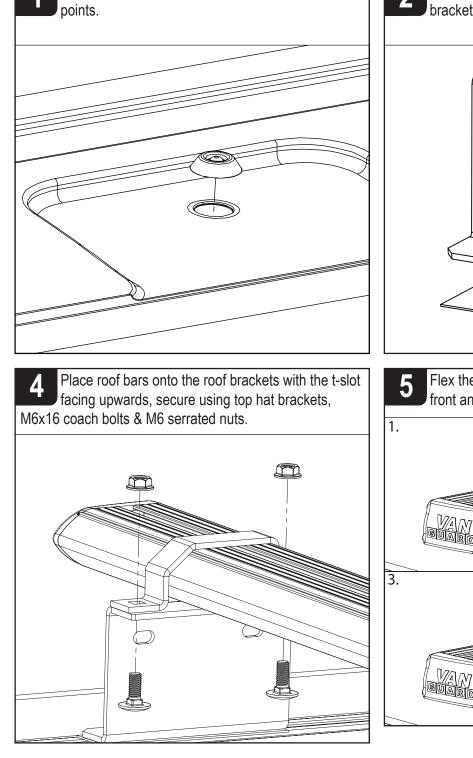



Remove roof plugs to reveal the vehicles fixing


Stick rubber pads to the underside of all roof brackets. 2


 \bigcirc

Secure roof brackets to the vehicles fixing points 3 using M8x25 hex bolts, M8 shakeproofs & M8 washers. Ensure that the top hat flange is facing inwards.

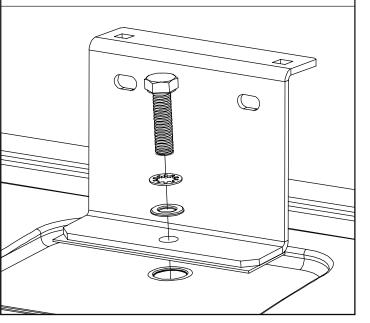

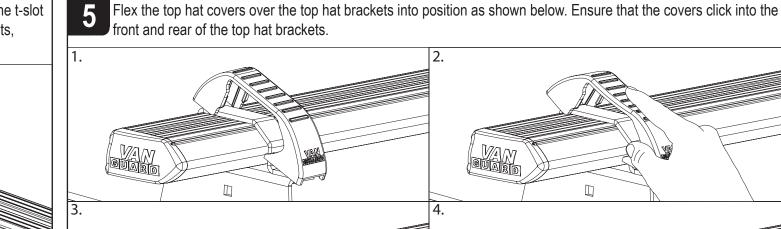

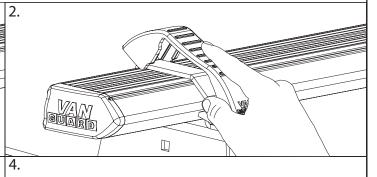

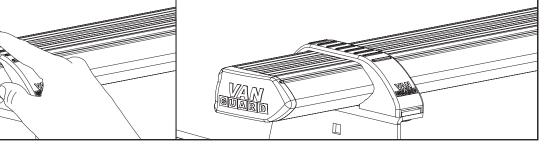

VG310-2 / VG311-2 - PAGE 2 OF 3

6 Once in position tighten all M6 fixings to 8Nm and all M8 fixings to 12Nm. Periodically check all fixings.



GUARD

NOTES:

Maximum load is 55kg per bar. Please check that the vehicle manufacturers load bearing capacity for the roof is not exceeded. (Refer to the vehicle handbook) Periodically check all fixings. Retain these instructions for future reference.