
Fitting Instructions - Read instructions carefully before fitting and follow them for correct use

VG284-2 2 Heavy duty aluminium roof bars - Fiat Doblo 2010 on / Vauxhall Combo 2012 on

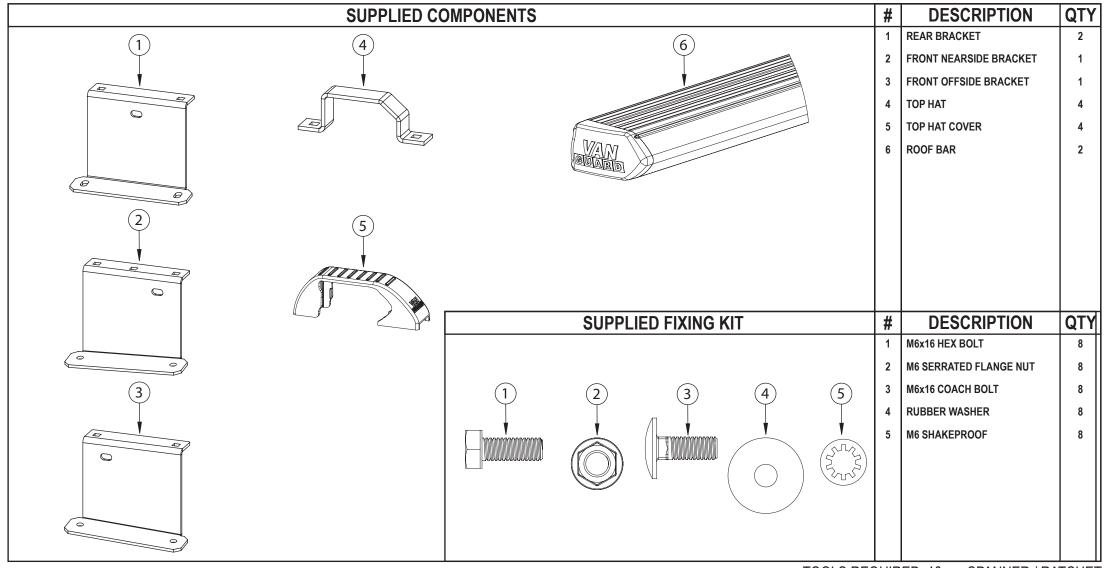






TOOLS REQUIRED: 10mm SPANNER / RATCHET

This FITTING INSTRUCTION is the property of VAN GUARD ACCESSORIES LTD. and must not be used for manufacturing purposes, copied nor communicated in any way to third parties without written permission from VAN GUARD ACCESSORIES LTD. IN8097 A - IW - 03/05/2013


Van Guard Accessories Ltd Fair Oak Close, Exeter Airport Business Park, Exeter, Devon, EX5 2UL www.van-guard.co.uk



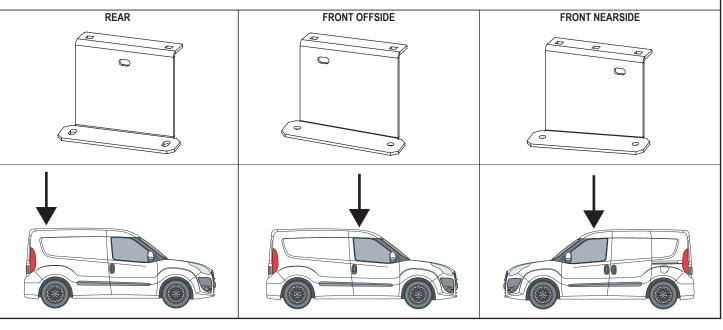


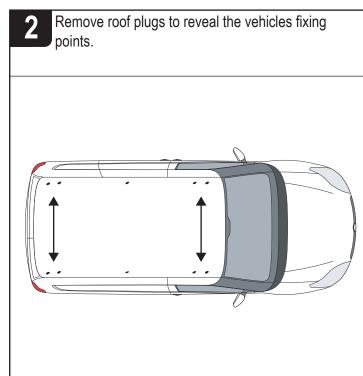


Secure roof brackets to the vehicles fixing points using M6x16 hex bolts, M6 shakeproofs & rubber washers. Ensure that the top hat flange is facing inwards.

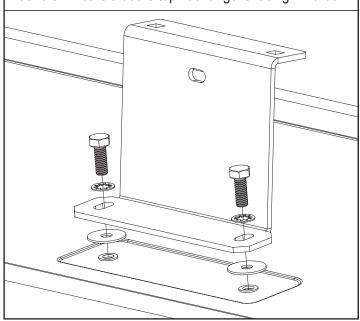

Place roof bars onto the roof brackets with the t-slot facing upwards, secure using top hat brackets, M6x16 coach bolts & M6 serrated nuts.

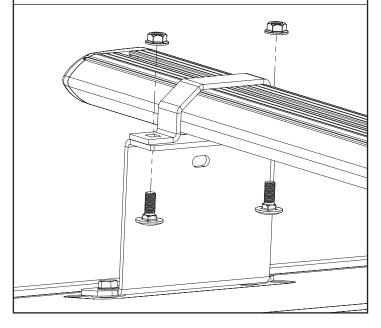



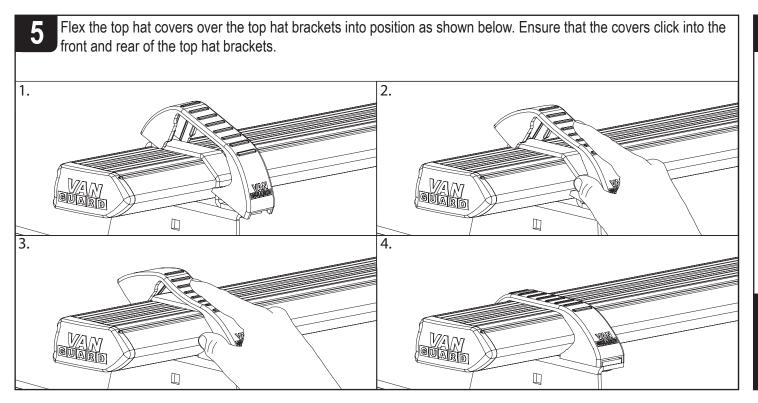

Once in position tighten all fixings to 8Nm. Periodically check all fixings.



TIGHTEN TO 8Nm

NOTES:

Maximum load is 55kg per bar. Please check that the vehicle manufacturers load bearing capacity for the roof is not exceeded. (Refer to the vehicle handbook)

Periodically check all fixings.

Retain these instructions for future reference.

SUARD GUARD