



## Locking Window Stay - Fitting Instructions

Note: Please choose to install the stay on 'Right-hand side' or 'Left-hand side' of the window before following the instructions.

1. Mark the location of the **Pin** on the bottom window frame. The centre of the left screw hole must be at 126mm from left window frame and 13mm from the edge of the bottom window frame.
2. Drill the hole using 3mm drill bit and install the pin.



**Pin**

For right hand, install the pin at 126mm from right window frame using right screw hole of the pin.

3. Mark the location of the **Fixing Bracket** on the window sash. The centre of the right screw hole of bracket must be at 25mm from centre of left screw hole of the Pin. The height of the screw hole must be 13mm from the bottom window frame.
4. Ensure the stay rests well on the clip without any movement. Install the brackets.



**Fixing Bracket**


5. Mark the location of the **Locking Clip** on the window sash. The centre of the left screw hole of Clip must be at 130mm from centre of right screw hole of Fixing Bracket. The height of the screw hole must be 14mm from the bottom window frame.
6. Drill the holes using 3mm bit and install the clip.



**Locking Clip**

7. To Lock the Window: Grip the end of Stay and press down on the Clip. Turn the Key home fully until it will not turn anymore and remove key. Do not leave the key in the lock.

**Below: Left-hand side installation template for reference only.**

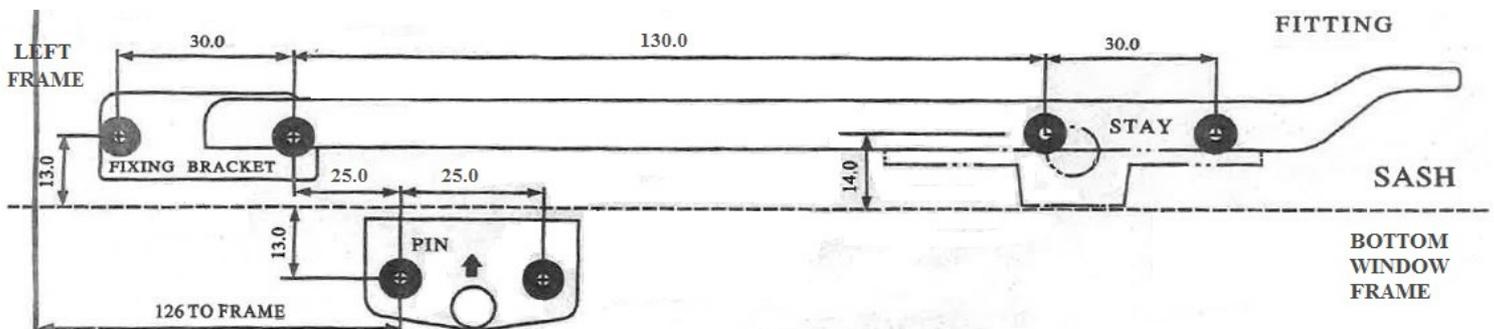

\*Stay and Fixing bracket are 'Front-Side View' and the Pin is 'Top View'.

\*\* All dimensions are in millimetre (mm).