



MAYPOLE MP68154 ABS TRAILER COVER FITTING INSTRUCTIONS

THE ASSISTANCE OF A SECOND PERSON IS RECOMMENDED FOR SOME OPERATIONS

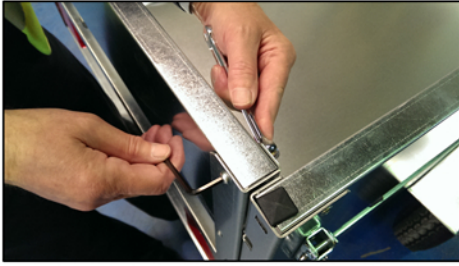



1) Remove the Hex bolts found at the top of the front panel corner posts (2x M8) and rear panel (2x M6) near to the sides, and replace with the corresponding supplied cap-head screws using a hexagonal key and the original nyloc nuts.

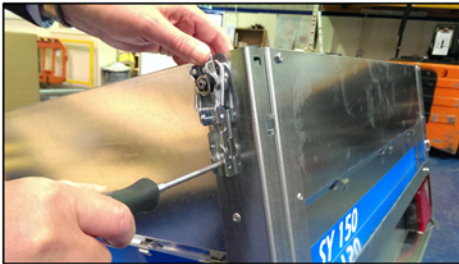

2) Fit the overcentre catches to the sides of the trailer at the rear, using the two lower holes of the groups of three in the trailer corner posts, using the supplied countersunk screws and M5 locking nuts. Fully tighten the nuts with a spanner.



3) Fit the 2x hinge assemblies to the front panel of the trailer. Ensure that the small pieces of channel-section are inserted under the lip, and the right-angled brackets sit between the lip and each hinge on the outside, as shown.

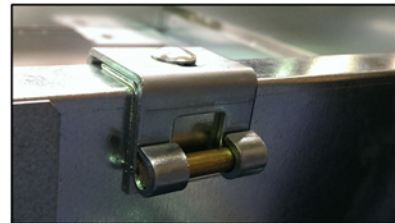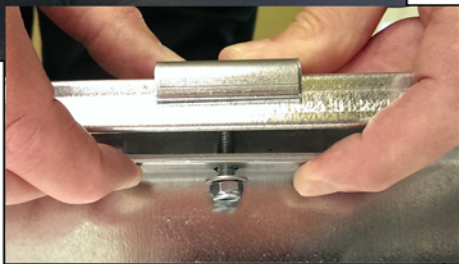


Use 1x M6 washer with each M6 nyloc and M6 x 40mm coach bolt, as shown.

ATTENTION! Do not over-tighten fixings.




4) Feed one of two supplied M8 x 45mm Hex bolts through the eye at the top of the gas chamber section of the supporting strut. Thread the 2x M8 plain nuts on to the bolt, locking the pair off to leave a small amount of play between the strut and the adjacent fixings.

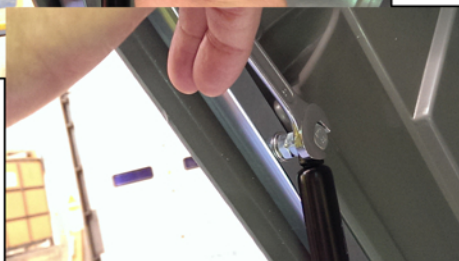

Using the M8 shakeproof washer, thread and tighten the bolt into the captive nut found in the left hand (nearside) supporting frame of the ABS cover.

MAYPOLE MP68154 ABS TRAILER COVER FITTING INSTRUCTIONS

THE ASSISTANCE OF A SECOND PERSON IS RECOMMENDED FOR SOME OPERATIONS

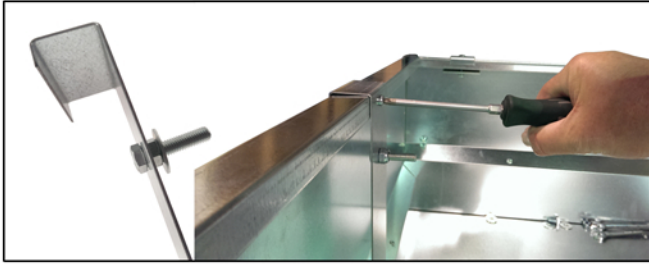


5) Pass one of the two supplied M8 x 45mm Hex bolts through the long angled bracket as shown. Thread on and fully tighten one plain M8 nut, and one washer, also as shown. Place the bracket on to the nearside panel of the trailer, insert and tighten the M5 x 10mm button head screw

ATTENTION! Do not over-tighten screw.



6) Affix the bottom part of the bracket to the side panel of the trailer by means of the supplied M8 x 15mm Hex bolt and M8 nyloc, also using the supplied 2x M8 x 22mm washers.

ATTENTION! Two person operation.

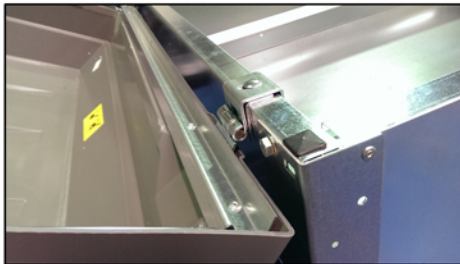


7) With the assistance of a second person, lift the ABS cover into position for engaging the hinges. Once engaged, lever the cover over and support in an elevated position.

ATTENTION! Two person operation.



8) With the assistance of another person holding the cover in an elevated position, locate the eye on the lower arm of the gas strut on the bolt presented by the bracket on the side panel. Pass on a matching washer, and fix in place using one M8 nyloc, leaving some play between the strut eye and adjacent fixings. Thread on the black plastic ball.

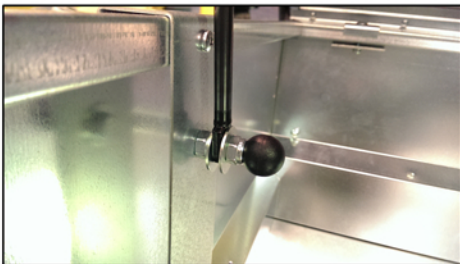

Ensure all fixings are secure, and all persons are clear before releasing the ABS cover.



Check safe and clear operation of the cover. Lock the cover in the closed position using the overcentre catches, and supplied keys.

Check fixings and locks periodically, and before every journey.