



MP68157 400mm high side mesh kit for MP6815 trailer - Installation instructions.

Package content:

2 x side panel


2 x front/rear panel

Fixing kit, containing



M6x20 set screw x 10

M6 oversize washer
(20mm \varnothing) x 24

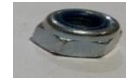

M6 nyloc nut x 10



M6 oversize washer
(30mm \varnothing) x 12

Note: Not all fixings may be required for assembly. Additional quantities are supplied as spares.

1. Commence assembly by locating the side panels onto trailer as shown.



Side panel viewed
from right hand side



Side panel viewed from
left hand side

2. The side panels are secured at two fixing points in each corner, as circled.



Location of fixing as viewed
from side of trailer



Location of fixing as viewed
from front/rear of trailer

3. Secure the side panels at the eight fixing points using the M6 screws and nyloc nuts provided. Ensure an oversize washer is used both internally and externally at each fixing point. In some instances the placement of additional oversize washers may be required in between the trailer and mesh kit to accommodate manufacturing tolerances. It is important that gaps are filled with washers to allow fixings to be fully tightened without distorting the trailer or mesh kit.



Fixing as viewed from
side of trailer



Fixing as viewed from
front/rear of trailer



Additional washer
between body and
mesh kit (if required)

4. Install front and rear panels and secure using the antiluce at each corner:



Antiluce x 4 (one per corner)

Note: Never use the trailer with the mesh kit partially fitted or assembled. Ensure all fixings are secure prior to first use and regularly inspected thereafter.