Installation guide Alex ONE 1140x500mm - E8




Please read the instructions in full before starting to fit your radiator.

• Please check that all parts listed are present before starting installation.

- Valves are not provided, please make sure that you have them before you start. This product requires standard 1/2" radiator valves.
- Before drilling holes for the brackets please check that there are no hidden wires or pipes.
- The plugs supplied are for hard walls masonry only. Please make sure you are using the correct plug for your wall.
- Terma radiators are designed for closed heating systems.
- The radiator should be fitted at least 100 mm from the floor to maximise heat efficiency.
- Noting the distances between bracket centres, mark out the position of the brackets on the wall.
- Drill holes to approximately 80 mm depth using a 10 mm drill bit and insert rawl plugs (1). Using connecting screw with a washer (2) attach mounting bracket-1 (3).
- Guide radiator brackets into mounting brackets 1(3) and fix with connecting screws (4)
- Connect the water flow using appropriate 1/2" BSP valves. Follow valves manufacture guidelines for correct installation.
- Fill the radiator and purge any trapped air via the bleed valve at the top of the radiator.
- Wipe your radiator down using a clean damp cloth. Never use scourers or abrasives.

For all installation and warranty enquiries please contact Crimson Bear Customer Support on 01535 636256

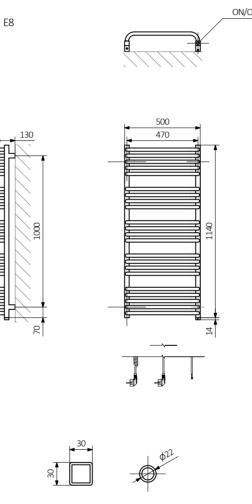


mnnn

UUUU

UUUU UUUU

DUDD


Fixing kit content

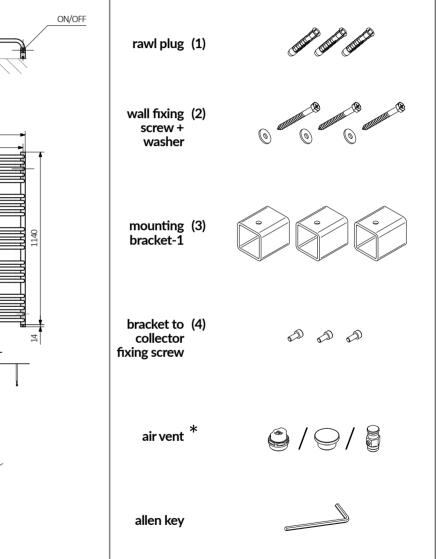

*Refers to water and dual fuel version

Mounting bracket TERMA P4, P/S, 40 mm, 3x



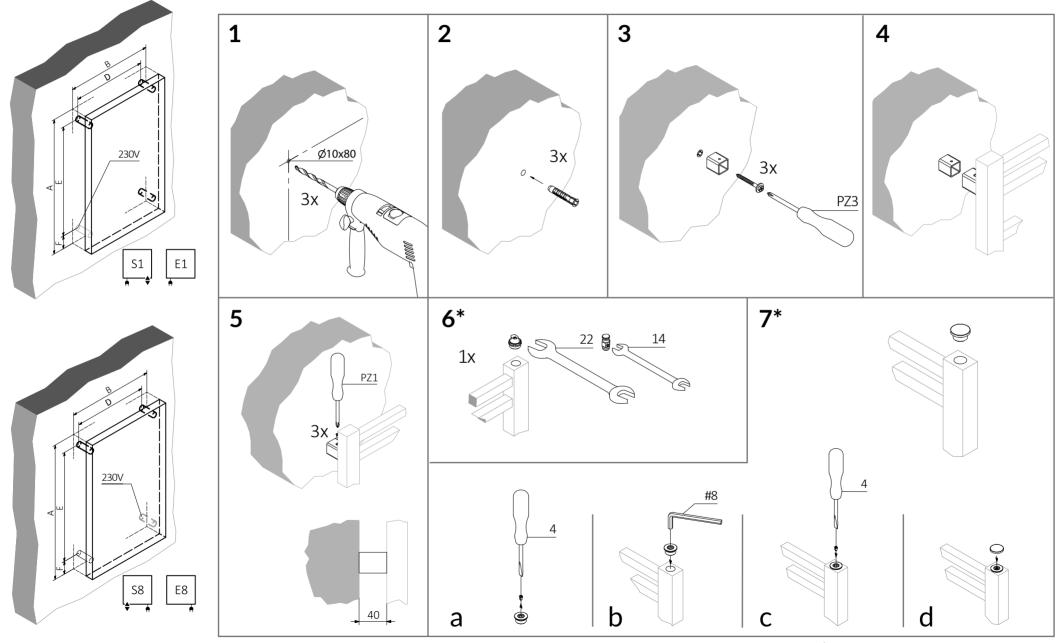

gigieltom20170817

 $\ensuremath{^*}\xspace{\mathsf{Refers}}$ to water and dual fuel version only